


NOTES.

1. Remove cement render from dormers and install lime render finish to gables and cheeks together with replacement Code4/5 lead aprons, abutment flashings and Code 3 lead soakers.  
Remove leaded glass to central dormer left-hand side casement window and install new glass with leaded came to match existing pattern.  
Where necessary cut out any rotten timber to the window frames and sills and fit sections of seasoned treated timber.  
Joinery to dormer windows to be rubbed down primed where necessary and repainted with undercoat and white gloss finish.

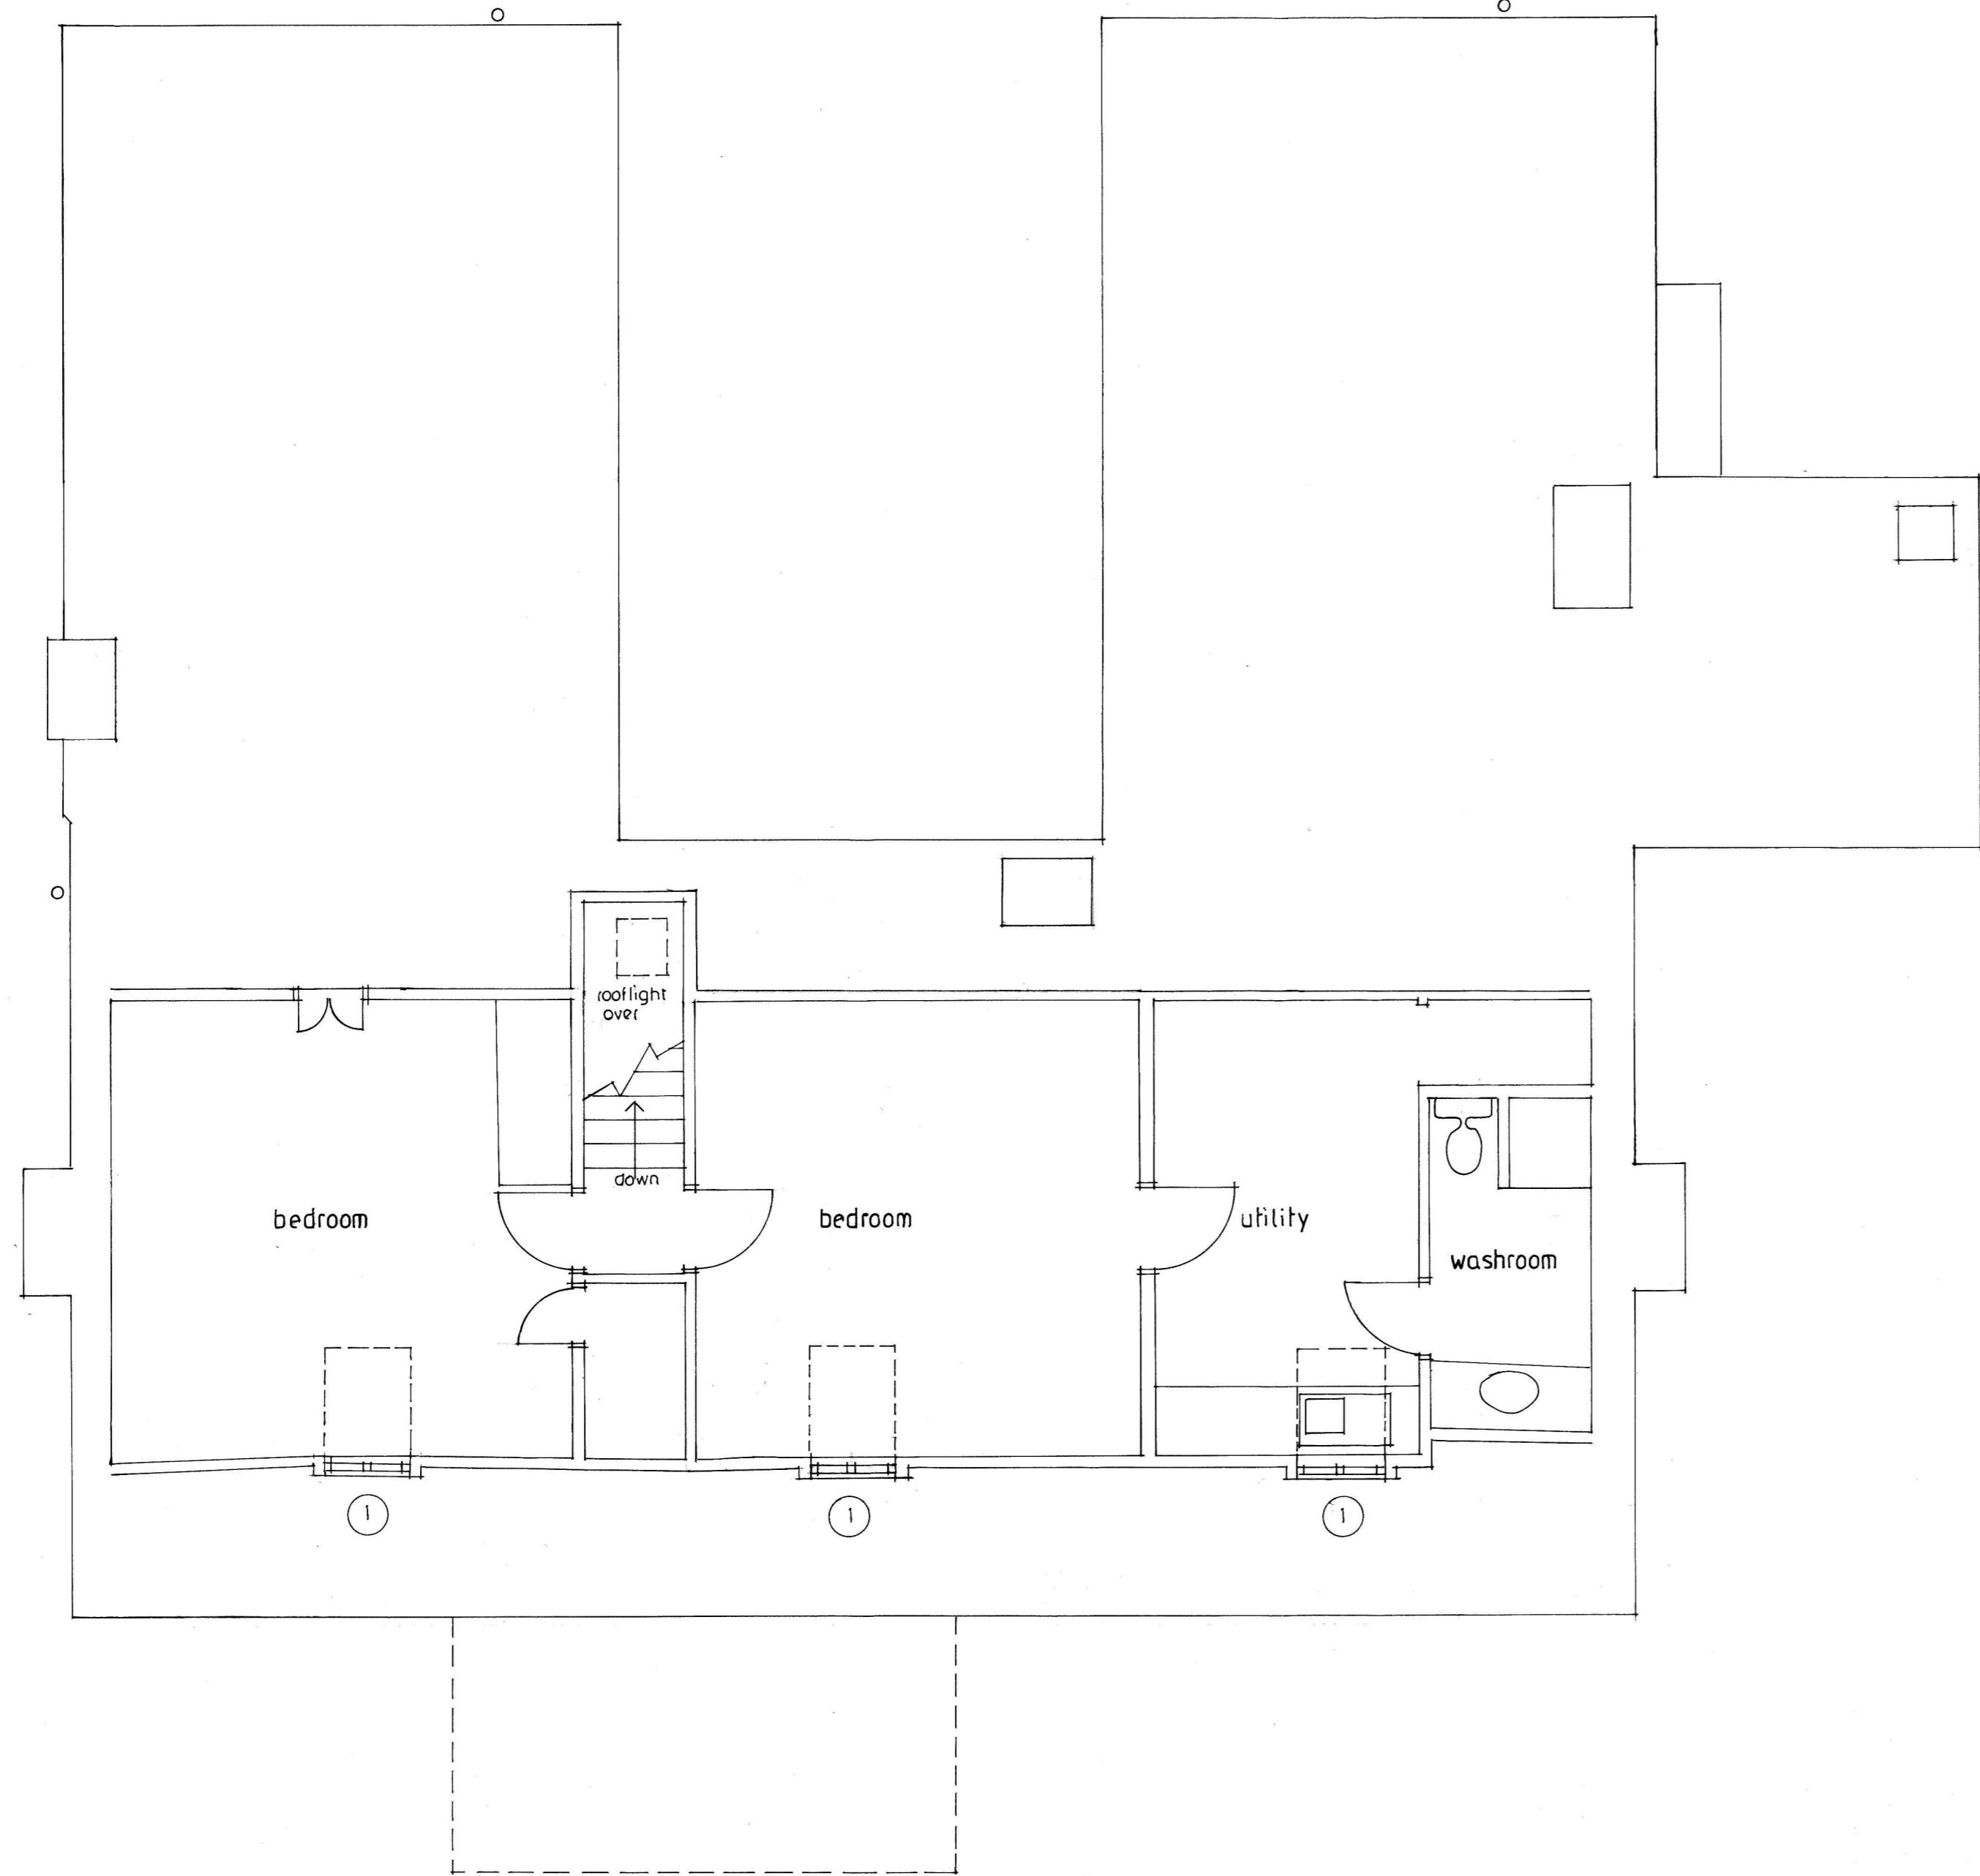

SECOND FLOOR PLAN

ORCHARD ASSOCIATES  
32 WHITEHALL ROAD  
HARROW ON THE HILL  
MIDDLESEX  
020 8423 4866

client  
MR M. DAVEY

OLD WORKHOUSE  
BREAKSPEAR ROAD NORTH  
HAREFIELD  
MIDDLESEX

PROPOSED PLAN

1:50 at A1  
Feb 2024  
John Orchard

634	4
-----	---

0 5 10 meters  
1:50