


## APPENDIX 1.

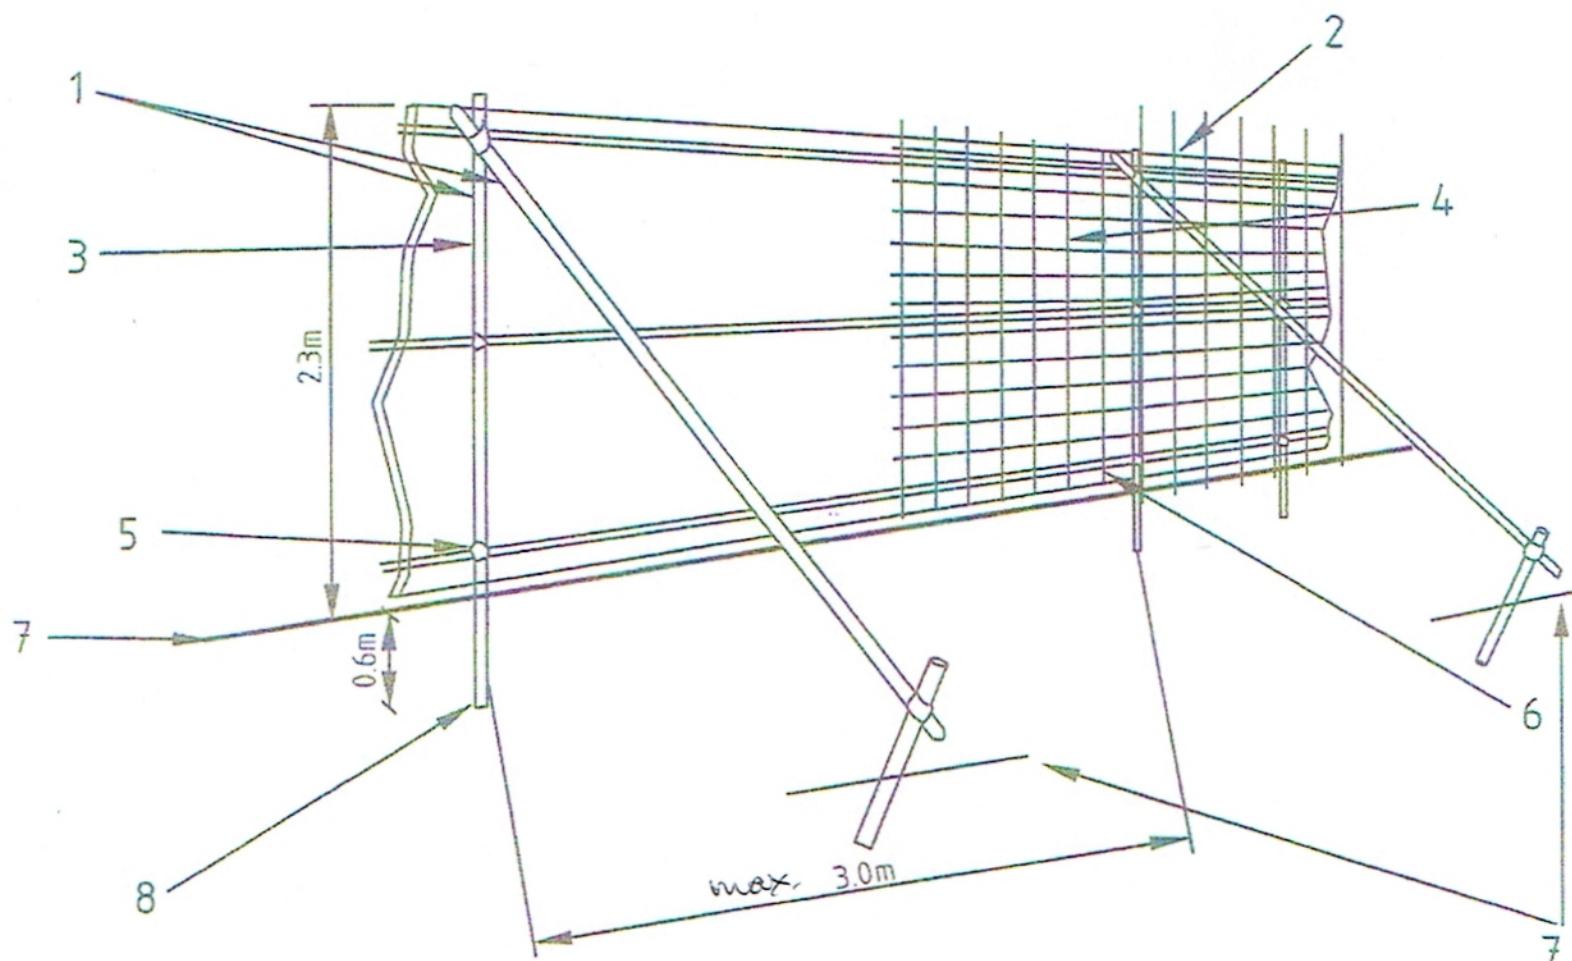

- 1 Standard scaffold poles
- 2 Uprights to be driven into the ground
- 3 Panels secured to uprights with wire ties and, where necessary, standard scaffold clamps
- 4 Weldmesh wired to the uprights and horizontals

- 5 Standard clamps
- 6 Wire twisted and secured on inside face of fencing to avoid easy dismantling
- 7 Ground level
- 8 Approx. 0.6m driven into the ground - Note, when placed onto existing pathway, proprietary heavy rubber blocks + tie-backs to existing fence posts to ensure robustness.

### Example Protective Barrier: BS5837:2012

Heras protective fencing proposed at 11 Greenheys, Close, Northwood, HA6 2 LW.

September '23

drawing 61A