

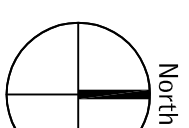


This drawing is subject to copyright.
Do not scale from this drawing.

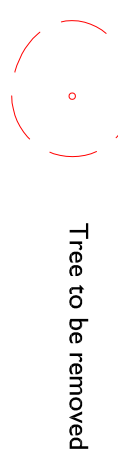

Based on drawing by BDP
Drawing number ARCH_BDP-16-00-SK-A-0001_201016

LEGEND

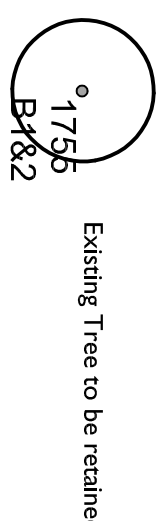

Indicative area of canopy or RPA within area of construction operations (ref: landmark, Trees report, RPA_UX-TC_TC_01a). No-dig construction method in accordance with BS5837:2012 in RPAs. No damage to be caused to canopies by movement of equipment etc where canopies overhang roadways and areas of handdraining. Contractor to provide Method Statement.

Rev	Description	Date	Drawn	Checked
-----	-------------	------	-------	---------

PLANNING

Allen Pyke Associates

Landscape architecture Urban design Environmental planning

The Factory, 2 Acre Road
Kingston upon Thames,
Surrey

T 020 8549 3434 F 020 8547 1075

KINGSTON UPON THAMES • CAMBRIDGE

A registered practice of the Landscape Institute

VSM Estates Ltd
1:250@

Project
St Andrew's Park
Town Centre West
BB/LB

Tree Protection Plan

Drawing Number	Revision
2683-TS-01	-




Reproduced from the Original Survey Page
with the permission of the Controller of Her
Majesty's Stationery Office © Crown Copyright
Allen Pyle Associates Ltd
Licence No. AL 1993237

Protective measures

1. Prior to the commencement of any work whatsoever, or any materials being

- biocut on site, existing trees and vegetation to be retained are to be protected from damage by felling similar to that shown. This shall be maintained in good and effective condition and the work is completed.
2. The following measures are to be agreed with the landscape architect or arboriculturalist:
 - 3.1. The following measures are particularly important:
 - 3.2. Materials are never to be stacked within the root spread of the tree.
 - 3.3. Nail, nail, nail, cement or other material is not to be allowed to contaminate the ground beneath the root spread of the tree.
 - 3.4. No fires shall be lit beneath or in close proximity to the canopy.
 - 3.5. For trees to be retained, roots or other trees or arboriculturists for equipment used for removing, stumps, roots or other uses or for other purposes.
 - 3.6. No road blocks, telephone cables, or other services should be attached to trees.
 - 3.7. Current mowing should not be carried out within the canopy/protected area of the tree.
 - 3.8. Soil levels are to be maintained as existing within the root spread of the tree. Any alteration to soil levels in a area up to one and a half times the diameter of the tree canopy must be agreed with the landscape architect/arboriculturalist.
 - 3.9. Erection of fencing is to be carried out in accordance with BS 5837:2012.
4. Any unavoidable and essential excavation within the fenced areas should be undertaken by hand.
- 4.1. Within any hand excavation all roots are to be neatly cut back to the nearest stump and the excavation filled with a suitable material to prevent the minimises wound area and drying out.
- 4.2. Hand excavations should comply with the recommendations contained within section 7.2 "Principles for Avoiding Tree Root Damage during Construction" of BS5837:2012 "Trees in Relation to Construction - Recommendations".
- 4.3. Protective fencing should remain installed around the unaffected portions of the EPA during such works and until the completion of construction.

PICAL DETAIL OF PROTECTIVE FENCING (Not to scale)

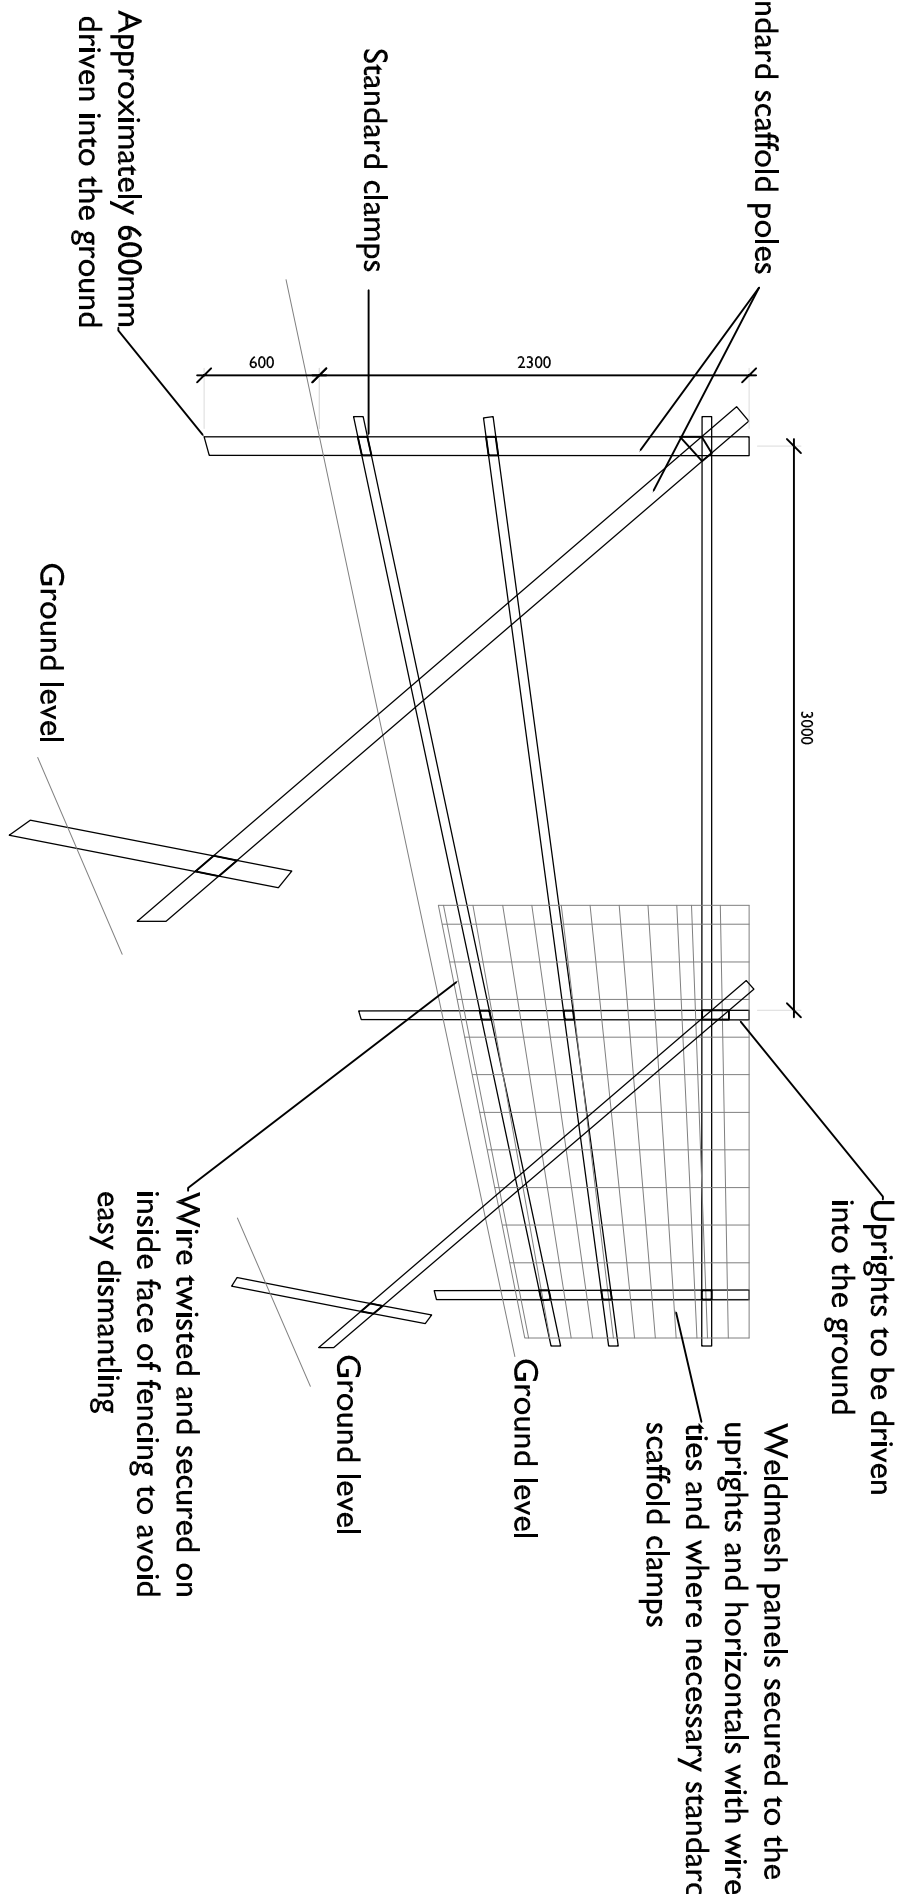

KEY PLAN

