

SAMSUNG

VRF

# Technical Data Book

DVM S2 for Baltics  
(R410A, 50Hz, HR)



Model : AM\*\*\*AXVGGR/EU

# History

---

Version	Modification	Date	Remark
Ver.1.0	Release DVM S2 (R410A, 50Hz, HR) for Baltics TDB	24.08.22	

# Nomenclature

## Outdoor Unit

### Model Name

AM	260	A	X	V	G	G	R	/	EU
(1)	(2)	(3)	(4)	(5)	(6)	(7)	(8)		Buyer

(1) Classification

AM	DVM
----	-----

(5) Feature 1

V	Inverter
---	----------

(2) Capacity

x 1/10 HP (3 digits)
----------------------

(6) Feature 2

A	Standard + General Temp.+ Module
H	High EER + Low Temp. + Module
G	High EER + General Temp. + Module
D	Standard + General Temp. + Non-Module

(3) Version

A	2021
---	------

(7) Rating Voltage

E	1Ø, 220~240V, 50Hz
G	3Ø, 380~415V, 50Hz
N	3Ø, 380~415V, 50/60Hz

(4) Product Type

X	Outdoor Unit
N	Indoor Unit

(8) Mode

H	Heat Pump
R	Heat Recovery

# Features & Benefits



## Rebuilt on all new innovations

Rethink your approach to air conditioning with the Samsung DVM S2. It delivers outstanding comfort and energy efficiency, even in extreme climates. Its intelligent features make installation and maintenance easier and more cost-effective.

## Perfectly compatible with WindFree™




# Features & Benefits

## Enabling a new era of consistent comfort

### Advanced Flash Injection Compressor

Enter a new era of non-stop comfort and efficiency. The Advanced Flash Injection Compressor provides the world's largest capacity\*. It combines Flash Injection technology with a strengthened Triple Profile Scroll and efficient Optimal Discharge Superheat (DSH) Control technology.

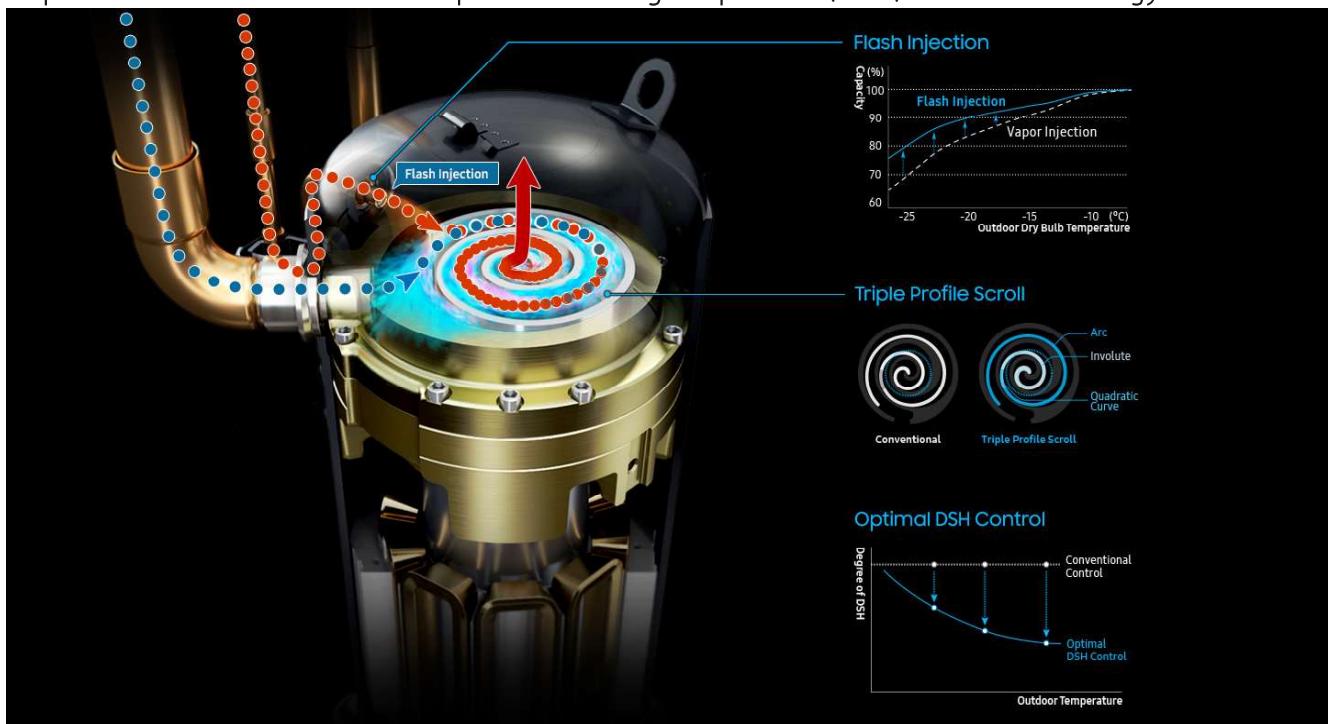


\* Samsung circulates 14,400cc/sec refrigerant (= 90cc (displacement volume) x 160rps (revolutions per second)), while Company A circulates 12,480cc/sec (= 96cc x 130rps), Company B circulates 14,080cc/sec (= 88cc x 160rps) and Company C circulates 12,320cc/sec (= 88cc x 140rps).

## More powerful performance, less space



### 34HP Super Capacity with a Compact Design

Enjoy an exceptionally powerful performance and use less space. It's the first outdoor unit to offer super capacities of 32HP and 34HP in a single unit. Their compact design saves up to 18% space\* and helps reduce the cost and effort of installation.

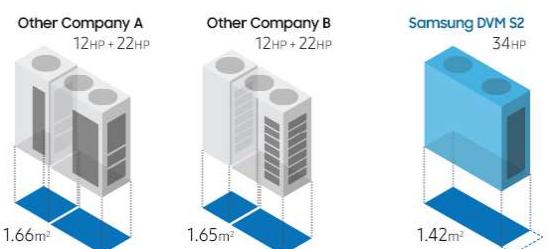

\* Based on internal testing compared to both Samsung conventional outdoor units and those of other brands.

# Contents

---

1. Combination Table / Design Procedure & Combination Ratio	7
2. Specification	12
3. Electric Characteristics	20
4. Dimensional Drawing	21
5. Center of Gravity	24
6. Electrical Wiring Diagrams	27
7. Sound Data	32
8. Operation Range	44
9. Piping Diagram	46
10. Installation	52

# 1. Combination Table

## Premium energy efficiency

System Model			Capacity (HP)									
Capa	Model Name	Number of individual outdoor units	8	10	12	14	16	18	20	22	24	26
8HP	AM080AXVGGR/EU	1	1									
10HP	AM100AXVGGR/EU	1		1								
12HP	AM120AXVGGR/EU	1			1							
14HP	AM140AXVGGR/EU	1				1						
16HP	AM160AXVGGR/EU	1					1					
18HP	AM180AXVGGR/EU	1						1				
20HP	AM200AXVGGR/EU	1							1			
22HP	AM220AXVGGR/EU	1								1		
24HP	AM240AXVGGR/EU	1									1	
26HP	AM260AXVGGR/EU	1										1

### NOTE

- Make sure to use an indoor unit that is compatible with DVM S.
- Indoor units can be connected within the range indicated in following table.
- If the total capacity of the connected indoor units exceeds the indicated maximum capacity, cooling and heating capacity of the indoor unit may decrease.
- Total capacity of the connected indoor units can be allowed from 50% to 130% of the total outdoor unit capacity.  
 $0.5 \times \sum(\text{Outdoor unit capacity}) \leq \text{Total capacity of the connected indoor units} \leq 1.3 \times \sum(\text{Outdoor unit capacity})$ 
  - ※ You can connect maximum 64 indoor units to the outdoor unit. Maximum quantity of connectable indoor unit is set to 64 since outdoor unit only support up to 64 communication address. Indoor unit address can be assigned from 0~63. If the indoor unit address was assigned from 64~79, E201 error will occur.
  - ※ Maximum 32 Wall-mount type indoor units with EEV (AM\*\*\*\*NQDEH\*\*\*, AM\*\*\*JNVDKH\*\*\*) can be connected.

# 1. Design Procedure & Combination Ratio

## Combination Ratio (Connection Ratio)

### Definition of Combination Ratio, CR

$$CR = \frac{\text{Sum of Nominal Cooling Capacity of Indoor units}}{\text{Nominal Cooling Capacity of Outdoor unit}} * 100\%$$

### Constraints of Allowable Combination Ratio

DVM S systems are normally designed to utilize a CR 50% to 130% to ensure effective load balancing between indoor units and outdoor unit. As buildings have become more insulated, and usage and occupancy of buildings are highly variable, more buildings can realize a higher load balancing between IDUs and ODU, thus higher CR (>130%) is often required. If a system design exceeds 130%, risks associated to increased indoor sound level and reduced comfort levels should be considered. Therefore, when it is necessary to design a combination ratio exceeding 130%, the following conditions must be complied with: -

### Design & Selection Procedure

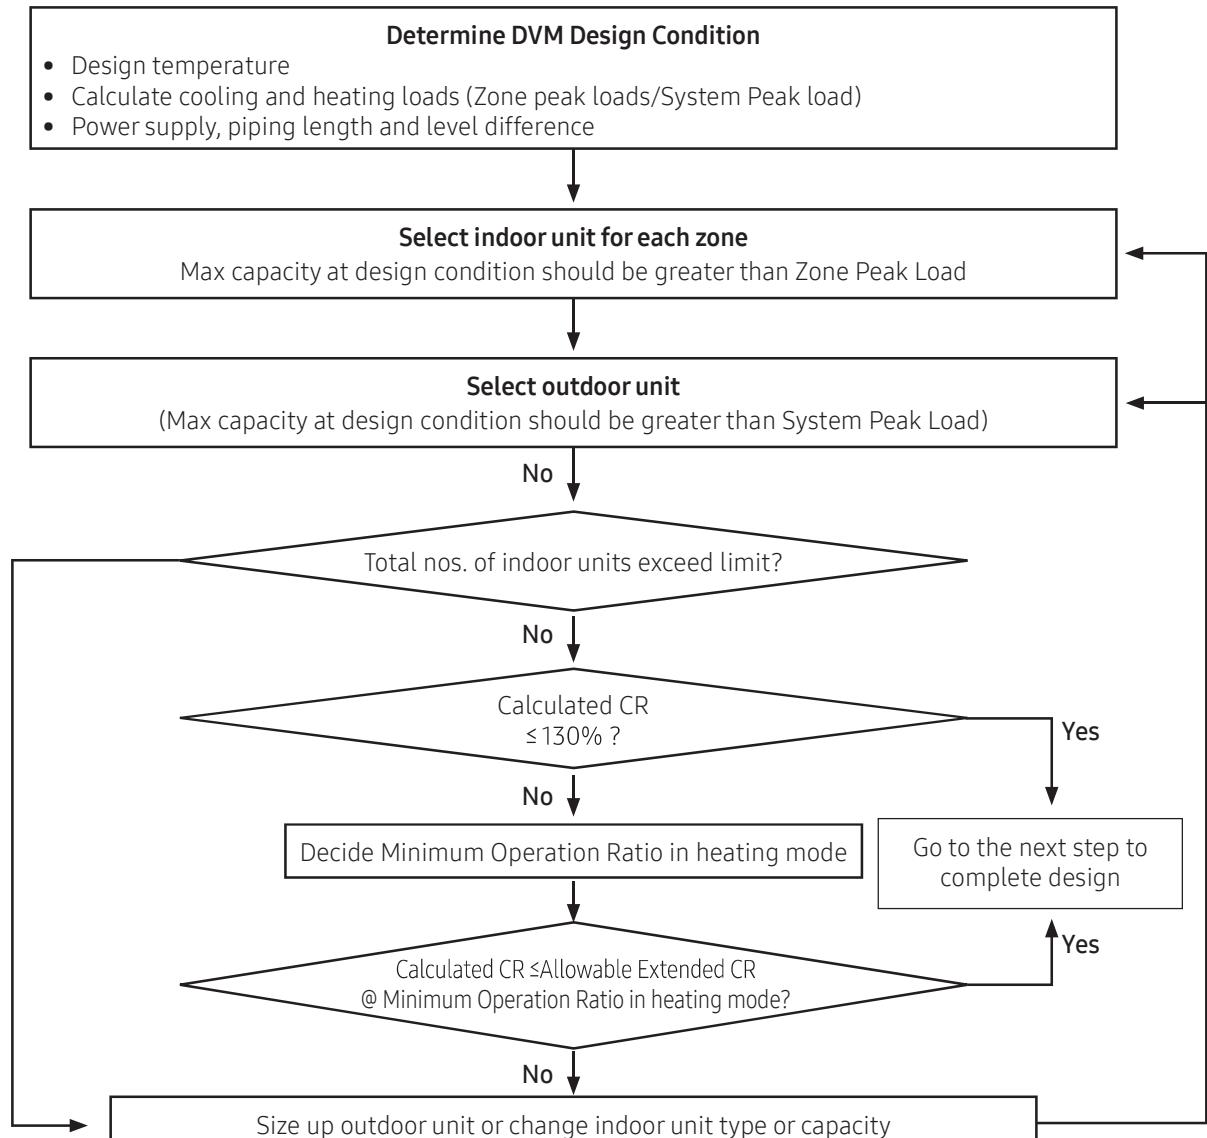


Fig. 1 Design & Selection Procedure for Extended Combination Ratio

# 1. Design Procedure & Combination Ratio

## Combination Ratio (Connection Ratio)

### Satisfying cooling & heating comfort

The Maximum Capacity of outdoor unit at design condition calculated from Samsung capacity data table or design tool (DVM Pro) should always be the same or greater than System Peak Load (Block Load) defined in table 1.

Time	Room A	Room B	Room C	Room D	Room E	Room F	Total
	Music Room	Class room					
09:00	8.4	8.0	8.4	8.0	8.4	8.6	49.8
12:00	9.2	8.8	10.8	8.6	10.8	9.8	58.0
14:00	10.0	9.6	9.6	9.6	11.4	10.8	61.0
16:00	11.0	10.6	8.8	10.8	9.6	9.6	60.4
18:00	9.4	9.0	8.8	9.0	9.0	8.4	53.6

Table 1. Example of System Peak loads

- Zone Peak Loads (Yellow): To satisfy the demand for each room any time
  - Sum of Zone peak Loads = 65.4kW (11.0 + 10.6 + 10.8 + 10.8 + 11.4 + 10.8)
- Block load (Red): Total peak load at a given time of day.
  - Sum of Zone Peak Loads at 14:00 = 61.0kW



**NOTE** • When a system combination ratio is over 130%, a max system capacity is the same as the published capacity in TDB capacity table at the combination ratio of 130%

### Cooling Operation Only

When only cooling operation is used, CR is allowed up to 180% if the Max Capacity of outdoor unit is greater than System Peak Load (Block load) as shown table 2.

Outdoor unit	All capacities of H/P & H/R model
Indoor unit	All indoor unit types
Operation Condition	Cooling mode only
Allowable CR	180%

Table 2. Allowable CR in only cooling operation



**NOTE** • Table 2 shows a standard for allowable CR of cooling only model. Samsung Electronics is not responsible for any problem caused by using a heating mode at the site with a system designed by table 2. If heating operation is required, extended CR design must follow section "Allowable CR limit to avoid abnormal sound level risks in heating operation."

# 1. Design Procedure & Combination Ratio

## Combination Ratio (Connection Ratio)

### Allowable CR limit to avoid abnormal sound level risks in heating operation

- If the CR exceeds 130%, in a specific case of heating operation, an indoor unit may have higher sound level than the level specified in the technical documents.
- In order to minimize the sound level, the system minimum operation ratio needs to be verified and considered as follows:
  - ※ Operation Ratio(%), OR
    - Heat Pump system, H/P

$$OR (H/P) (\%) = \frac{\text{Sum of nominal capacity of indoor units running in heating mode}}{\text{Sum of nominal capacity of indoor units}} * 100\%$$

- Heat Recovery system, H/R

$$OR (H/R) (\%) = \frac{\text{Sum of nominal capacity of indoor units running in both cooling & heating mode}}{\text{Sum of nominal capacity of indoor units}} * 100\%$$

The Minimum Operation Ratio should be determined during the project design stage using Fig. 2.

Outdoor unit	All capacities of H/P & H/R (Single, Dual and Triple Module Systems)		
Indoor unit	All indoor unit types *except Wall-Mounted		Wall-Mounted
Operation Ratio	Nominal Capacity $\leq$ 4.5kW	Nominal capacity $>$ 4.5kW	All capacities
10%	131%	145%	135%
20%	137%	153%	141%
30%	149%	162%	151%

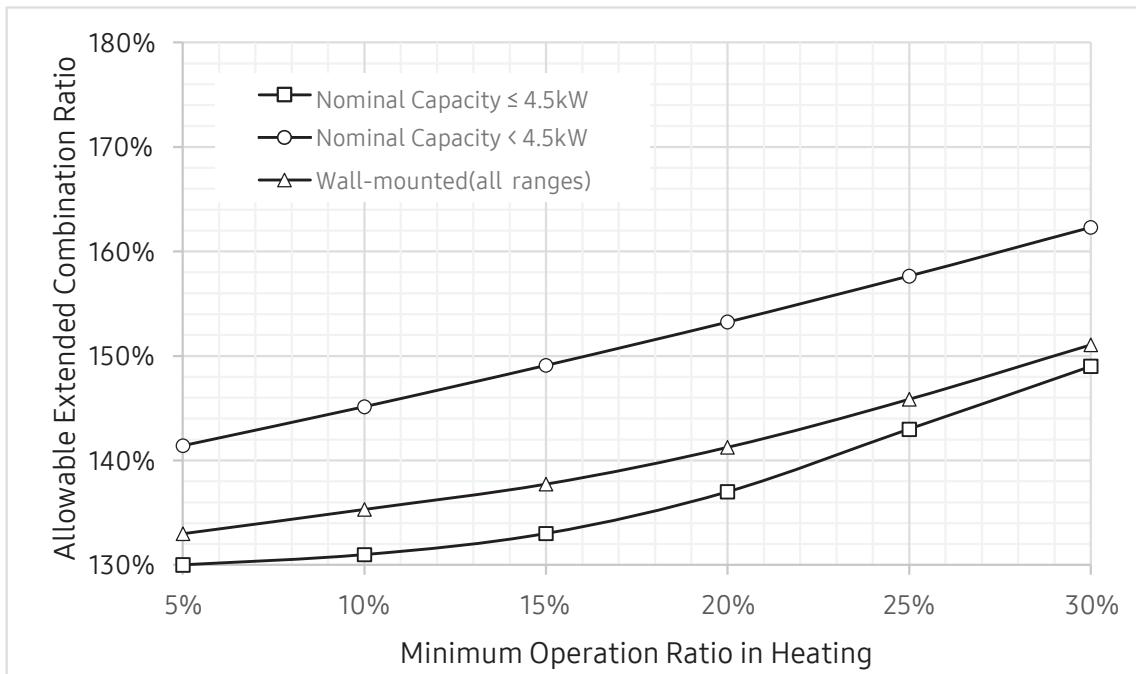


Fig. 2 Allowable CR with respect to indoor unit type as operation ratio increases

# 1. Design Procedure & Combination Ratio

## Combination Ratio (Connection Ratio)

- The minimum operation ratio should be considered during the design stage.
- If a system has a mix of unit types or capacity, the lowest extended connection ratio curve must be utilized.
- In case that a designed Minimum Operation Ratio is less than 5% or more than 30%, the Allowable Extended CR must be considered as the value at 5% and 30%, respectively.
- \*)If one of following indoor unit types is included in a system, the CR cannot be extended beyond 130%.

Type of indoor unit	Limited by CR 130%
1Way Cassette / 4Way Cassette (600 x 600)	2.8kW or below
360 Cassette / Slim Duct (LSP duct)	3.6kW or below
4Way Cassette	5.6kW or below
Floor Standing (Exposed or Concealed)	5.6kW only
Ceiling Suspended	14.0kW only
Hydro unit (HE/HT)	All capacities



- Samsung is not responsible for any issue, including abnormal noise that arises during heating operation due solely to the operation rate being lower than the designated combination ratio shown in Fig. 2. Please contact your local Samsung representative for further details if the project requires you to design the project with a connection ratio greater than 130%.

## 2. Specification

### Premium energy efficiency

Model Name			AM080AXVGGR/EU	AM100AXVGGR/EU	AM120AXVGGR/EU
Outdoor unit module 1			-	-	-
Outdoor unit module 2			-	-	-
Outdoor unit module 3			-	-	-
Outdoor unit module 4			-	-	-
Power Supply	Ø, #, V, Hz		3, 4, 380-415, 50	3, 4, 380-415, 50	3, 4, 380-415, 50
Mode	-		HEAT PUMP	HEAT PUMP	HEAT PUMP
Performance	HP		HP	8	10
	Capacity	Cooling(Rated)	kW	22.4	28.0
		Heating(Rated)	kW	22.4	28.0
		Heating(Max)	kW	25.2	31.5
Maximum number of connectable indoor units		EA	14	18	21
Total capacity of the connected Indoor Units	Min.	kW	11.2	14.0	16.8
	Max.	kW	29.1	36.4	43.7
Power	Power Input	Cooling(Rated)	kW	5.08	7.10
		Heating(Rated)	kW	4.75	5.95
	Current	Minimum Ssc	MVA	3.0	3.4
		MCA	A	18.0	21.2
		MFA	A	25	32
Efficiency	EER		W/W	4.41	3.94
	COP		W/W	4.72	4.70
Casing	Material	Body	-	GI Steel Plate	GI Steel Plate
		Base	-	GI Steel Plate	GI Steel Plate
Heat Exchanger	Type		-	Fin & Tube	Fin & Tube
	Material	Fin	-	Al	Al
		Tube	-	Cu	Cu
	Fin Treatment		-	Anti-corrosion	Anti-corrosion
Compressor	Type		-	Inverter Scroll x 1	Inverter Scroll x 1
	Output		kW x n	4.60 x 1	6.67 x 1
	Model Name		-	DS2GR7046FV* x 1	DS4GR7066FV* x 1
	Oil	Type	-	PVE	PVE
		Initial charge	cc x n	900 x 1	1,100 x 1
Fan	Type		-	Propeller	Propeller
	Discharge direction		-	Top	Top
	Quantity		EA	1	1
	Air Flow Rate		m³/min	164	181
			l/s	2,738	3,019
	External Static Pressure	Max.	mmAq	11	11
			Pa	110	110
Fan Motor	Type		-	BLDC Motor	BLDC Motor
	Output		W x n	630 x 1	630 x 1
Piping Connections	Liquid Pipe		Type	Braze connection	Braze connection
			Φ, mm (inch)	9.52 (3/8)	9.52 (3/8)
	Gas Pipe		Type	Braze connection	Braze connection
			Φ, mm (inch)	19.05 (3/4)	22.22 (7/8)
	High pressure Gas Pipe(HR Only)		Type	Braze connection	Braze connection
			Φ, mm (inch)	15.88 (5/8)	19.05 (3/4)
	Heat Insulation		-	Both liquid and gas pipes	Both liquid and gas pipes

## 2. Specification

### Premium energy efficiency

Model Name			AM080AXVGGR/EU	AM100AXVGGR/EU	AM120AXVGGR/EU
Outdoor unit module 1			-	-	-
Outdoor unit module 2			-	-	-
Outdoor unit module 3			-	-	-
Outdoor unit module 4			-	-	-
Piping Connections	Piping length (ODU-IDU)	Max. [Equiv.]	m	200[220]	200[220]
	Piping length (1st Branch-IDU)	Max.	m	90	90
	Total piping length (System)	Max.	m	1,000	1,000
	Level difference (ODU in highest position)	Max.	m	110	110
	Level difference	Max.	m	110	110
	Level difference (IDU-IDU)	Max.	m	50	40
Wiring connections	Transmission	Min.	mm <sup>2</sup>	0.75	0.75
	Cable	Remark	-	F1, F2	F1, F2
	Power supply intake		-	Both indoor and outdoor unit	Both indoor and outdoor unit
Refrigerant	Type		-	R410A	R410A
	Factory Charging		kg	7.0	7.0
			tCO <sub>2</sub> e	14.62	14.62
Sound	Sound Pressure	Cooling	dB(A)	53	56
		Heating	dB(A)	58	60
	Sound Power		dB(A)	75	78
External Dimension	Net Weight		kg	199	211
	Shipping Weight		kg	213	225
	Net Dimensions (WxHxD)		mm	930 x 1,695 x 765	930 x 1,695 x 765
	Shipping Dimensions (WxHxD)		mm	998 x 1,887 x 829	998 x 1,887 x 829
Operating Temp. Range	Cooling		°C	-5 ~ 50	-5 ~ 50
	Heating		°C	-25 ~ 24	-25 ~ 24

### NOTE

- Specification may be subject to change without prior notice.
- Specification comply with EN14511
- 1) Performances are based on the following test conditions.
  - Cooling : Indoor temperature 27°CDB, 19°CWB, Outdoor temperature 35°CDB, 24°CWB
  - Heating : Indoor temperature 20°CDB, 15°CWB, Outdoor temperature 7°CDB, 6°CWB
  - Equivalent refrigerant pipe length 5m, Level differences 0m
- 2) Performance of Multiple Module Outdoor unit is weighted average of Single Module outdoor units.
- 3) Allowed combination ratio of the total rated indoor unit capacity over the rated outdoor unit capacity is 50~130%.
- 4) Sound pressure level is obtained in an anechoic room.
  - Sound pressure level is a relative value, depending on the distance and acoustic environment.
  - Sound pressure level may differ depending on operation condition.
  - dBA = A-weighted sound pressure level
  - Reference acoustic pressure 0 dB = 20uPa
- 5) Sound power level is an absolute value that a sound source generates.
  - dBA = A-weighted sound power level
  - Reference power : 1pW
  - Measured according to ISO 3741
- 6) Sound values of multi combination are theoretical values based on sound results of individual installed units.
- 7) These products contain R410A (GWP=2,088) which is fluorinated greenhouse gas.
- 8) If outdoor unit is located in a higher position than indoor unit, level difference is 110m or under.
  - (If the level difference is higher than 50m, make a decision by PDM kit installation Guide software whether the PDM kit should be installed or not.)
  - PDM kit: Pressure Drop Modulation kit
  - When the outdoor unit is below the indoor unit & the level differences are 40m or more, contact your local dealer for more information.
- 9) In case you want to know more information regarding capacity and correction, please refer to capacity table TDB on pvi.samsung.com site.

## 2. Specification

### Premium energy efficiency

Model Name			AM140AXVGGR/EU	AM160AXVGGR/EU	AM180AXVGGR/EU	
Outdoor unit module 1			-	-	-	
Outdoor unit module 2			-	-	-	
Outdoor unit module 3			-	-	-	
Outdoor unit module 4			-	-	-	
Power Supply			Ø, #, V, Hz	3, 4, 380-415, 50	3, 4, 380-415, 50	
Mode			-	HEAT PUMP	HEAT PUMP	
Performance	HP		HP	14	16	
	Capacity	Cooling(Rated)	kW	40.0	45.0	
		Heating(Rated)	kW	40.0	45.0	
		Heating(Max)	kW	45.0	50.4	
Maximum number of connectable indoor units			EA	26	29	
Total capacity of the connected Indoor Units	Min.		kW	20.0	22.5	
	Max.		kW	52.0	58.5	
Power	Power Input	Cooling(Rated)	kW	11.71	12.41	
		Heating(Rated)	kW	8.90	10.10	
	Current	Minimum Ssc	MVA	4.4	5.2	
		MCA	A	27.0	32.0	
		MFA	A	32	40	
Efficiency	EER		W/W	3.42	3.63	
	COP		W/W	4.49	4.46	
Casing	Material	Body	-	GI Steel Plate	GI Steel Plate	
		Base	-	GI Steel Plate	GI Steel Plate	
Heat Exchanger	Type		-	Fin & Tube	Fin & Tube	
	Material	Fin	-	Al	Al	
		Tube	-	Cu	Cu	
Fin Treatment			-	Anti-corrosion	Anti-corrosion	
Compressor	Type		-	Inverter Scroll x 1	Inverter Scroll x 1	
	Output		kW x n	6.67 x 1	8.93 x 1	
	Model Name		-	DS4GR7066FV* x 1	DS4GM7090FV* x 1	
	Oil	Type	-	PVE	PVE	
		Initial charge	cc x n	1,100 x 1	1,400 x 1	
Fan	Type		-	Propeller	Propeller	
	Discharge direction		-	Top	Top	
	Quantity		EA	2	2	
	Air Flow Rate		m³/min	291	292	
			l/s	4,852	4,866	
	External Static Pressure	Max.	mmAq	11	11	
			Pa	110	110	
Fan Motor	Type		-	BLDC Motor	BLDC Motor	
	Output		W x n	620 x 2	620 x 2	
Piping Connections	Liquid Pipe		Type	Braze connection	Braze connection	
			Φ, mm (inch)	12.70 (1/2)	12.70 (1/2)	
	Gas Pipe		Type	Braze connection	Braze connection	
			Φ, mm (inch)	28.58 (1-1/8)	28.58 (1-1/8)	
	High pressure Gas Pipe(HR Only)		Type	Braze connection	Braze connection	
			Φ, mm (inch)	22.22 (7/8)	22.22 (7/8)	
	Heat Insulation		-	Both liquid and gas pipes	Both liquid and gas pipes	

## 2. Specification

### Premium energy efficiency

Model Name			AM140AXVGGR/EU	AM160AXVGGR/EU	AM180AXVGGR/EU
Outdoor unit module 1			-	-	-
Outdoor unit module 2			-	-	-
Outdoor unit module 3			-	-	-
Outdoor unit module 4			-	-	-
Piping Connections	Piping length (ODU-IDU)	Max. [Equiv.]	m	200[220]	200[220]
	Piping length (1st Branch-IDU)	Max.	m	90	90
	Total piping length (System)	Max.	m	1,000	1,000
	Level difference (ODU in highest position)	Max.	m	110	110
	Level difference	Max.	m	110	110
	Level difference (IDU-IDU)	Max.	m	40	40
Wiring connections	Transmission	Min.	mm <sup>2</sup>	0.75	0.75
	Cable	Remark	-	F1, F2	F1, F2
	Power supply intake		-	Both indoor and outdoor unit	Both indoor and outdoor unit
Refrigerant	Type		-	R410A	R410A
	Factory Charging		kg	8.0	10.5
			tCO <sub>2</sub> e	16.70	21.92
Sound	Sound Pressure	Cooling	dB(A)	58	58
		Heating	dB(A)	61	61
	Sound Power		dB(A)	81	81
External Dimension	Net Weight		kg	237	268
	Shipping Weight		kg	254	285
	Net Dimensions (WxHxD)		mm	1,295 x 1,695 x 765	1,295 x 1,695 x 765
	Shipping Dimensions (WxHxD)		mm	1,363 x 1,887 x 829	1,363 x 1,887 x 829
Operating Temp. Range	Cooling		°C	-5 ~ 50	-5 ~ 50
	Heating		°C	-25 ~ 24	-25 ~ 24

### NOTE

- Specification may be subject to change without prior notice.
- Specification comply with EN14511

- 1) Performances are based on the following test conditions.
  - Cooling : Indoor temperature 27°CDB, 19°CWB, Outdoor temperature 35°CDB, 24°CWB
  - Heating : Indoor temperature 20°CDB, 15°CWB, Outdoor temperature 7°CDB, 6°CWB
  - Equivalent refrigerant pipe length 5m, Level differences 0m
- 2) Performance of Multiple Module Outdoor unit is weighted average of Single Module outdoor units.
- 3) Allowed combination ratio of the total rated indoor unit capacity over the rated outdoor unit capacity is 50~130%.
- 4) Sound pressure level is obtained in an anechoic room.
  - Sound pressure level is a relative value, depending on the distance and acoustic environment.
  - Sound pressure level may differ depending on operation condition.
  - dBA = A-weighted sound pressure level
  - Reference acoustic pressure 0 dB = 20uPa
- 5) Sound power level is an absolute value that a sound source generates.
  - dBA = A-weighted sound power level
  - Reference power : 1pW
  - Measured according to ISO 3741
- 6) Sound values of multi combination are theoretical values based on sound results of individual installed units.
- 7) These products contain R410A (GWP=2,088) which is fluorinated greenhouse gas.
- 8) If outdoor unit is located in a higher position than indoor unit, level difference is 110m or under.
  - (If the level difference is higher than 50m, make a decision by PDM kit installation Guide software whether the PDM kit should be installed or not.)
  - PDM kit: Pressure Drop Modulation kit
- 9) When the outdoor unit is below the indoor unit & the level differences are 40m or more, contact your local dealer for more information.

In case you want to know more information regarding capacity and correction, please refer to capacity table TDB on [pvi.samsung.com](http://pvi.samsung.com) site.

## 2. Specification

### Premium energy efficiency

Model Name			AM200AXVGGR/EU	AM220AXVGGR/EU	AM240AXVGGR/EU			
Outdoor unit module 1			-	-	-			
Outdoor unit module 2			-	-	-			
Outdoor unit module 3			-	-	-			
Outdoor unit module 4			-	-	-			
Power Supply			Ø, #, V, Hz	3, 4, 380-415, 50	3, 4, 380-415, 50			
Mode			-	HEAT PUMP	HEAT PUMP			
Performance	HP		HP	20	22			
	Capacity	Cooling(Rated)	kW	56.0	61.6			
		Heating(Rated)	kW	56.0	61.6			
		Heating(Max)	kW	63.0	69.3			
Maximum number of connectable indoor units			EA	36	40			
Total capacity of the connected Indoor Units	Min.		kW	28.0	30.8			
	Max.		kW	72.8	80.1			
Power	Power Input	Cooling(Rated)	kW	17.42	20.34			
		Heating(Rated)	kW	13.42	14.55			
	Current	Minimum Ssc	MVA	7.0	7.4			
		MCA	A	43.0	46.0			
		MFA	A	63	63			
Efficiency	EER		W/W	3.21	3.03			
	COP		W/W	4.17	4.23			
Casing	Material	Body	-	GI Steel Plate	GI Steel Plate			
		Base	-	GI Steel Plate	GI Steel Plate			
Heat Exchanger	Type		-	Fin & Tube	Fin & Tube			
	Material	Fin	-	Al	Al			
		Tube	-	Cu	Cu			
Fin Treatment			-	Anti-corrosion	Anti-corrosion			
Compressor	Type		-	Inverter Scroll x 1	Inverter Scroll x 2			
	Output		kW x n	8.93 x 1	6.67 x 2			
	Model Name			-	DS4GM7090FV* x 1			
	Oil	Type	-	PVE	PVE			
		Initial charge	cc x n	1,400 x 1	1,100 x 2			
Fan	Type		-	Propeller	Propeller			
	Discharge direction		-	Top	Top			
	Quantity		EA	2	2			
	Air Flow Rate		m³/min	313	342			
			l/s	5,209	5,698			
	External Static Pressure	Max.	mmAq	11	11			
			Pa	110	110			
Fan Motor	Type		-	BLDC Motor	BLDC Motor			
	Output		W x n	620 x 2	620 x 2			
Piping Connections	Liquid Pipe			Type	Braze connection			
				Φ, mm (inch)	15.88 (5/8)			
	Gas Pipe			Type	Braze connection			
				Φ, mm (inch)	28.58 (1-1/8)			
	High pressure Gas Pipe(HR Only)			Type	Braze connection			
				Φ, mm (inch)	28.58 (1-1/8)			
	Heat Insulation			-	Both liquid and gas pipes			
Both liquid and gas pipes								
Both liquid and gas pipes								

## 2. Specification

### Premium energy efficiency

Model Name			AM200AXVGGR/EU	AM220AXVGGR/EU	AM240AXVGGR/EU
Outdoor unit module 1			-	-	-
Outdoor unit module 2			-	-	-
Outdoor unit module 3			-	-	-
Outdoor unit module 4			-	-	-
Piping Connections	Piping length (ODU-IDU)	Max. [Equiv.]	m	200[220]	200[220]
	Piping length (1st Branch-IDU)	Max.	m	90	90
	Total piping length (System)	Max.	m	1,000	1,000
	Level difference (ODU in highest position)	Max.	m	110	110
	Level difference	Max.	m	110	110
	Level difference (IDU-IDU)	Max.	m	40	40
Wiring connections	Transmission	Min.	mm <sup>2</sup>	0.75	0.75
	Cable	Remark	-	F1, F2	F1, F2
	Power supply intake		-	Both indoor and outdoor unit	Both indoor and outdoor unit
Refrigerant	Type		-	R410A	R410A
	Factory Charging	kg	10.5	10.5	14.0
		tCO <sub>2</sub> e	21.92	21.92	29.23
Sound	Sound Pressure	Cooling	dB(A)	61	64
		Heating	dB(A)	63	65
	Sound Power		dB(A)	84	86
External Dimension	Net Weight		kg	274	309
	Shipping Weight		kg	291	326
	Net Dimensions (WxHxD)		mm	1,295 x 1,695 x 765	1,295 x 1,695 x 765
	Shipping Dimensions (WxHxD)		mm	1,363 x 1,887 x 829	1,363 x 1,887 x 829
Operating Temp. Range	Cooling		°C	-5 ~ 50	-5 ~ 50
	Heating		°C	-25 ~ 24	-25 ~ 24

### NOTE

- Specification may be subject to change without prior notice.
- Specification comply with EN14511

- 1) Performances are based on the following test conditions.
  - Cooling : Indoor temperature 27°CDB, 19°CWB, Outdoor temperature 35°CDB, 24°CWB
  - Heating : Indoor temperature 20°CDB, 15°CWB, Outdoor temperature 7°CDB, 6°CWB
  - Equivalent refrigerant pipe length 5m, Level differences 0m
- 2) Performance of Multiple Module Outdoor unit is weighted average of Single Module outdoor units.
- 3) Allowed combination ratio of the total rated indoor unit capacity over the rated outdoor unit capacity is 50~130%.
- 4) Sound pressure level is obtained in an anechoic room.
  - Sound pressure level is a relative value, depending on the distance and acoustic environment.
  - Sound pressure level may differ depending on operation condition.
  - dBA = A-weighted sound pressure level
  - Reference acoustic pressure 0 dB = 20uPa
- 5) Sound power level is an absolute value that a sound source generates.
  - dBA = A-weighted sound power level
  - Reference power : 1pW
  - Measured according to ISO 3741
- 6) Sound values of multi combination are theoretical values based on sound results of individual installed units.
- 7) These products contain R410A (GWP=2,088) which is fluorinated greenhouse gas.
- 8) If outdoor unit is located in a higher position than indoor unit, level difference is 110m or under.
  - (If the level difference is higher than 50m, make a decision by PDM kit installation Guide software whether the PDM kit should be installed or not.)
  - PDM kit: Pressure Drop Modulation kit
- 9) When the outdoor unit is below the indoor unit & the level differences are 40m or more, contact your local dealer for more information.

In case you want to know more information regarding capacity and correction, please refer to capacity table TDB on [pvi.samsung.com](http://pvi.samsung.com) site.

## 2. Specification

### Premium energy efficiency

Model Name	AM260AXVGGR/EU		
Outdoor unit module 1	-		
Outdoor unit module 2	-		
Outdoor unit module 3	-		
Outdoor unit module 4	-		
Power Supply			Ø, #, V, Hz
Mode	-		HEAT PUMP
Performance	HP		HP
	Capacity	Cooling(Rated)	kW
		Heating(Rated)	kW
		Heating(Max)	kW
Maximum number of connectable indoor units	EA		47
Total capacity of the connected Indoor Units	Min.		kW
	Max.		kW
Power	Power Input	Cooling(Rated)	kW
		Heating(Rated)	kW
	Current	Minimum Ssc	MVA
		MCA	A
		MFA	A
Efficiency	EER		W/W
	COP		W/W
Casing	Material	Body	-
		Base	-
Heat Exchanger	Type		-
	Material	Fin	-
		Tube	-
	Fin Treatment		-
Compressor	Type		-
	Output		kW x n
	Model Name		-
	Oil	Type	-
		Initial charge	cc x n
Fan	Type		-
	Discharge direction		-
	Quantity		EA
	Air Flow Rate		m³/min
			l/s
	External Static Pressure	Max.	mmAq
			Pa
Fan Motor	Type		-
	Output		W x n
Piping Connections	Liquid Pipe		Type
			Φ, mm (inch)
	Gas Pipe		Type
			Φ, mm (inch)
	High pressure Gas Pipe(HR Only)		Type
			Φ, mm (inch)
Heat Insulation		-	Both liquid and gas pipes

## 2. Specification

### Premium energy efficiency

Model Name				AM260AXVGGR/EU
Outdoor unit module 1			-	
Outdoor unit module 2			-	
Outdoor unit module 3			-	
Outdoor unit module 4			-	
Piping Connections	Piping length (ODU-IDU)	Max. [Equiv.]	m	200[220]
	Piping length (1st Branch-IDU)	Max.	m	90
	Total piping length (System)	Max.	m	1,000
	Level difference (ODU in highest position)	Max.	m	110
	Level difference	Max.	m	110
	Level difference (IDU-IDU)	Max.	m	40
Wiring connections	Transmission	Min.	mm <sup>2</sup>	0.75
	Cable	Remark	-	F1, F2
	Power supply intake		-	Both indoor and outdoor unit
Refrigerant	Type			R410A
	Factory Charging			14.0
		tCO <sub>2</sub> e		29.23
Sound	Sound Pressure	Cooling	dB(A)	65
		Heating	dB(A)	67
	Sound Power			87
External Dimension	Net Weight		kg	332
	Shipping Weight		kg	349
	Net Dimensions (WxHxD)		mm	1,295 x 1,695 x 765
	Shipping Dimensions (WxHxD)		mm	1,363 x 1,887 x 829
Operating Temp. Range	Cooling		°C	-5 ~ 50
	Heating		°C	-25 ~ 24

### NOTE

- Specification may be subject to change without prior notice.
- Specification comply with EN14511
- 1) Performances are based on the following test conditions.
  - Cooling : Indoor temperature 27°CDB, 19°CWB, Outdoor temperature 35°CDB, 24°CWB
  - Heating : Indoor temperature 20°CDB, 15°CWB, Outdoor temperature 7°CDB, 6°CWB
  - Equivalent refrigerant pipe length 5m, Level differences 0m
- 2) Performance of Multiple Module Outdoor unit is weighted average of Single Module outdoor units.
- 3) Allowed combination ratio of the total rated indoor unit capacity over the rated outdoor unit capacity is 50~130%.
- 4) Sound pressure level is obtained in an anechoic room.
  - Sound pressure level is a relative value, depending on the distance and acoustic environment.
  - Sound pressure level may differ depending on operation condition.
  - dBA = A-weighted sound pressure level
  - Reference acoustic pressure 0 dB = 20uPa
- 5) Sound power level is an absolute value that a sound source generates.
  - dBA = A-weighted sound power level
  - Reference power : 1pW
  - Measured according to ISO 3741
- 6) Sound values of multi combination are theoretical values based on sound results of individual installed units.
- 7) These products contain R410A (GWP=2,088) which is fluorinated greenhouse gas.
- 8) If outdoor unit is located in a higher position than indoor unit, level difference is 110m or under.
  - (If the level difference is higher than 50m, make a decision by PDM kit installation Guide software whether the PDM kit should be installed or not.)
  - PDM kit: Pressure Drop Modulation kit
- When the outdoor unit is below the indoor unit & the level differences are 40m or more, contact your local dealer for more information.
- 9) In case you want to know more information regarding capacity and correction, please refer to capacity table TDB on pvi.samsung.com site.

### 3. Electric Characteristics

#### Premium energy efficiency

Capacity		Model Name	Power Supply		Voltage Range		Running Current [A]		Current [A]		ODU Fan Motor	
HP	kW		Hz	Voltage	Min. (-10%)	Max. (+10%)	Cooling	Heating	MCA	MFA	kW	FLA [A]
8	22.4	AM080AXVGGR/EU	50	380-415	342	456	11.44	9.09	18.0	25	0.63	7.3
10	28.0	AM100AXVGGR/EU	50	380-415	342	456	15.97	11.41	21.2	32	0.63	7.3
12	33.6	AM120AXVGGR/EU	50	380-415	342	456	19.25	14.37	25.0	32	0.63	7.3
14	40.0	AM140AXVGGR/EU	50	380-415	342	456	25.44	17.06	27.0	32	1.24	14.6
16	45.0	AM160AXVGGR/EU	50	380-415	342	456	26.96	19.35	32.0	40	1.24	14.6
18	50.4	AM180AXVGGR/EU	50	380-415	342	456	26.79	21.14	39.2	50	1.24	14.6
20	56.0	AM200AXVGGR/EU	50	380-415	342	456	38.63	25.72	43.0	63	1.24	14.6
22	61.6	AM220AXVGGR/EU	50	380-415	342	456	44.15	27.29	46.0	63	1.24	14.6
24	67.2	AM240AXVGGR/EU	50	380-415	342	456	48.62	44.20	55.0	63	1.24	14.6
26	72.8	AM260AXVGGR/EU	50	380-415	342	456	57.61	45.11	60.0	75	1.24	14.6

#### NOTE


- MCA : Minimum circuit amperes
- MFA : Maximum fuse amperes
- FLA : Full load amperes

# 4. Dimensional Drawing

## Outdoor unit

- AM080AXVGGR/EU, AM100AXVGGR/EU, AM120AXVGGR/EU

Unit: mm (inches)

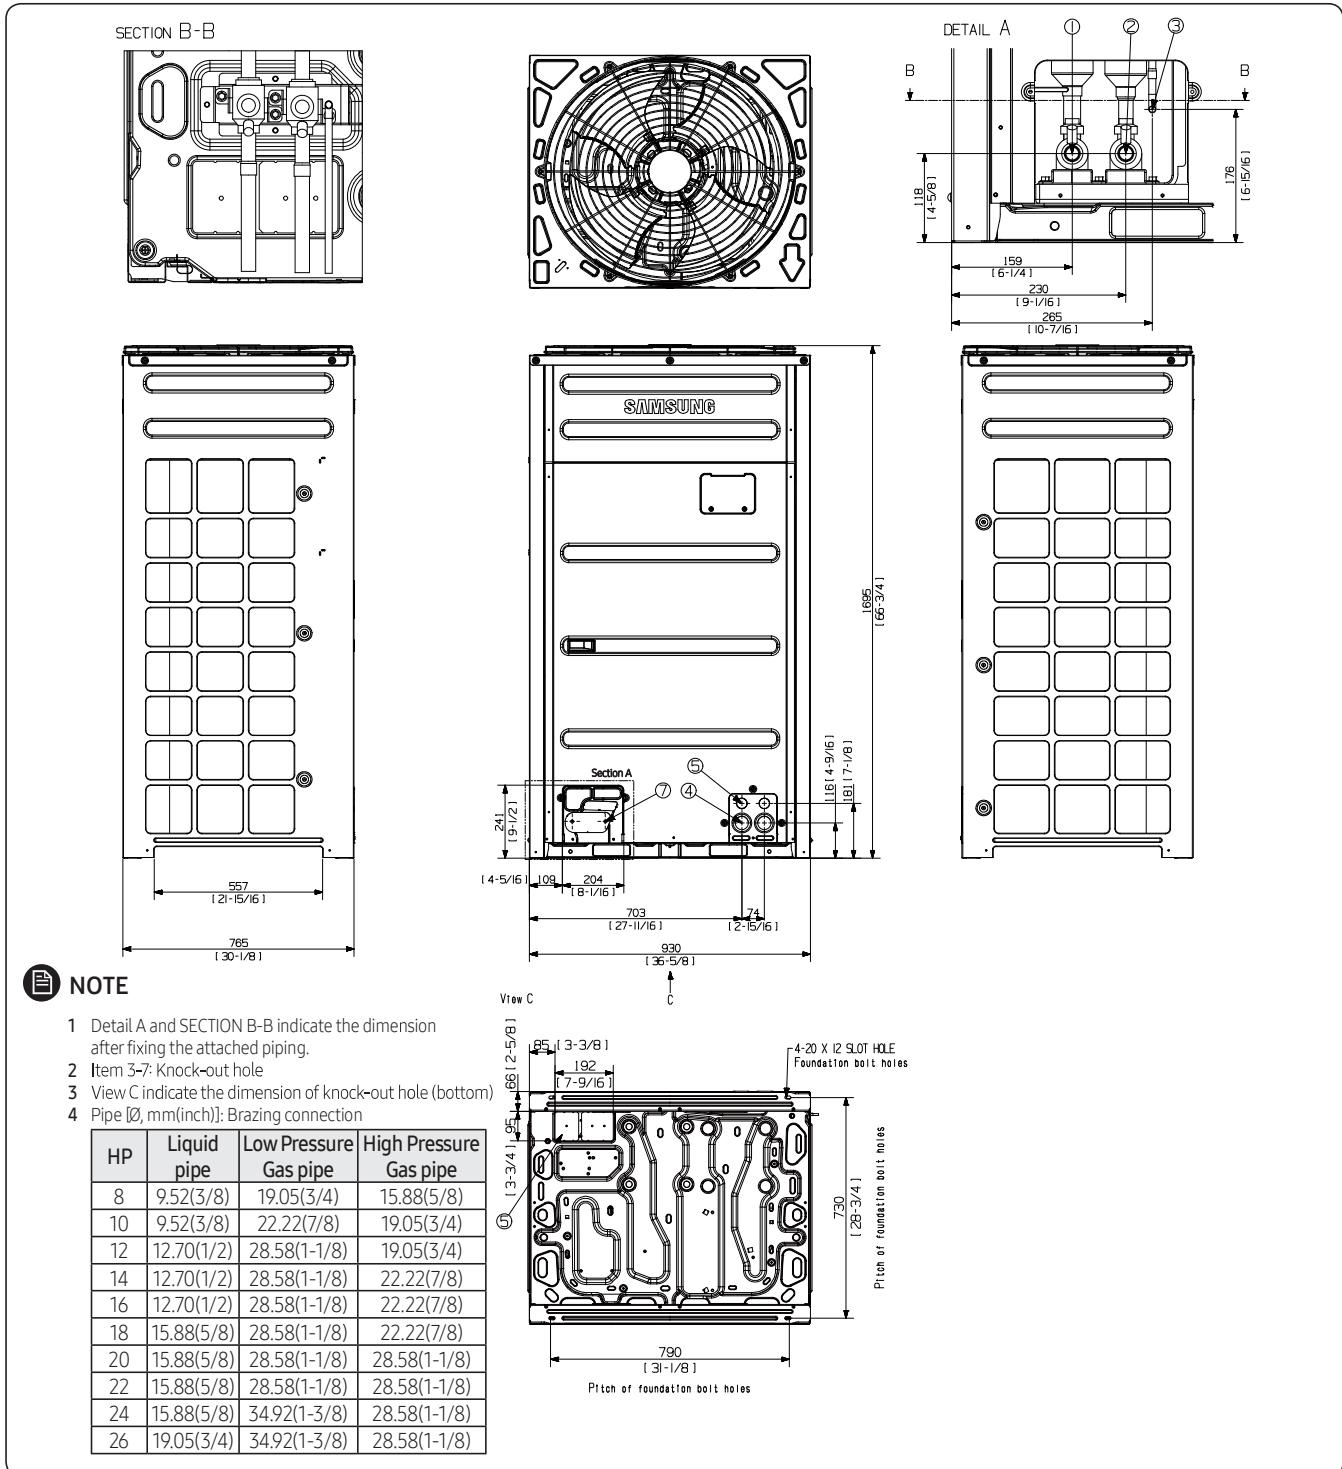


# 4. Dimensional Drawing

## Outdoor unit

- AM140/160/180/200/220/240/260AXVGGR/EU

Unit: mm (inches)

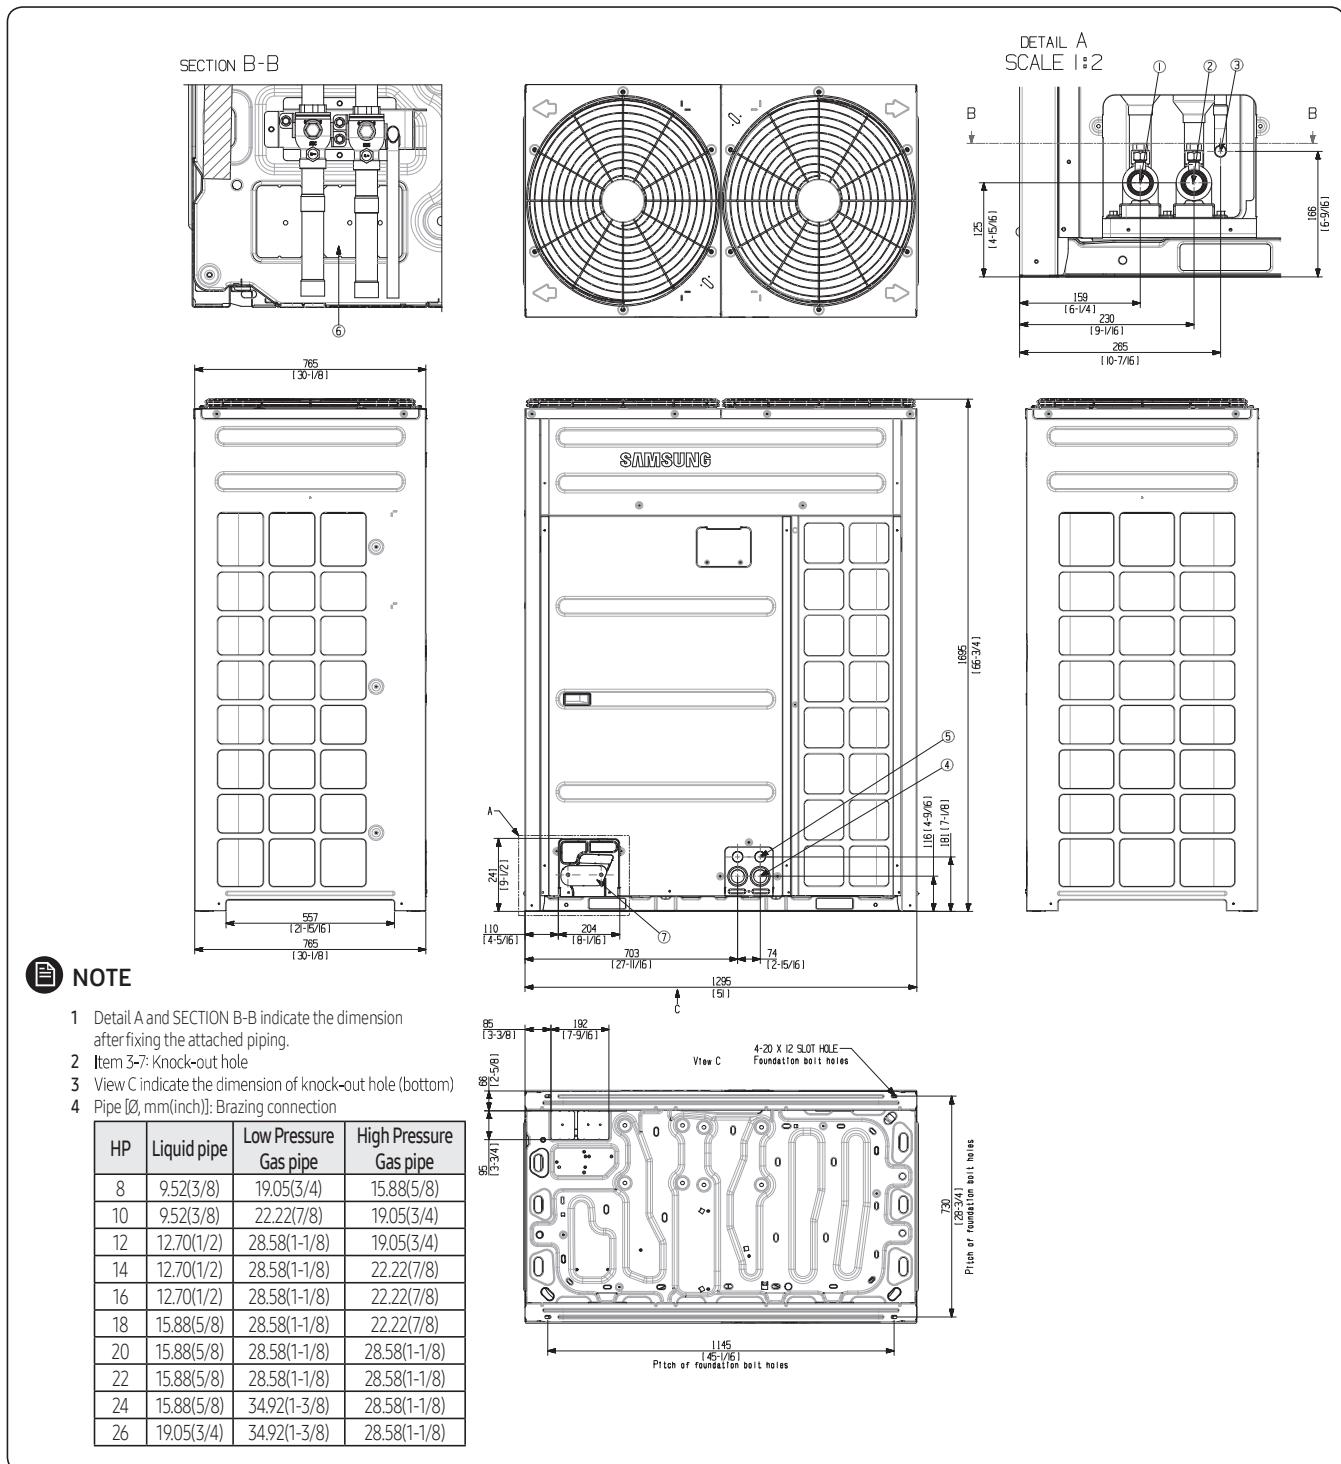


NO	Table of descriptions	Remark	NO	Table of descriptions	Remark
1	Low Pressure Gas Ref.pipe	See NOTE 4.	5	Communication wiring conduit	
2	High Pressure Ref.pipe	See NOTE 4.	6	Knock-out Hole for Ref.Piping (bottom)	
3	Liquid Ref.pipe	See NOTE 4.	7	Knock-out Hole for Ref.Piping (front)	
4	Power wiring conduit	Ø44			

## 5. Center of Gravity

### Outdoor unit

Unit: mm (inches)

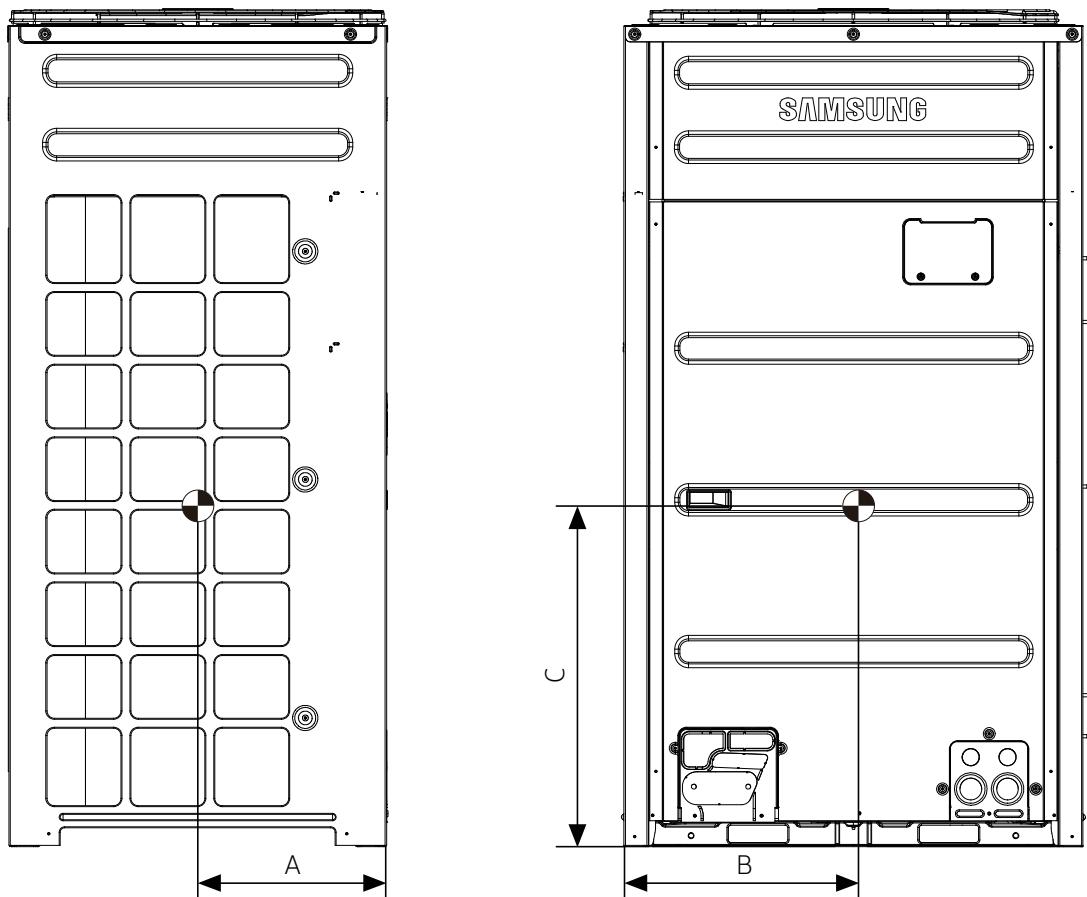


Model	A	B	C
AM080AXVGGR/EU	358 [14 - 1/8]	463 [18 - 1/4]	715 [28 - 1/8]
AM100AXVGGR/EU AM120AXVGGR/EU	351 [13 - 13/16]	461 [18 - 1/8]	694 [27 - 5/16]

## 5. Center of Gravity

### Outdoor unit

Unit: mm (inches)

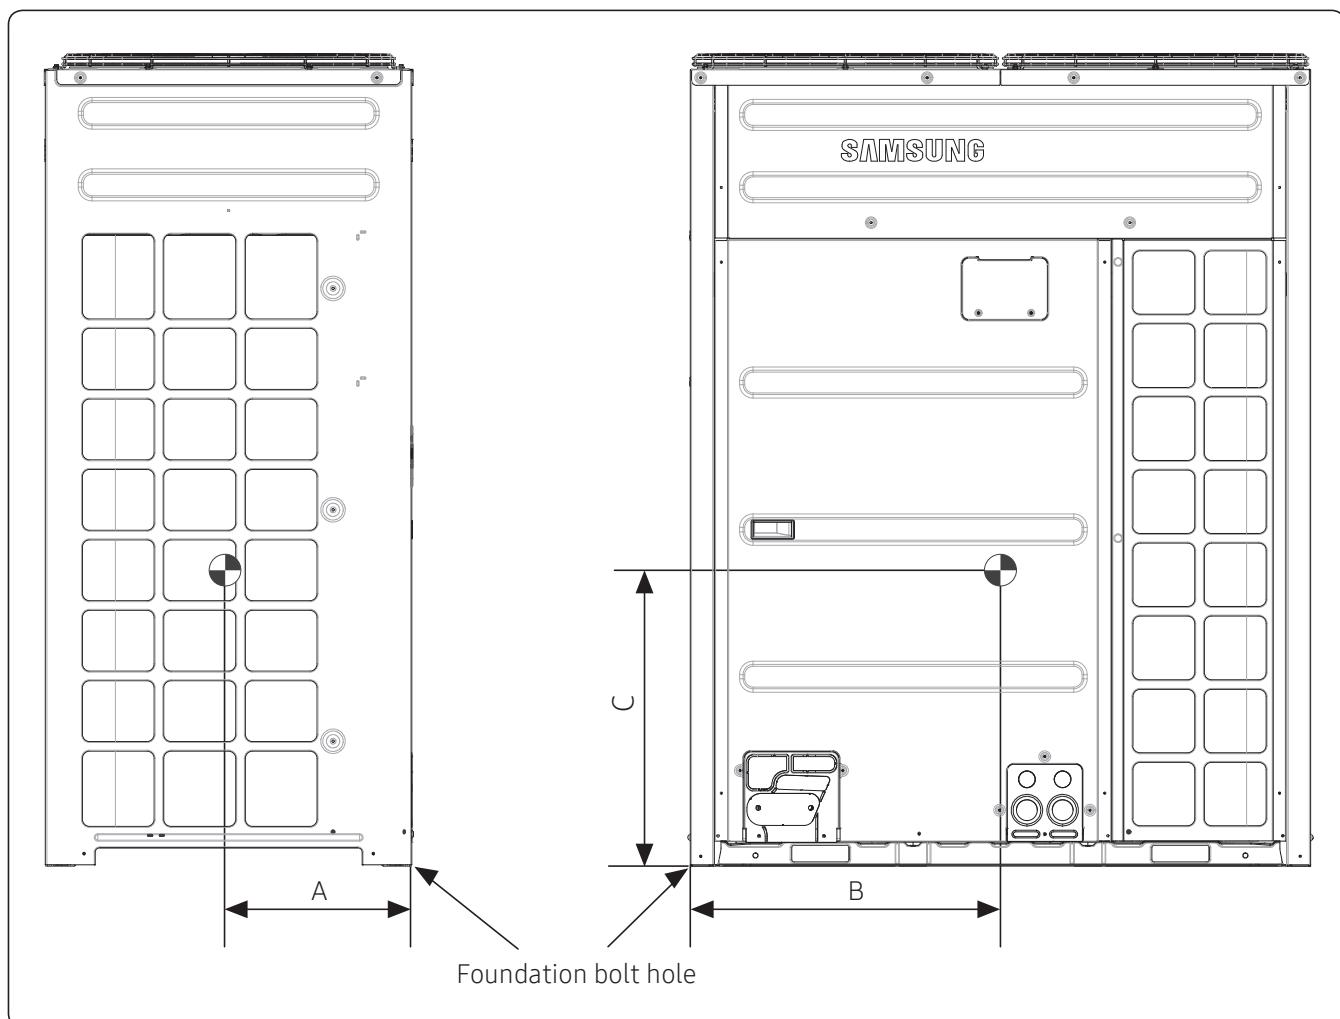


Model	A	B	C
AM140AXVGGR/EU	342[13 - 7/16]	500[19 - 11/16]	731[28 - 3/4]
AM160AXVGGR/EU AM180AXVGGR/EU AM200AXVGGR/EU	345[13 - 9/16]	502[19 - 3/4]	719[28 - 5/16]
AM220AXVGGR/EU AM240AXVGGR/EU AM260AXVGGR/EU	324[12 - 3/4]	520[20 - 1/2]	678[26 - 11/16]

# 6. Electrical Wiring Diagrams

## Outdoor unit

AM080~120AXVGGR/EU

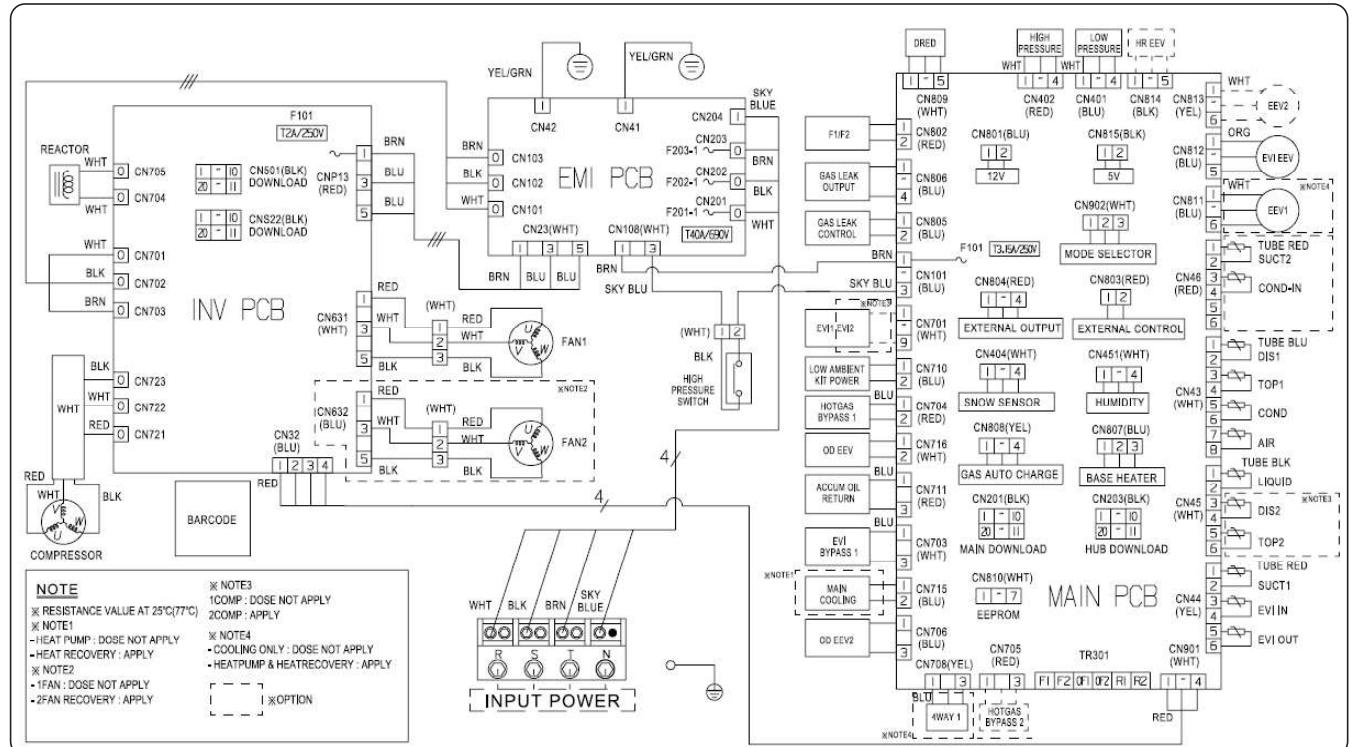

INV PCB	Printed circuit board (inverter)	EVI-OUT(10K)	Thermistor (EVI-out_10kohm)
EMI PCB	Printed circuit board (emi)	EVI-IN(10K)	Thermistor (EVI-in_10kohm)
MAIN PCB	Printed circuit board (main)	SUCT1(10K)	Thermistor (Suction Temp.1_10Kohm)
COMPRESSOR	Motor (compressor)	SUCT2(10K)	Thermistor (Suction Temp.2_10Kohm)
FAN1	Motor (fan1)	SNOW SENSOR	SNOW SENSOR
EVI V/V1	Solenode valve (EVI1)	AIR(10K)	Thermistor (Ambient Temp._10Kohm)
EVI V/V2	Solenode valve (EVI2)	COND(10K)	Thermistor (Cond Out Temp._10Kohm)
EVI EEV	Electronic expansion valve (EVI)	TOP1(200K)	Thermistor (Compressor Top 1_200Kohm)
EEV1	Electronic expansion valve 1	TOP2(200K)	Thermistor (Compressor Top 2_200Kohm)
EEV2	Electronic expansion valve 2	DIS1(200K)	Thermistor (Discharge Temp.1_200Kohm)
OD EEV V/V	Electronic expansion valve (Outdoor EEV)	DIS2(200K)	Thermistor (Discharge Temp.2_200Kohm)
HOTGAS1 BYPASS V/V	Solenoid valve (Hot Gas Bypass1)	LIQUID(10K)	Thermistor (Liquid Tube Temp._10Kohm)
EVI BYPASS1 V/V	Solenoid valve (EVI BYPASS)	F101	FUSE (INV PCB)
ACCUM OIL RETURN V/V	Solenoid valve (Accumulator Oil Return)	690V/40A	FUSE (EMI PCB)
4WAY1 V/V	Solenoid valve (4 Way valve)	MODE SELECTOR	Connector (Remote switching cool/heat selector)
MAIN COOLING	Solenoid valve (Main cooling)	EXTERNAL CONTROL	Connector (Output EXTERNAL CONTROL)
HOTGAS2 BYPASS V/V	Solenoid valve (Hot Gas Bypass2)	EXTERNAL OUTPUT	Connector (Output EXTERNAL)


### NOTE

- This wiring diagram applies only to the outdoor unit.
- Colors blk: black, red: red, blu: blue, wht: white, yel: yellow, brn: brown, sky: skyblue
- When operating, don't shortcircuit the protection device (High Pressure switch)
- For connection wiring indoor-outdoor transmission F1-F2, outdoor\_outdoor transmission OF1-OF2, refer to the installation manual.
- Protective earth(screw), : connector, : The wire quantity

# 6. Electrical Wiring Diagrams

## Outdoor unit

AM140~160AXVGGR/EU

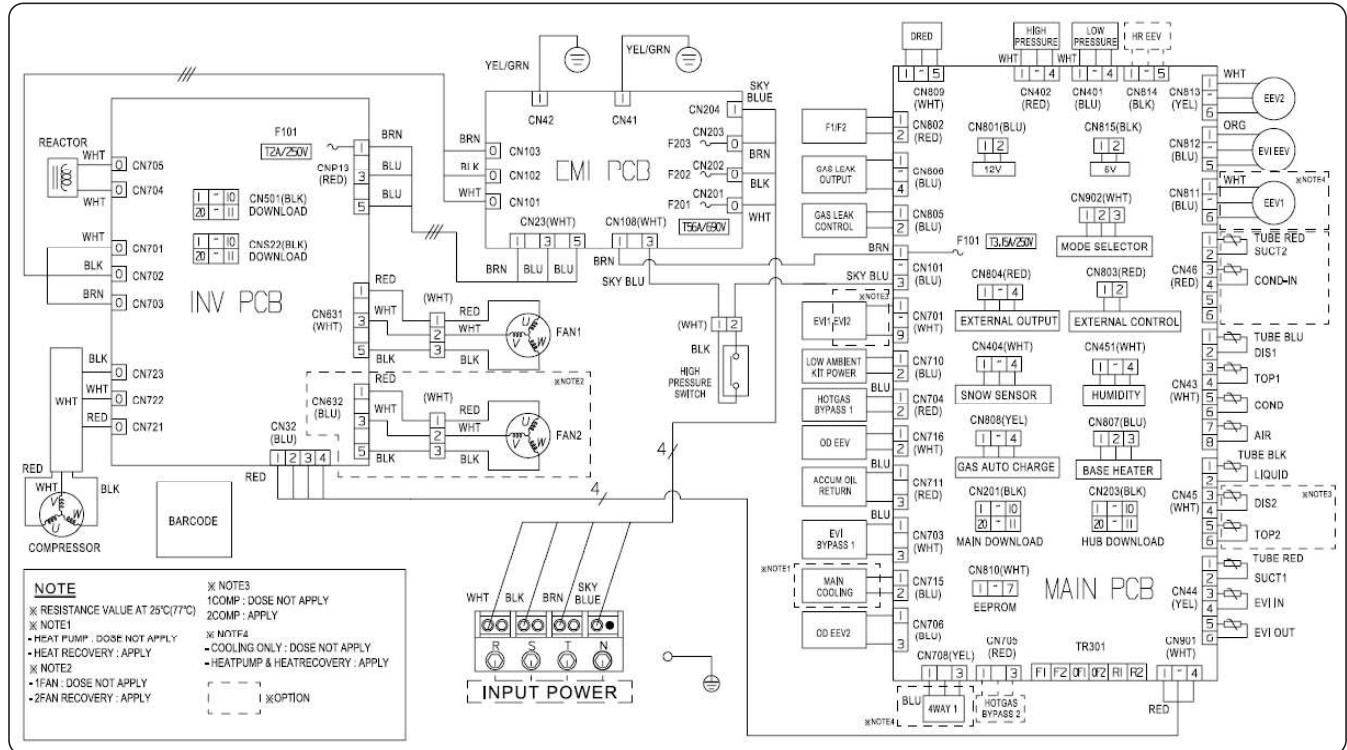

INV PCB	Printed circuit board (inverter)	EVI-OUT(10K)	Thermistor (EVI-out_10kohm)
EMI PCB	Printed circuit board (emi)	EVI-IN(10K)	Thermistor (EVI-in_10kohm)
MAIN PCB	Printed circuit board (main)	SUCT1(10K)	Thermistor (Suction Temp.1_10Kohm)
COMPRESSOR	Motor (compressor)	SUCT2(10K)	Thermistor (Suction Temp.2_10Kohm)
FAN1	Motor (fan1)	SNOW SENSOR	SNOW SENSOR
FAN2	Motor (fan2)	AIR(10K)	Thermistor (Ambient Temp._10Kohm)
EVI V/V1	Solenode valve (EVI1)	COND(10K)	Thermistor (Cond Out Temp._10Kohm)
EVI V/V2	Solenode valve (EVI2)	TOP1(200K)	Thermistor (Compressor Top 1_200Kohm)
EVI EEV	Electronic expansion valve (EVI)	TOP2(200K)	Thermistor (Compressor Top 2_200Kohm)
EEV1	Electronic expansion valve 1	DIS1(200K)	Thermistor (Discharge Temp.1_200Kohm)
EEV2	Electronic expansion valve 2	DIS2(200K)	Thermistor (Discharge Temp.2_200Kohm)
OD EEV V/V	Electronic expansion valve (Outdoor EEV)	LIQUID(10K)	Thermistor (Liquid Tube Temp._10Kohm)
HOTGAS1 BYPASS V/V	Solenoid valve (Hot Gas Bypass1)	F101	FUSE (INV PCB)
EVI BYPASS1 V/V	Solenoid valve (EVI BYPASS)	690V/56A	FUSE (EMI PCB)
ACCUM OIL RETURN V/V	Solenoid valve (Accumulator Oil Return)	MODE SELECTOR	Connector (Remote switching cool/heat selector)
4WAY1 V/V	Solenoid valve (4 Way valve)	EXTERNAL CONTROL	Connector (Output EXTERNAL CONTROL)
MAIN COOLING	Solenoid valve (Main cooling)	EXTERNAL OUTPUT	Connector (Output EXTERNAL)
HOTGAS2 BYPASS V/V	Solenoid valve (Hot Gas Bypass2)		


### NOTE

- This wiring diagram applies only to the outdoor unit.
- Colors blk: black, red: red, blu: blue, wht: white, yel: yellow, brn: brown, sky: skyblue
- When operating, don't shortcircuit the protection device (High Pressure switch)
- For connection wiring indoor-outdoor transmission F1-F2, outdoor\_outdoor transmission OF1-OF2, refer to the installation manual.
- Protective earth(screw), : connector, : The wire quantity

# 6. Electrical Wiring Diagrams

## Outdoor unit


AM180~200AXVGGR/EU

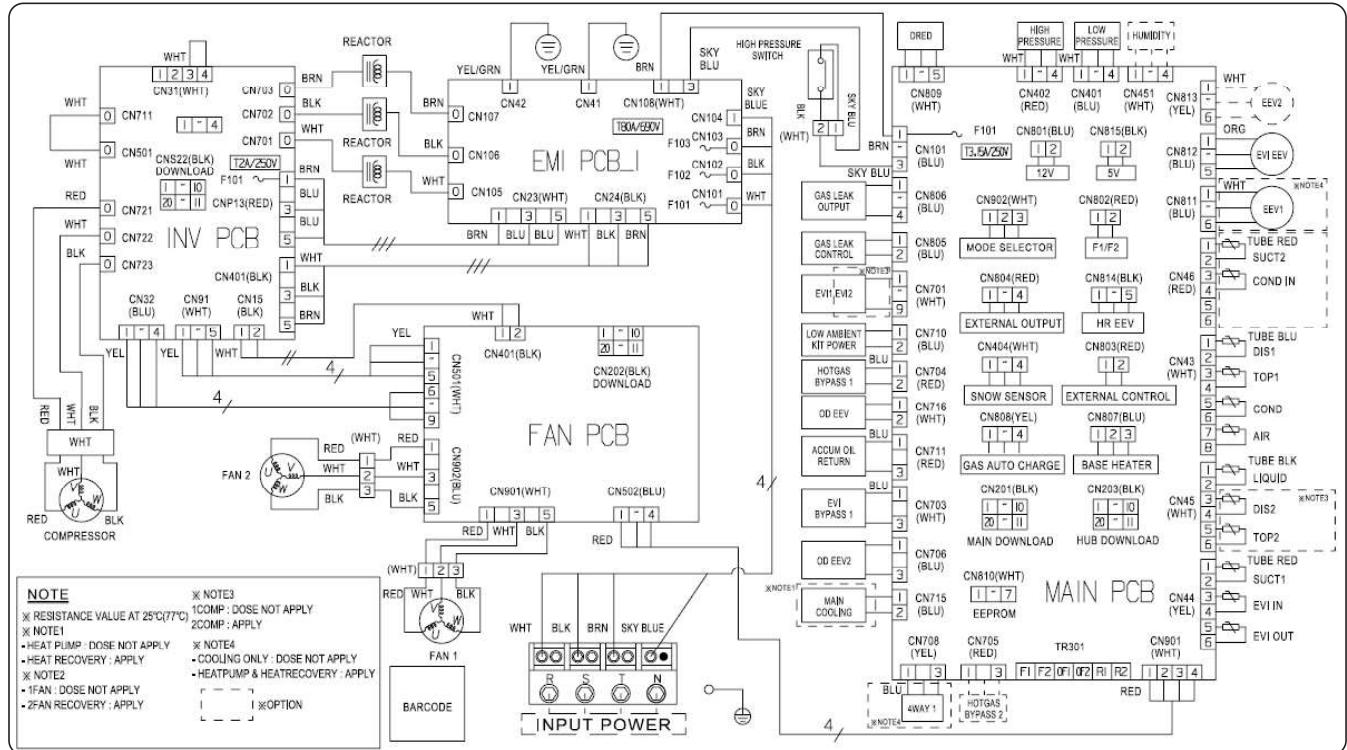

# 6. Electrical Wiring Diagrams

## Outdoor unit

AM220AXVGGR/EU

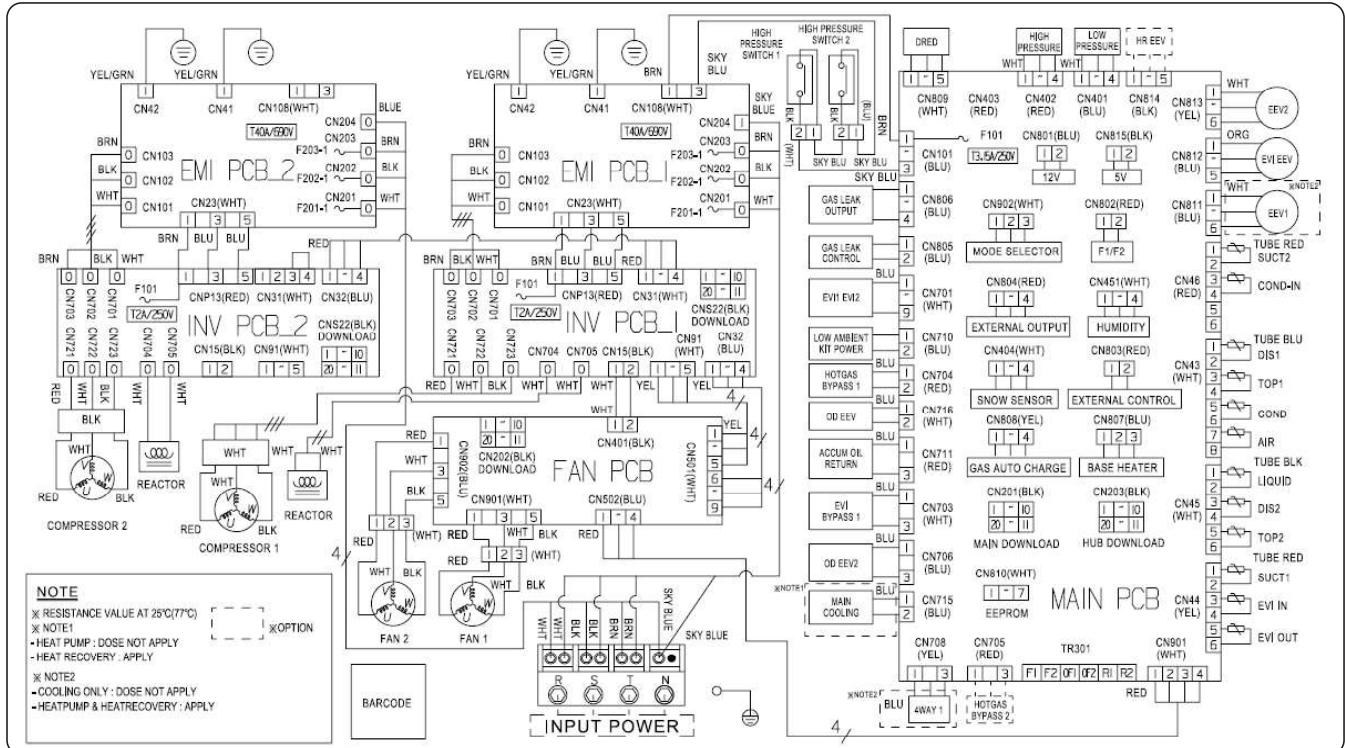

INV PCB1	Printed circuit board (inverter1)	EEV1	Electronic expansion valve 1
INV PCB2	Printed circuit board (inverter2)	EEV2	Electronic expansion valve 2
EMI PCB1	Printed circuit board (emi1)	EVI-OUT(10K)	Thermistor (EVI-out_10kohm)
EMI PCB2	Printed circuit board (emi2)	EVI-IN(10K)	Thermistor (EVI-in_10kohm)
FAN PCB	Printed circuit board (fan motor)	SUCT1(10K)	Thermistor (Suction Temp.1_10Kohm)
MAIN PCB	Printed circuit board (main)	SUCT2(10K)	Thermistor (Suction Temp.2_10Kohm)
COMPRESSOR1	Motor (compressor1)	COND IN(10K)	Thermistor (Cond In Temp._10Kohm)
COMPRESSOR2	Motor (compressor2)	AIR(10K)	Thermistor (Ambient Temp._10Kohm)
FAN1	Motor (fan1)	COND(10K)	Thermistor (Cond Out Temp._10Kohm)
FAN2	Motor (fan2)	TOP1(200K)	Thermistor (Compressor Top 1_200Kohm)
EVI V/V1	Solenode valve (EVI1)	TOP2(200K)	Thermistor (Compressor Top 2_200Kohm)
EVI V/V2	Solenode valve (EVI2)	DIS1(200K)	Thermistor (Discharge Temp.1_200Kohm)
EVI EEV	Electronic expansion valve (EVI)	DIS2(200K)	Thermistor (Discharge Temp.2_200Kohm)
SNOW SENSOR	SNOW SENSOR	HOTGAS2 BYPASS V/V	Solenoid valve (Hot Gas Bypass2)
LIQUID(10K)	Thermistor (Liquid Tube Temp._10Kohm)	OD EEV V/V	Electronic expansion valve (Outdoor EEV)
HOTGAS1 BYPASS V/V	Solenoid valve (Hot Gas Bypass1)	F101	FUSE (INV PCB)
EVI BYPASS1 V/V	Solenoid valve (EVI BYPASS)	690V/40A	FUSE (EMI PCB)
ACCUM OIL RETURN V/V	Solenoid valve (Accumulator Oil Return)	MODE SELECTOR	Connector (Remote switching cool/heat selector)
4WAY1 V/V	Solenoid valve (4 Way valve)	EXTERNAL CONTROL	Connector (Output EXTERNAL CONTROL)
MAIN COOLING	Solenoid valve (Main cooling)	EXTERNAL OUTPUT	Connector (Output EXTERNAL OUTPUT)


### NOTE

- This wiring diagram applies only to the outdoor unit.
- Colors blk: black, red: red, blu: blue, wht: white, yel: yellow, brn: brown, sky: skyblue
- When operating, don't shortcircuit the protection device (High Pressure switch)
- For connection wiring indoor-outdoor transmission F1-F2, outdoor\_outdoor transmission OF1-OF2, refer to the installation manual.
- Protective earth(screw), : connector, : The wire quantity

# 6. Electrical Wiring Diagrams

## Outdoor unit

AM240~260AXVGGR/EU

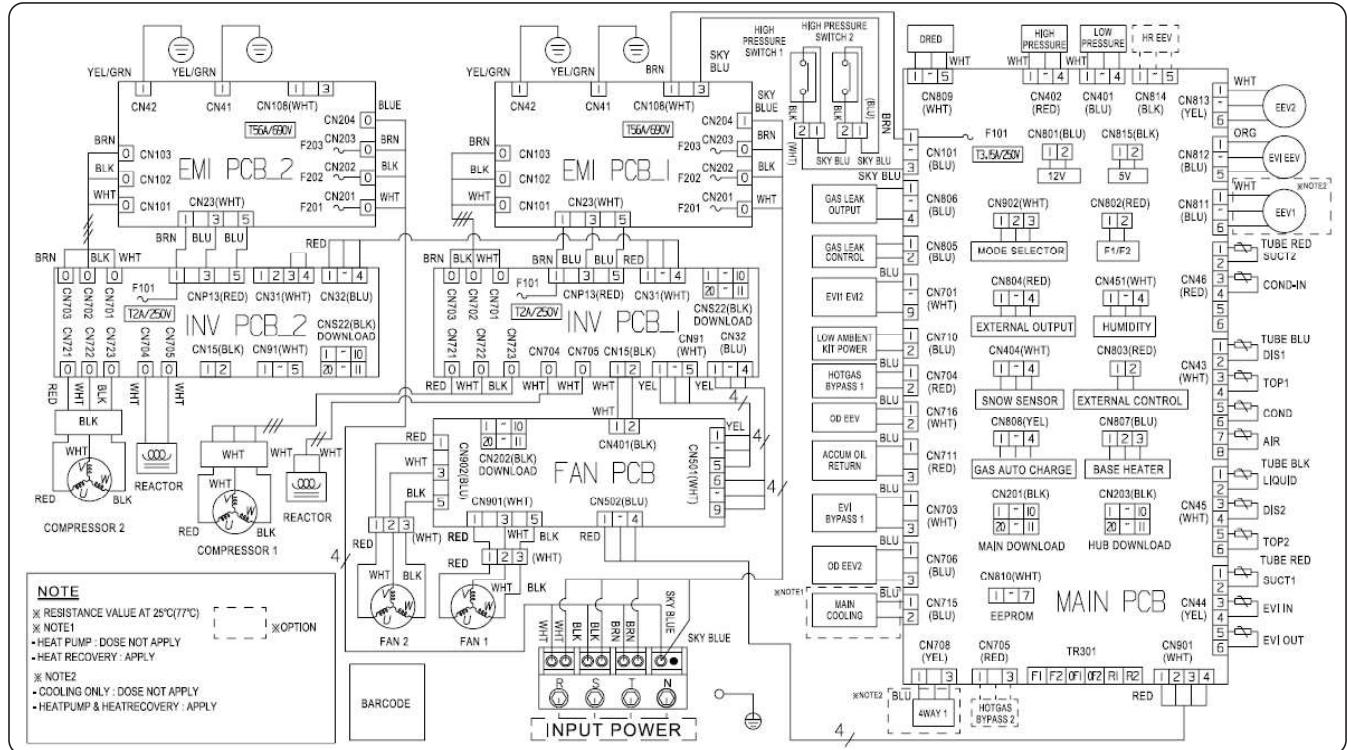


INV PCB1	Printed circuit board (inverter1)	EEV1	Electronic expansion valve 1
INV PCB2	Printed circuit board (inverter2)	EEV2	Electronic expansion valve 2
EMI PCB1	Printed circuit board (emi1)	EVI-OUT(10K)	Thermistor (EVI-out_10kohm)
EMI PCB2	Printed circuit board (emi2)	EVI-IN(10K)	Thermistor (EVI-in_10kohm)
FAN PCB	Printed circuit board (fan motor)	SUCT1(10K)	Thermistor (Suction Temp.1_10Kohm)
MAIN PCB	Printed circuit board (main)	SUCT2(10K)	Thermistor (Suction Temp.2_10Kohm)
COMPRESSOR1	Motor (compressor1)	COND IN(10K)	Thermistor (Cond In Temp._10Kohm)
COMPRESSOR2	Motor (compressor2)	AIR(10K)	Thermistor (Ambient Temp._10Kohm)
FAN1	Motor (fan1)	COND(10K)	Thermistor (Cond Out Temp._10Kohm)
FAN2	Motor (fan2)	TOP1(200K)	Thermistor (Compressor Top 1_200Kohm)
EVI V/V1	Solenode valve (EVI1)	TOP2(200K)	Thermistor (Compressor Top 2_200Kohm)
EVI V/V2	Solenode valve (EVI2)	DIS1(200K)	Thermistor (Discharge Temp.1_200Kohm)
EVI EEV	Electronic expansion valve (EVI)	DIS2(200K)	Thermistor (Discharge Temp.2_200Kohm)
SNOW SENSOR	SNOW SENSOR	HOTGAS2 BYPASS V/V	Solenoid valve (Hot Gas Bypass2)
LIQUID(10K)	Thermistor (Liquid Tube Temp._10Kohm)	OD EEV V/V	Electronic expansion valve (Outdoor EEV)
HOTGAS1 BYPASS V/V	Solenoid valve (Hot Gas Bypass1)	F101	FUSE (INV PCB)
EVI BYPASS1 V/V	Solenoid valve (EVI BYPASS)	690V/56A	FUSE (EMI PCB)
ACCUM OIL RETURN V/V	Solenoid valve (Accumulator Oil Return)	MODE SELECTOR	Connector (Remote switching cool/heat selector)
4WAY1 V/V	Solenoid valve (4 Way valve)	EXTERNAL CONTROL	Connector (Output EXTERNAL CONTROL)
MAIN COOLING	Solenoid valve (Main cooling)	EXTERNAL OUTPUT	Connector (Output EXTERNAL)

### NOTE

- This wiring diagram applies only to the outdoor unit.
- Colors blk: black, red: red, blu: blue, wht: white, yel: yellow, brn: brown, sky: skyblue
- When operating, don't shortcircuit the protection device (High Pressure switch)
- For connection wiring indoor-outdoor transmission F1-F2, outdoor\_outdoor transmission OF1-OF2, refer to the installation manual.
- Protective earth(screw), : connector, : The wire quantity


# 7. Sound Data

## Sound Pressure level

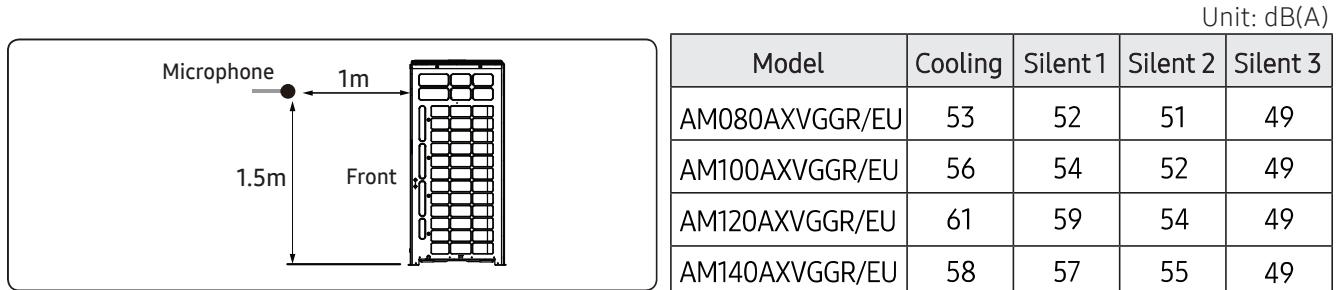


- NR Curve


1) AM080AXVGGR/EU

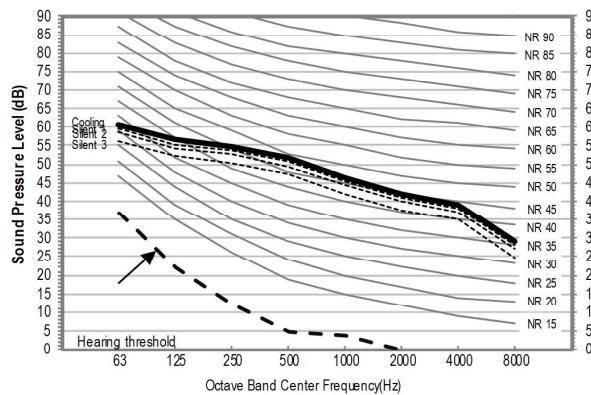


2) AM100AXVGGR/EU

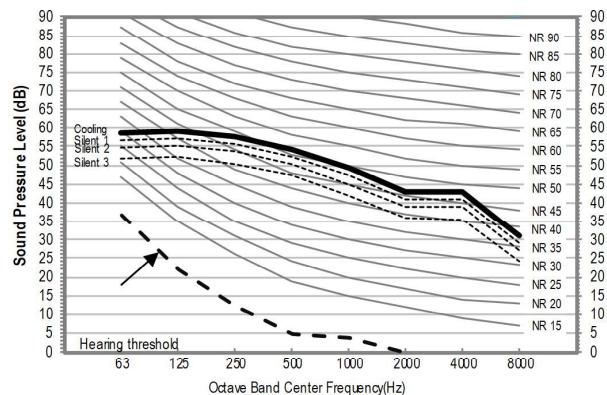

3) AM120AXVGGR/EU

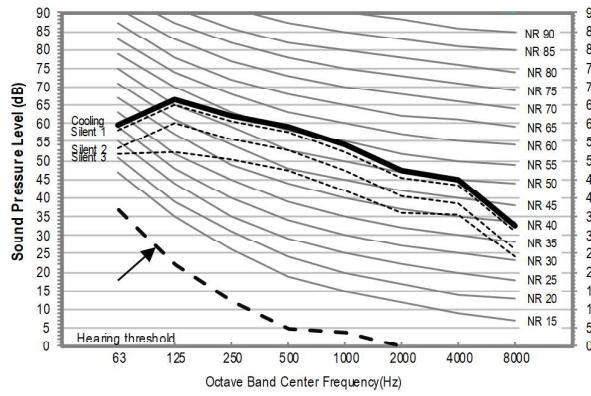

4) AM140AXVGGR/EU

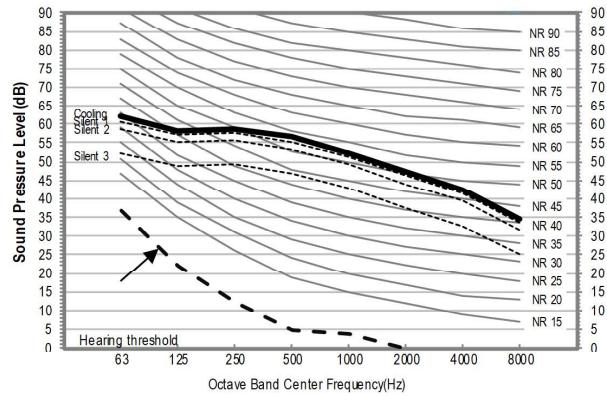


### NOTE

- Specifications may be subject to change without prior notice.
  - Sound pressure level is obtained in an anechoic room.
  - Sound pressure level is a relative value, depending on the distance and acoustic environment.
  - Sound pressure level may differ depending on operation condition.
  - dBA = A-weighted sound pressure level
  - Reference acoustic pressure 0 dB = 20μPa


# 7. Sound Data

## Sound Pressure level

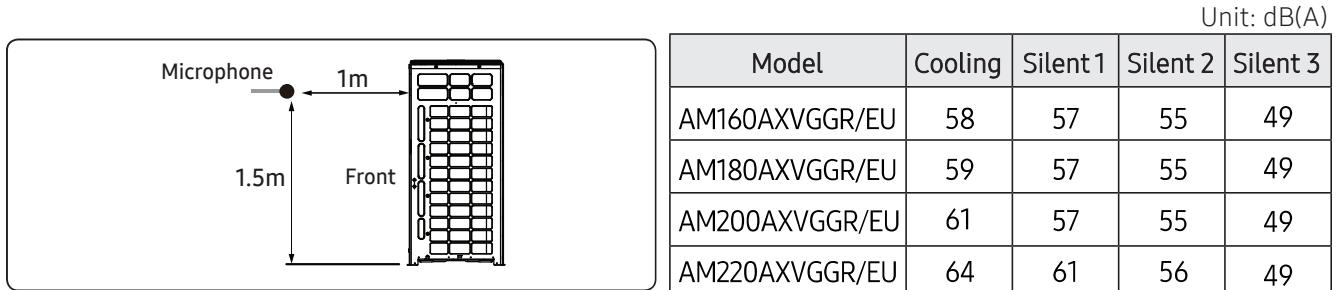


- NR Curve


1) AM160AXVGGR/EU

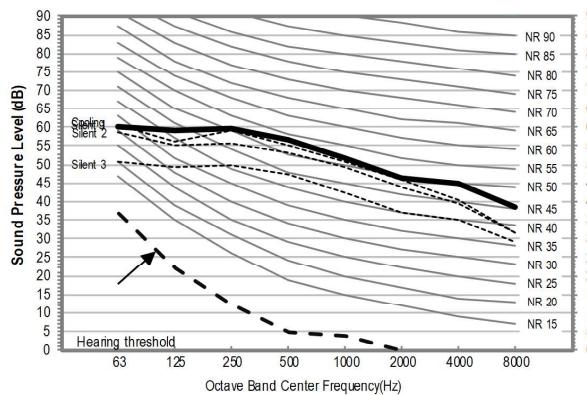


2) AM180AXVGGR/EU

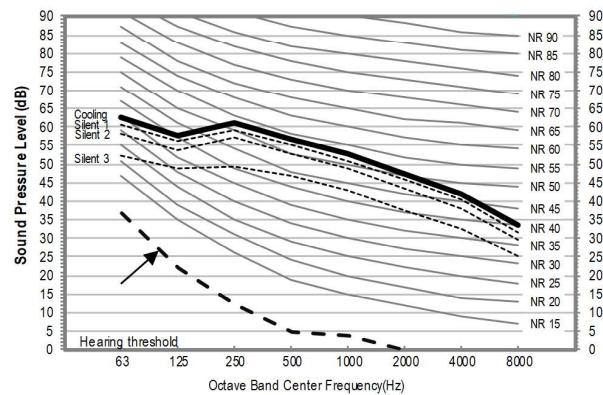

3) AM200AXVGGR/EU

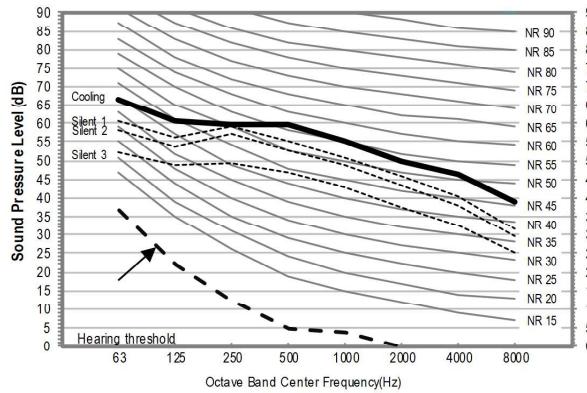

4) AM220AXVGGR/EU

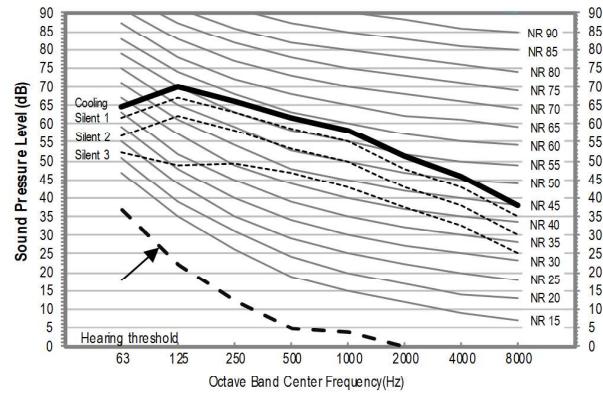


### NOTE

- Specifications may be subject to change without prior notice.
  - Sound pressure level is obtained in an anechoic room.
  - Sound pressure level is a relative value, depending on the distance and acoustic environment.
  - Sound pressure level may differ depending on operation condition.
  - dBA = A-weighted sound pressure level
  - Reference acoustic pressure 0 dB = 20μPa

# 7. Sound Data

## Sound Pressure level


Unit: dB(A)

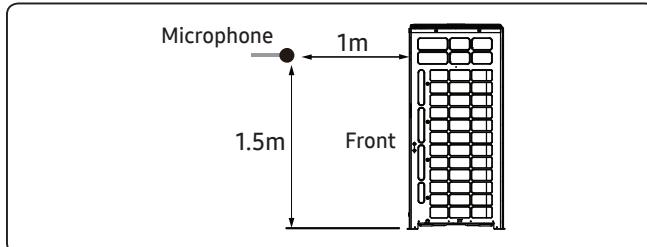


Model	Cooling	Silent 1	Silent 2	Silent 3
AM240AXVGGR/EU	65	62	57	49
AM260AXVGGR/EU	65	62	57	49

- NR Curve

1) AM240AXVGGR/EU

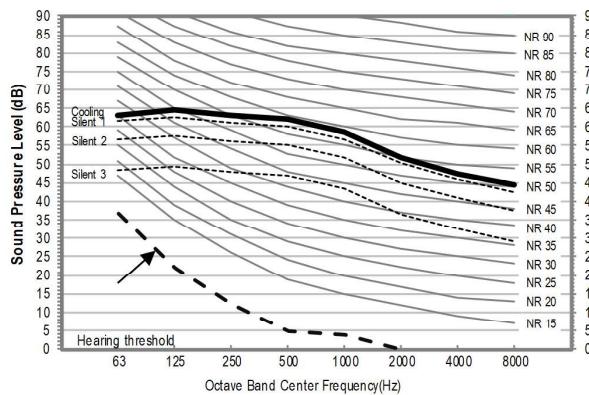

2) AM260AXVGGR/EU

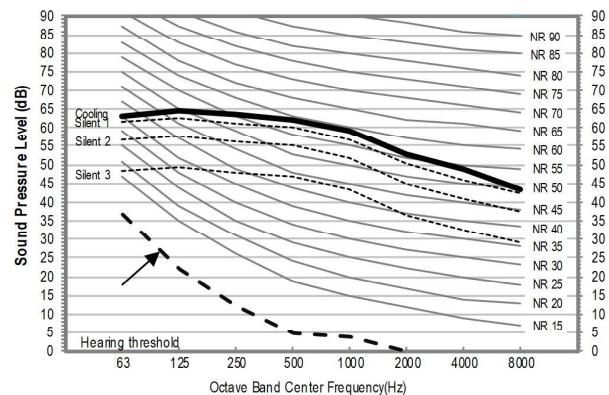

### NOTE

- Specifications may be subject to change without prior notice.
  - Sound pressure level is obtained in an anechoic room.
  - Sound pressure level is a relative value, depending on the distance and acoustic environment.
  - Sound pressure level may differ depending on operation condition.
  - dBA = A-weighted sound pressure level
  - Reference acoustic pressure 0 dB = 20µPa

# 7. Sound Data


## Sound Power level

Unit: dB(A)


Model	Power
AM080AXVGGR/EU	75
AM100AXVGGR/EU	78
AM120AXVGGR/EU	81
AM140AXVGGR/EU	81

- NR Curve


1) AM080AXVGGR/EU

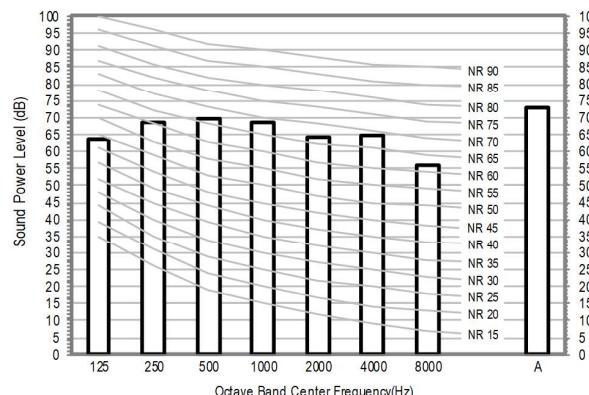


2) AM100AXVGGR/EU

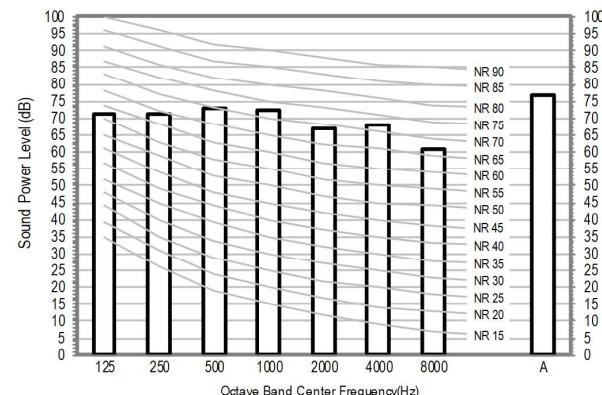

3) AM120AXVGGR/EU

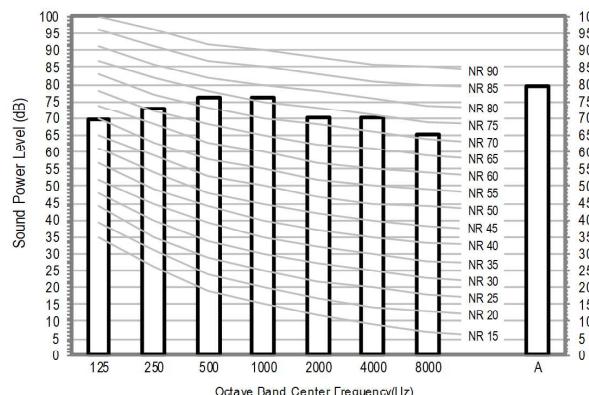

4) AM140AXVGGR/EU

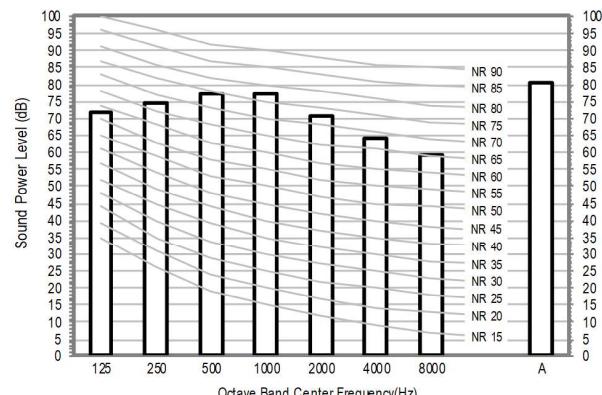

### NOTE

- Specifications may be subject to change without prior notice.
  - Sound power level is an absolute value that a sound source generates.
  - dBA = A-weighted sound power level.
  - Reference power : 1pW.
  - Measured according to ISO 3741.


# 7. Sound Data

## Sound Power level

Unit: dB(A)

Model	Power
.....	81 ..
.....	81 ..
.....	84 ..
.....	86 ..

- NR Curve

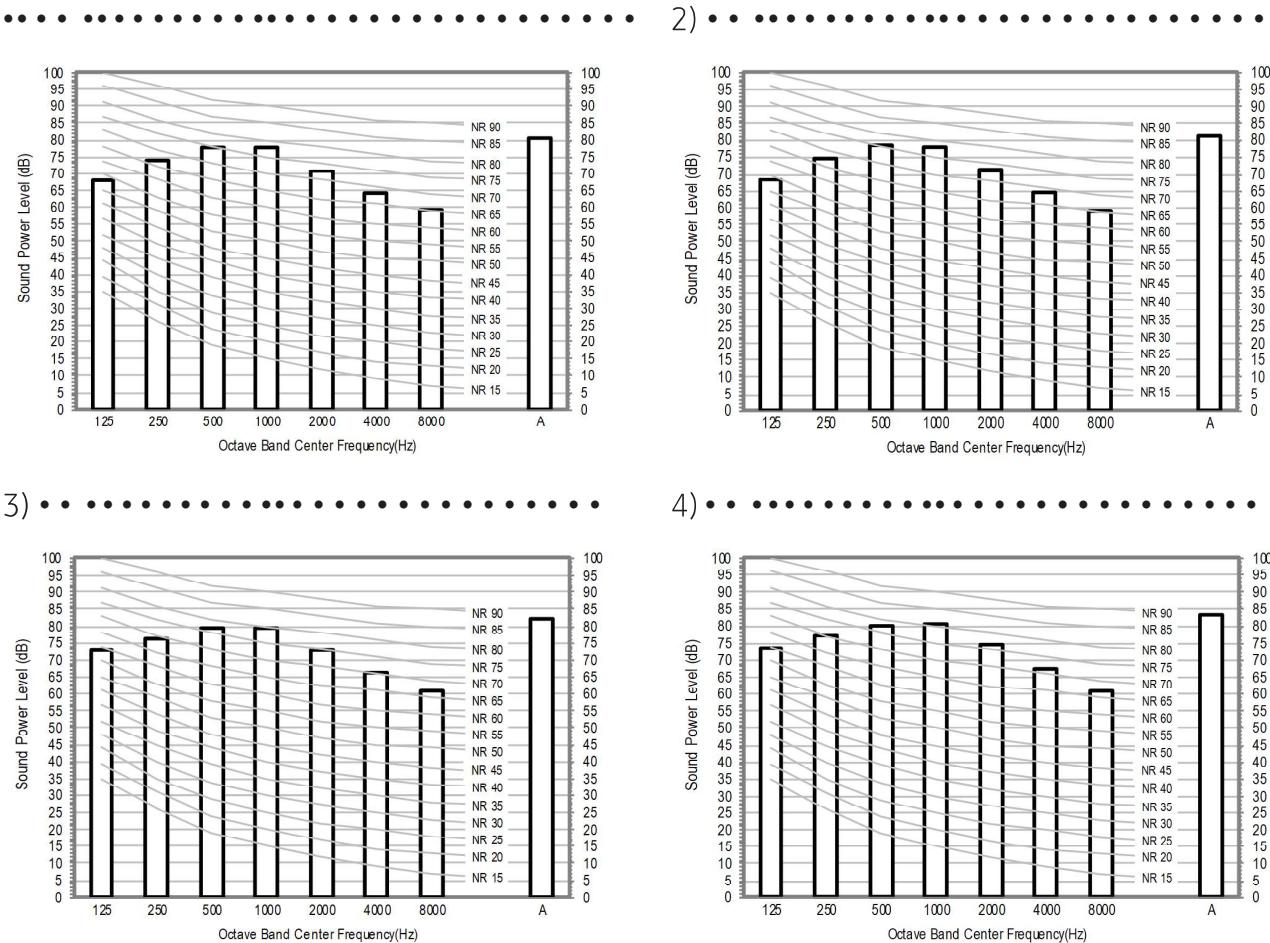

### NOTE

- Specifications may be subject to change without prior notice.
  - Sound power level is an absolute value that a sound source generates.
  - dBA = A-weighted sound power level.
  - Reference power: 1pW.
  - Measured according to ISO 3741.

# 7. Sound Data


## Sound Power level

Unit: dB(A)


Model	Power
AM240AXVGGR/EU	87
AM260AXVGGR/EU	87

- NR Curve

1) AM240AXVGGR/EU

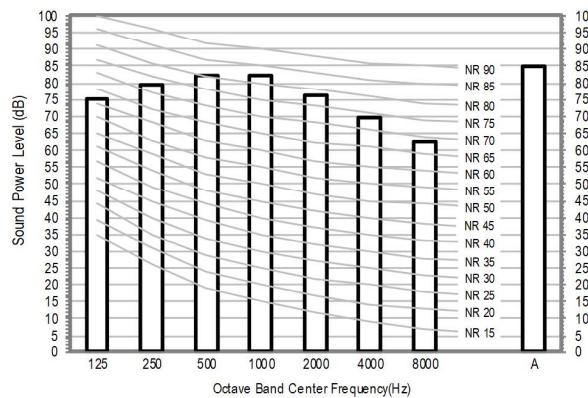

2) AM260AXVGGR/EU

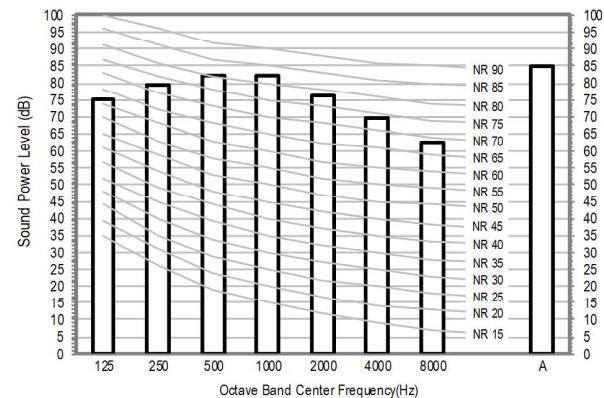


### NOTE


- Specifications may be subject to change without prior notice.
  - Sound power level is an absolute value that a sound source generates.
  - dBA = A-weighted sound power level.
  - Reference power : 1pW.
  - Measured according to ISO 3741.

## 8. Operation Range

### Cooling

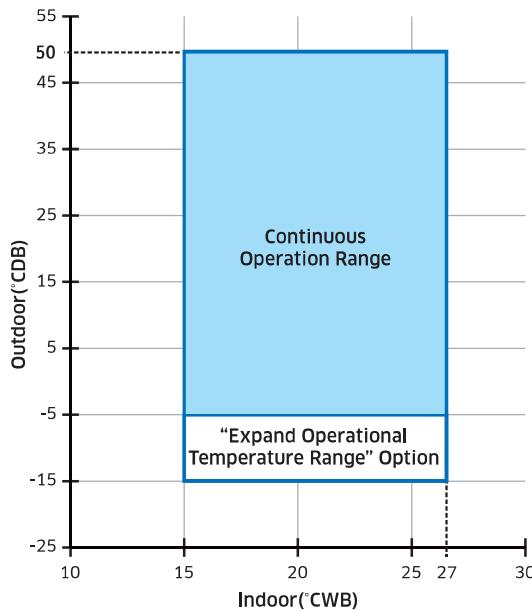

### Heating

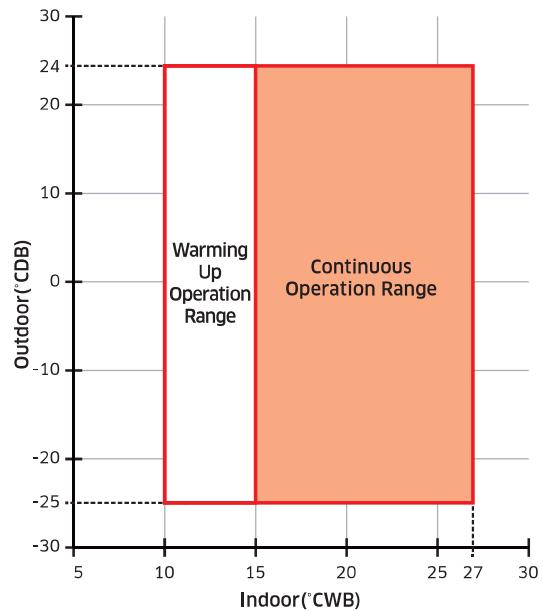

- (1) The operating range is shown in these figures
- (2) The assumed installation conditions are as follows
  - Outdoor units and indoor units combination
  - The Pipe length(including elbow) is 5m
  - The Level difference is 0m
- (3) In the low temperature expansion option application, the cooling operating is possible under expand operational range only for HR system
- (4) In case of heatlng mode, operating is possible under warming up operation range. However continu opearting is impossible due to a protection control

# 8. Operation Range

## Defrosting correction factor

The heating capacity tables do not take account of the reduction in capacity, when frost has accumulated or while the defrosting operation is in progress.

The capacity values, which take these factors into account, in other words, the integrated heating capacity values, can be calculated as follows :


Formula :  $A = B \times C$

Integrated heating capacity = A

Value given in table of capacity characteristics = B

Integrating correction factor for frost accumulation (kW) = C

Outdoor temperature (°C, DB/WB)	-10/-10.4	-8/-8.5	-6/-6.5	-4/-4.6	-2/-2.7	0/-0.7	2/1.2	5/4.1	7/6
Capacity coefficient	0.99	0.98	0.96	0.95	0.91	0.88	0.86	0.91	1.00

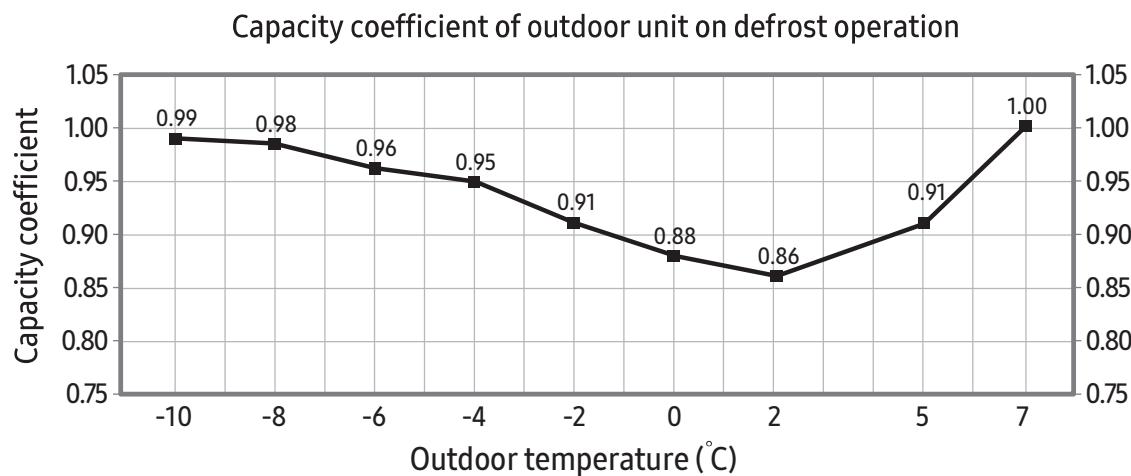

On heating operation, frost can be formed on heat exchanger according to outdoor temperature.

(Frost on heat exchanger results in decreasing the performance.)

To remove frost on heat exchanger of outdoor unit, defrost operation is carried out periodically.

During defrost operation, capacity of outdoor unit may decrease.

The decrement is not considered to the individual capacity tables.

This figure shows an effect of intelligence defrost operation

It is actually the frost occurrence section from 0 °C or less.


Since the outdoor temperature over 0 °C, the heating performance is the same before and after applying intelligence defrost operation

In outdoor conditions below 0 °C, frost conditions reflect the actual entering the defrost operation because heating performance is improved

# 9. Piping Diagram

## Outdoor unit


(1) AM080~120AXVGGR

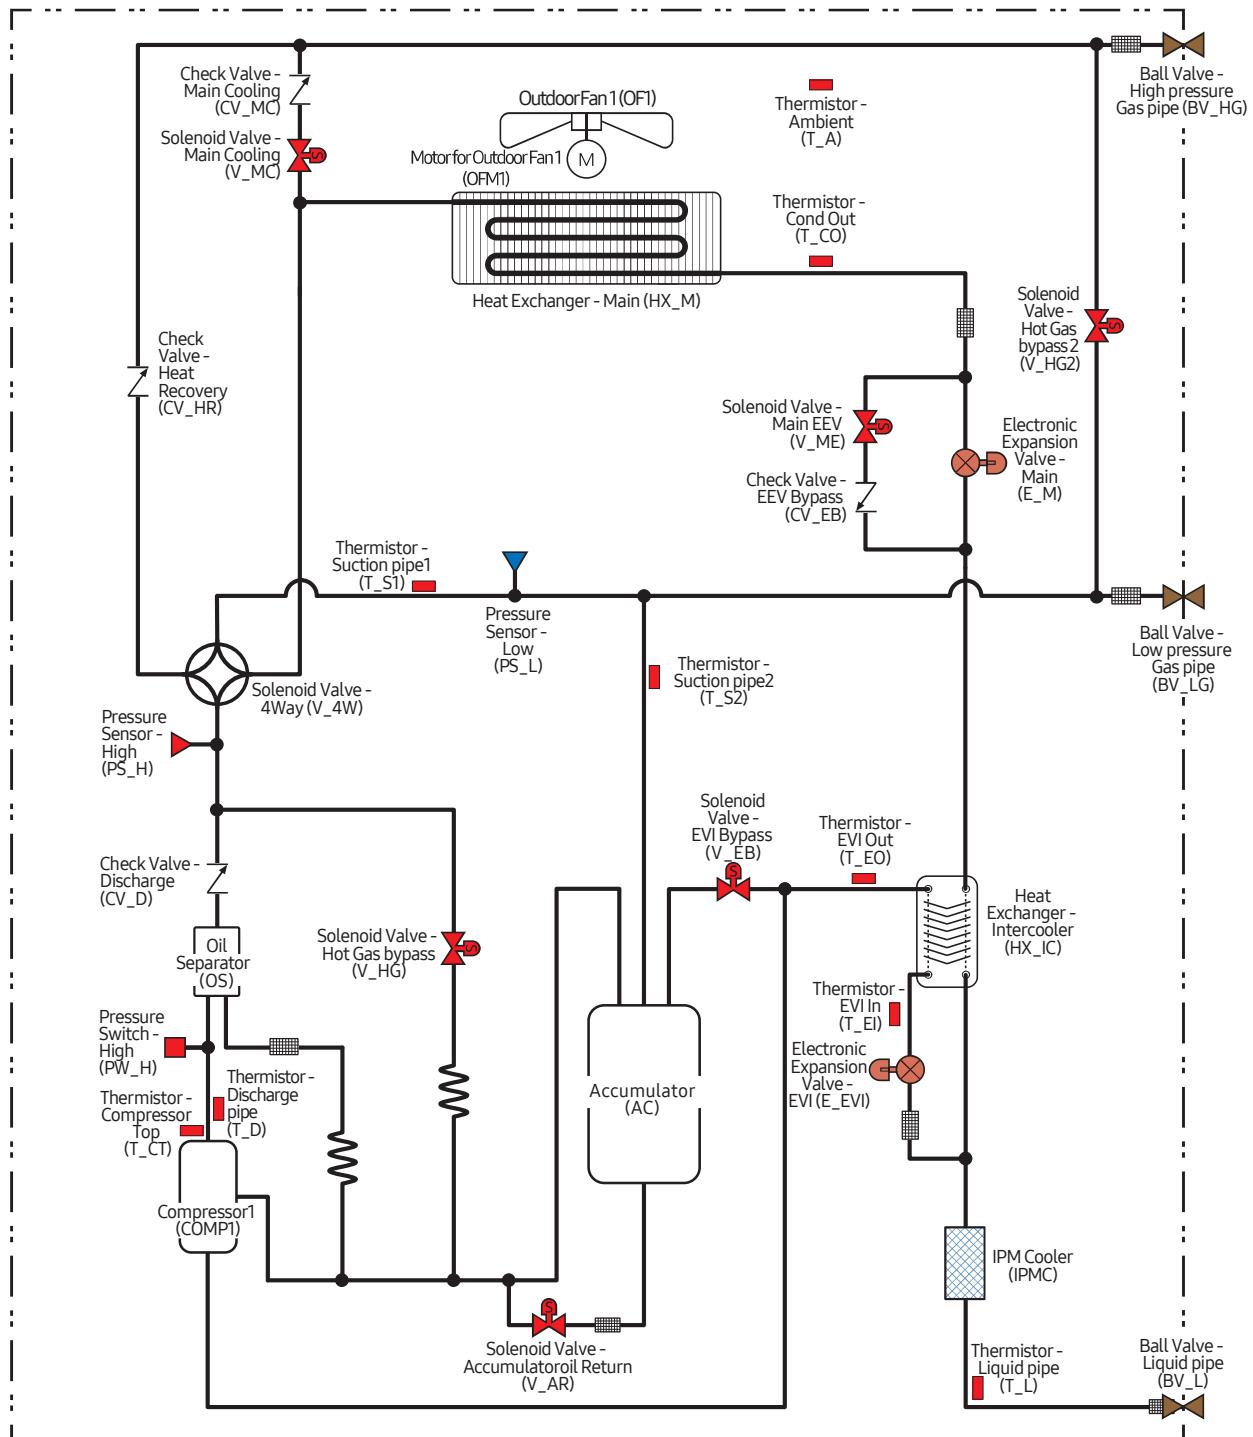

# 9. Piping Diagram

## Outdoor unit


(2) AM140~200AXVGGR

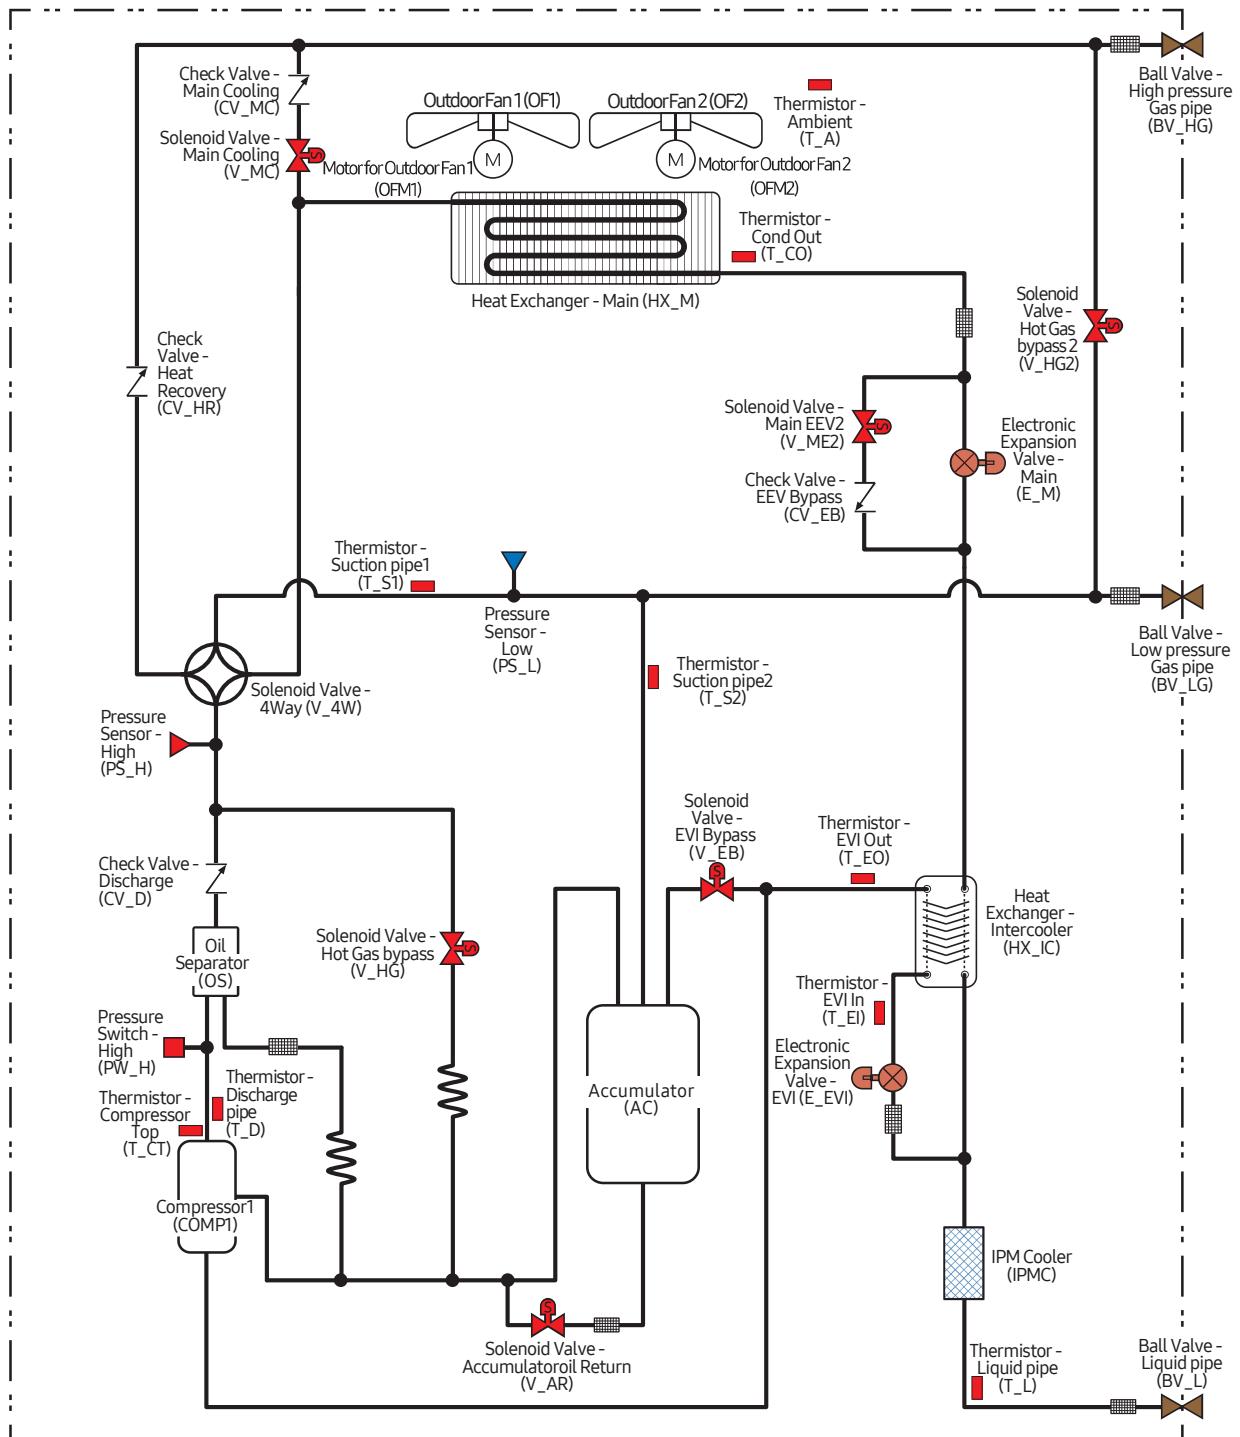

# 9. Piping Diagram

## Outdoor unit


(3) AM220AXVGGR

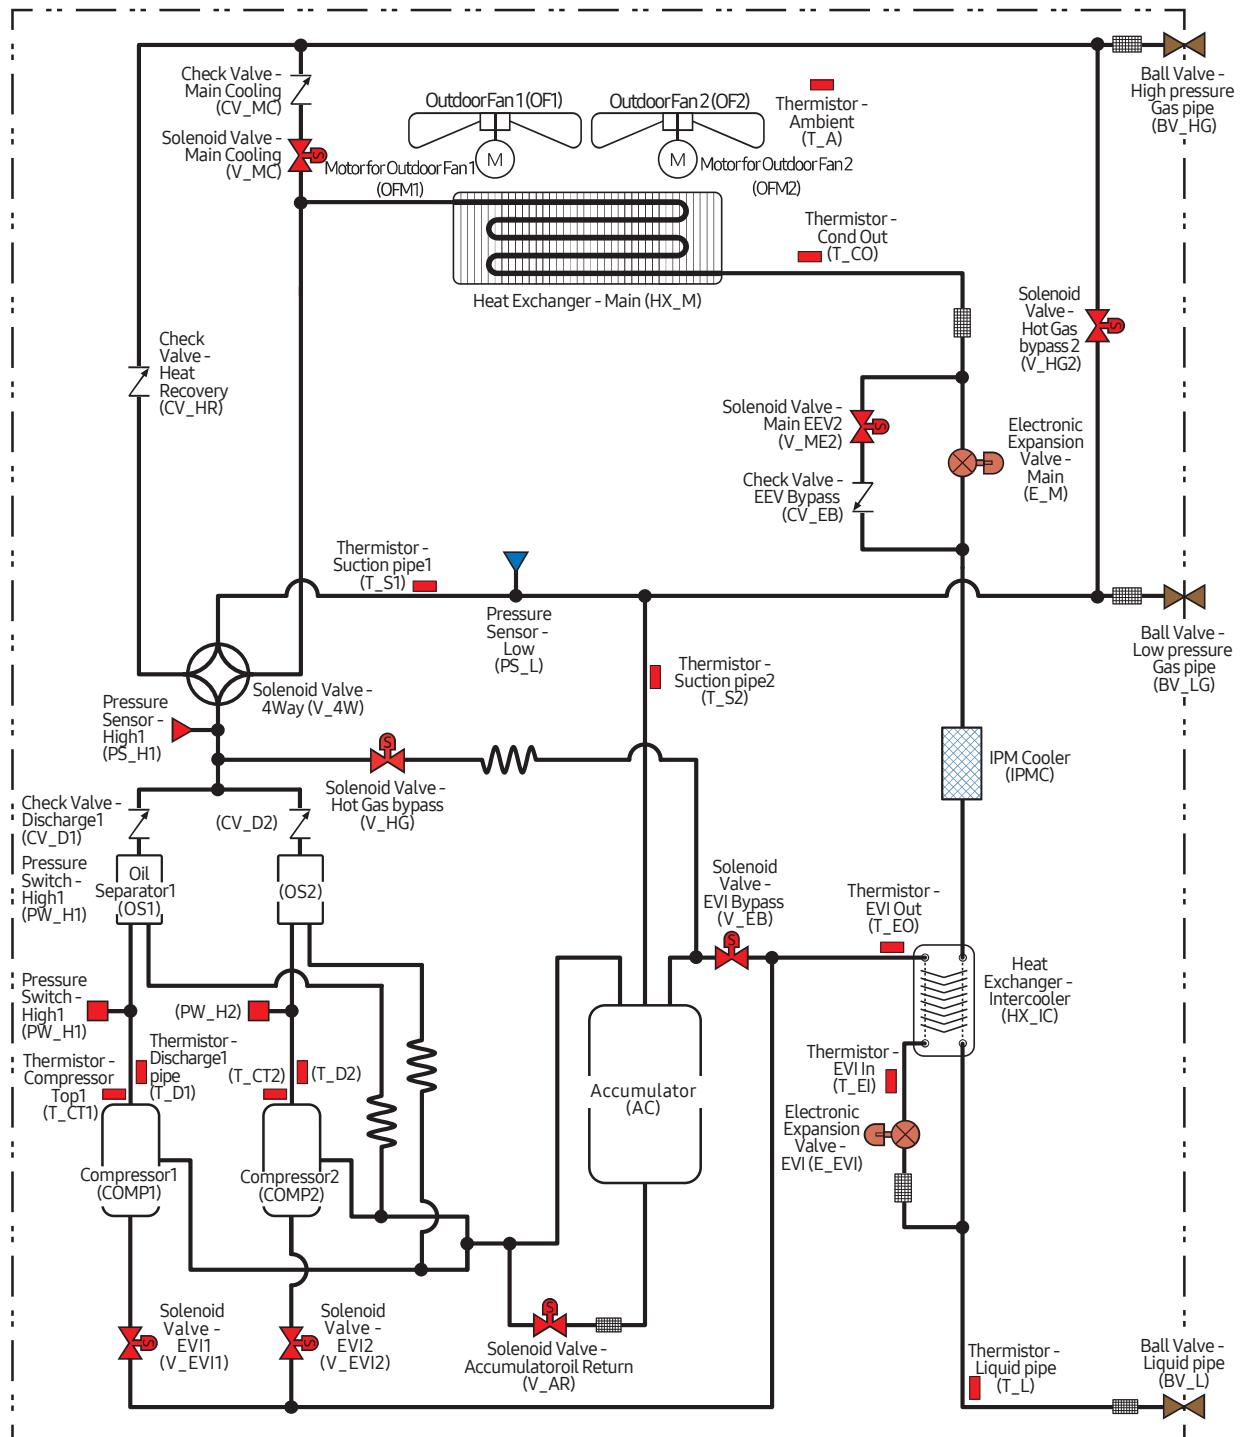

# 9. Piping Diagram

## Outdoor unit


(4) AM240~260AXVGGR

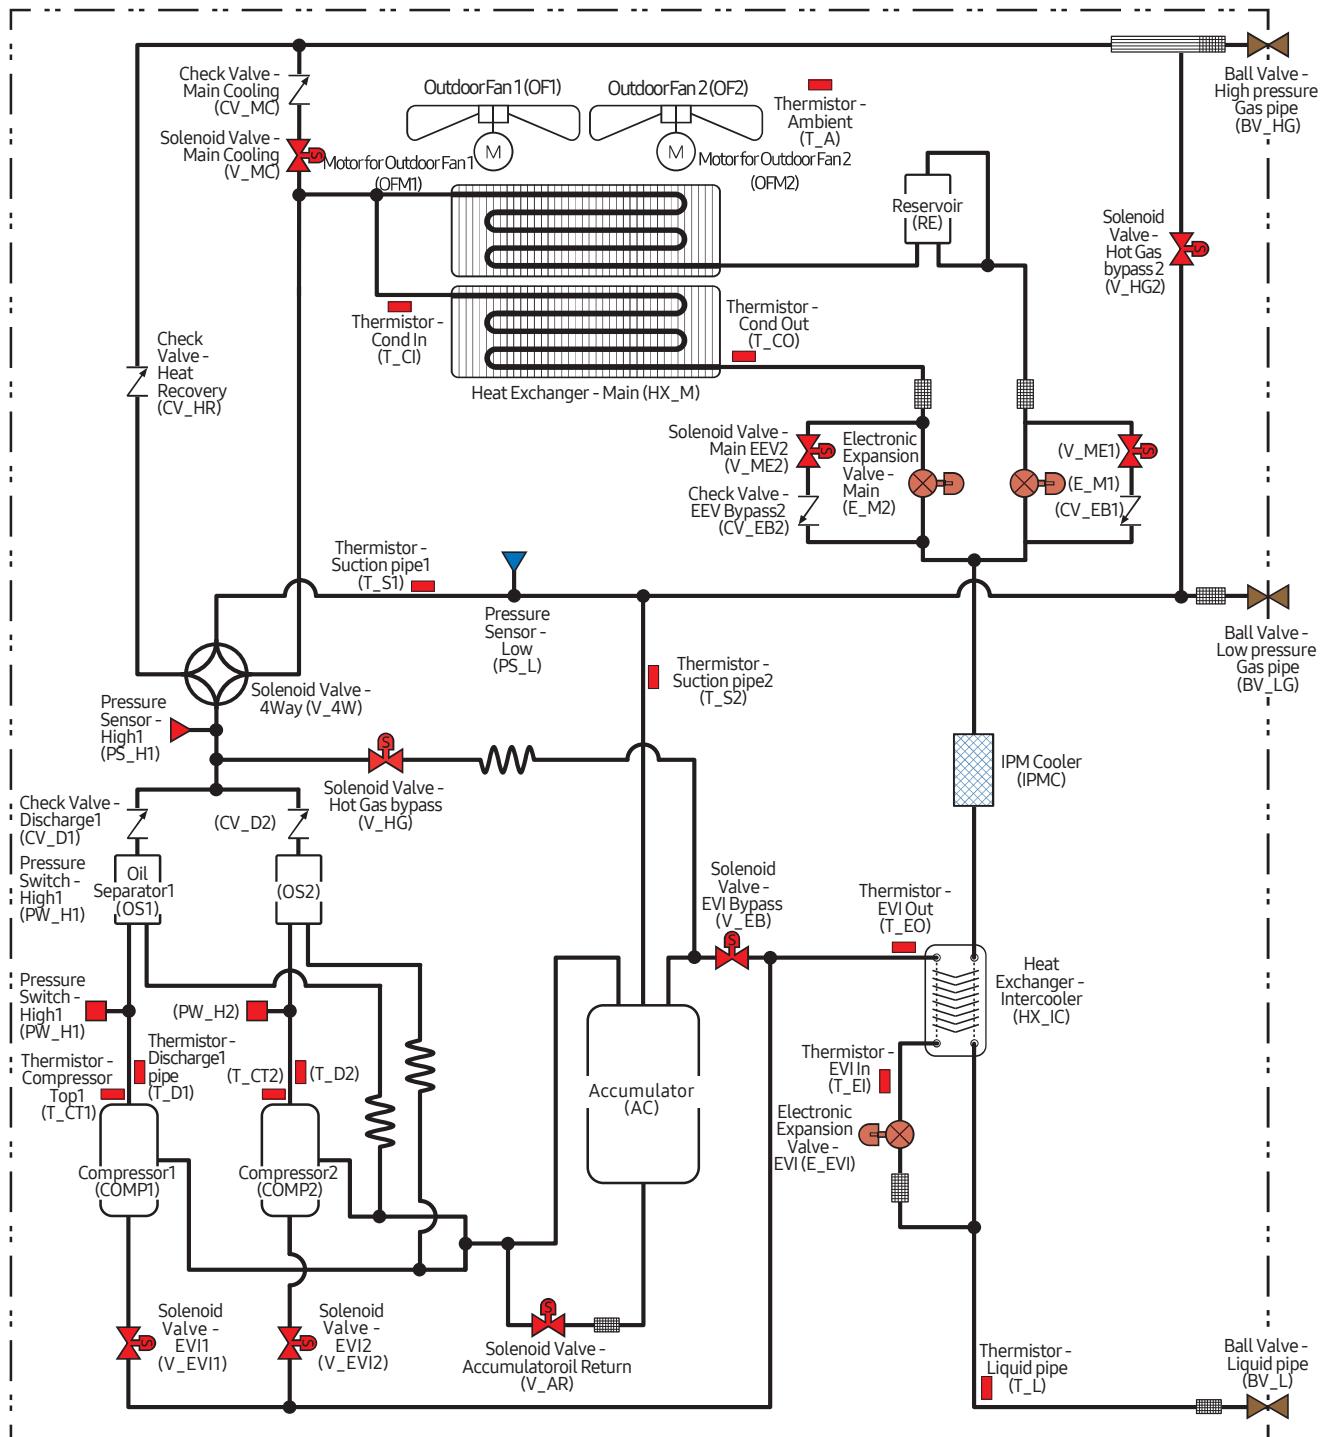

## 9. Piping Diagram

## Cooling System


- 22HP with indoor units

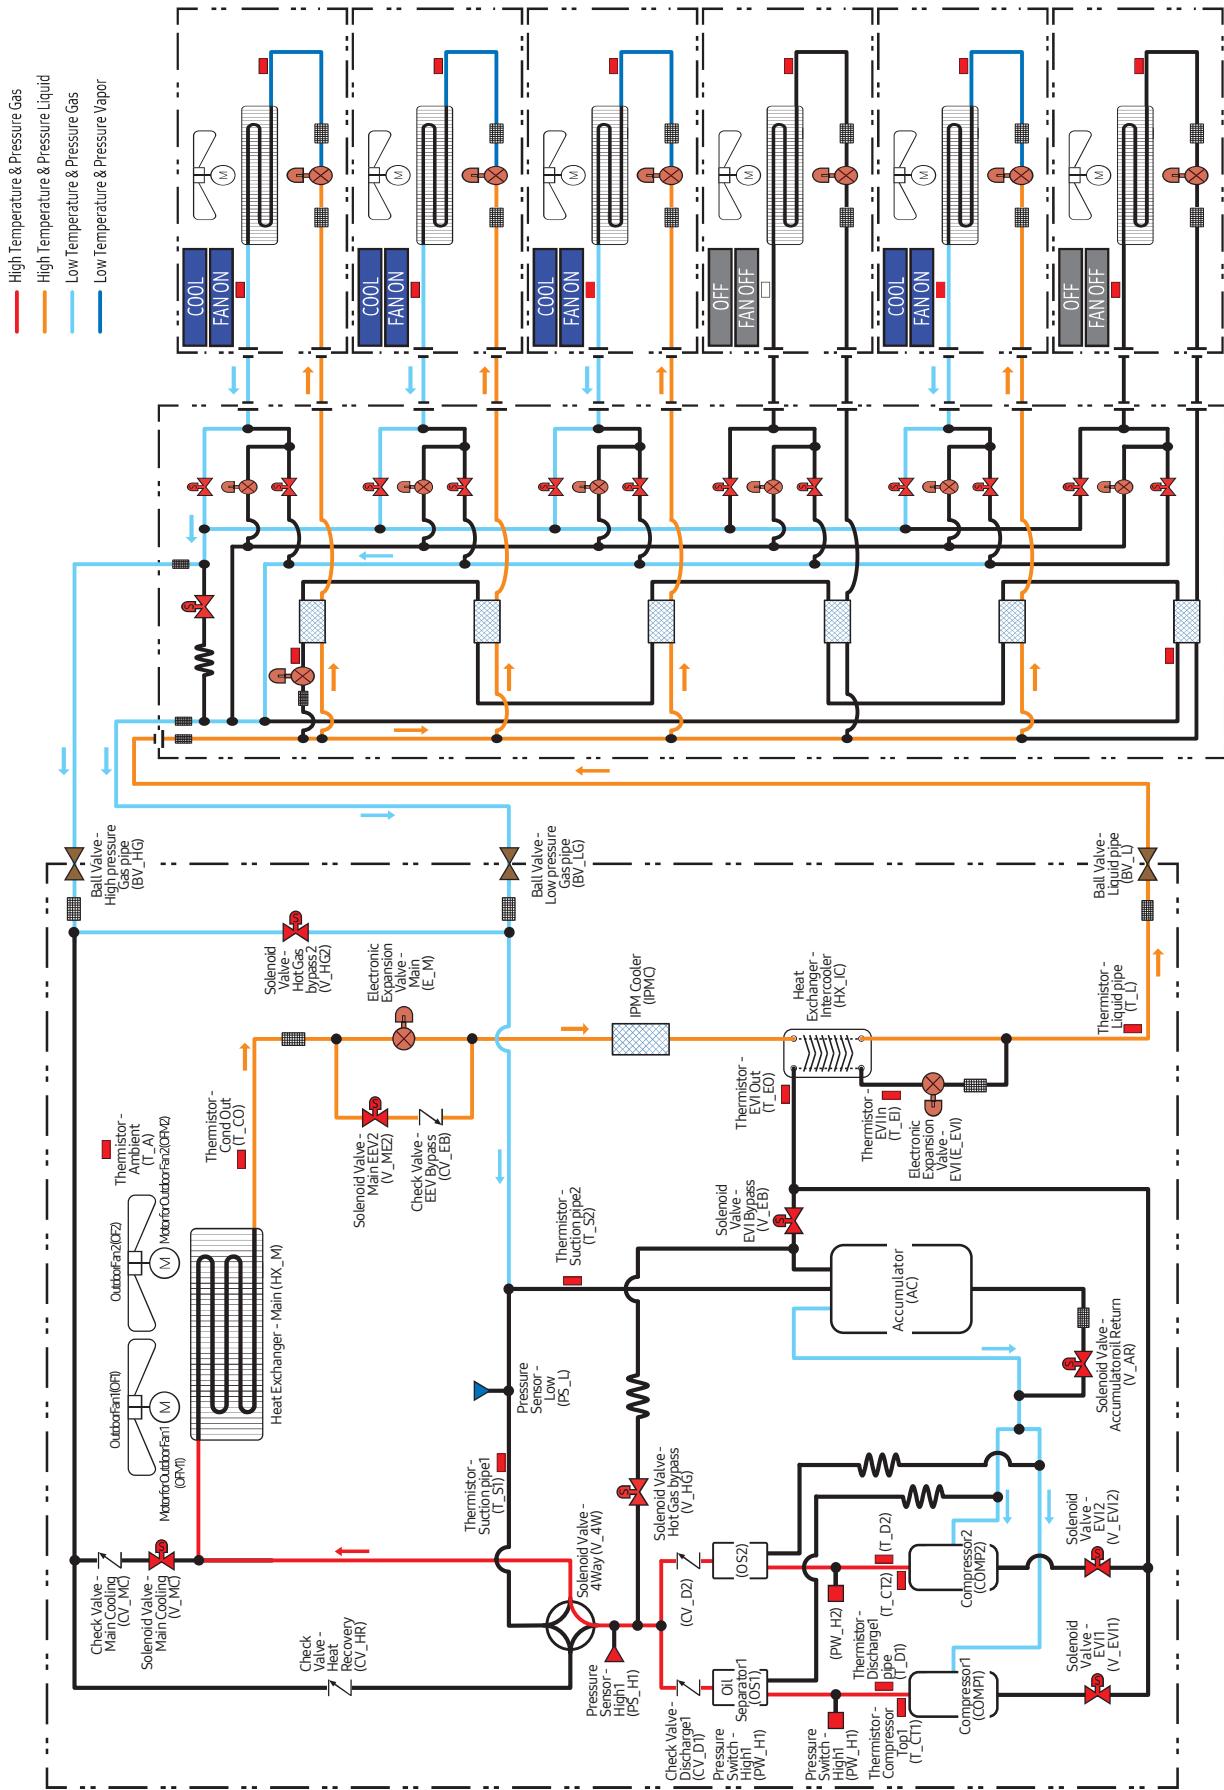

## 9. Piping Diagram

## Heating System


- 22HP with indoor units

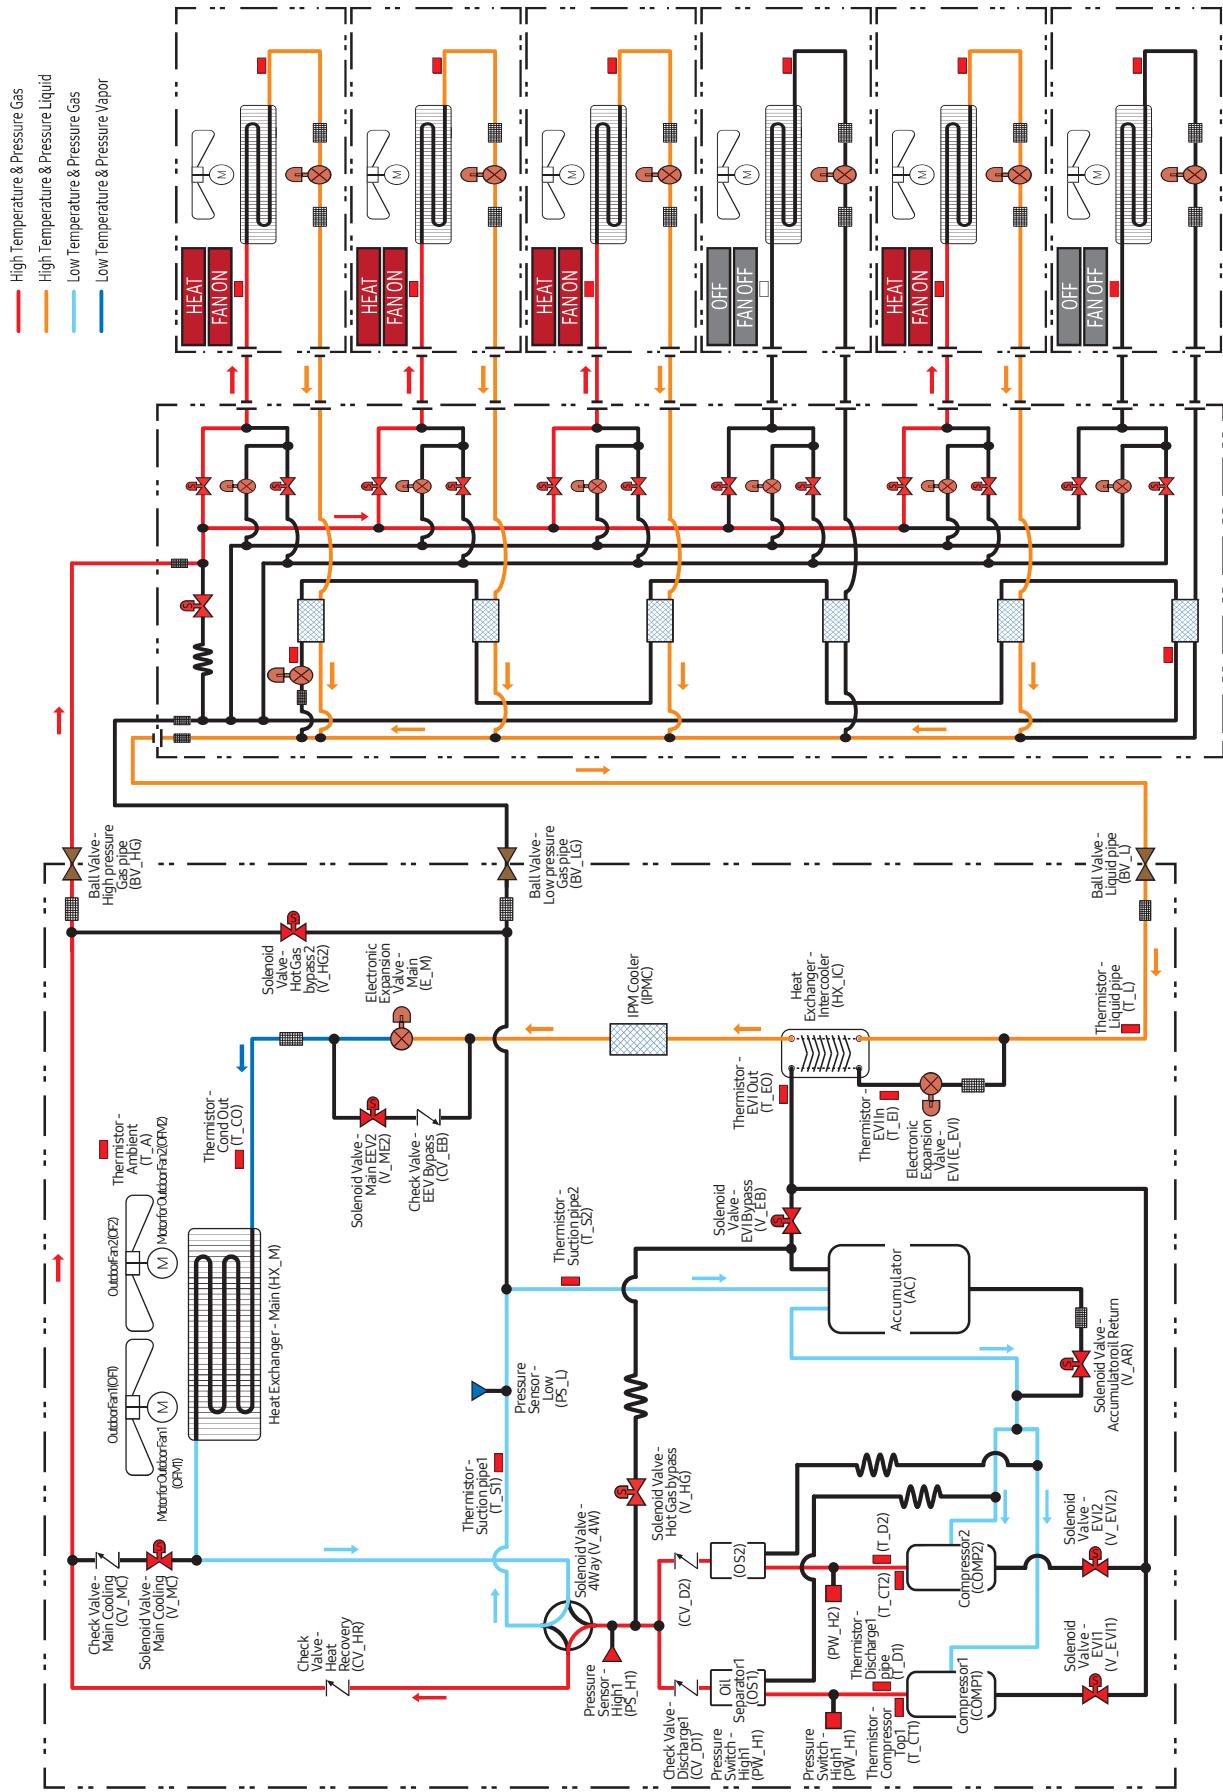

## 9. Piping Diagram

## Main Cooling System


- 22HP with indoor units

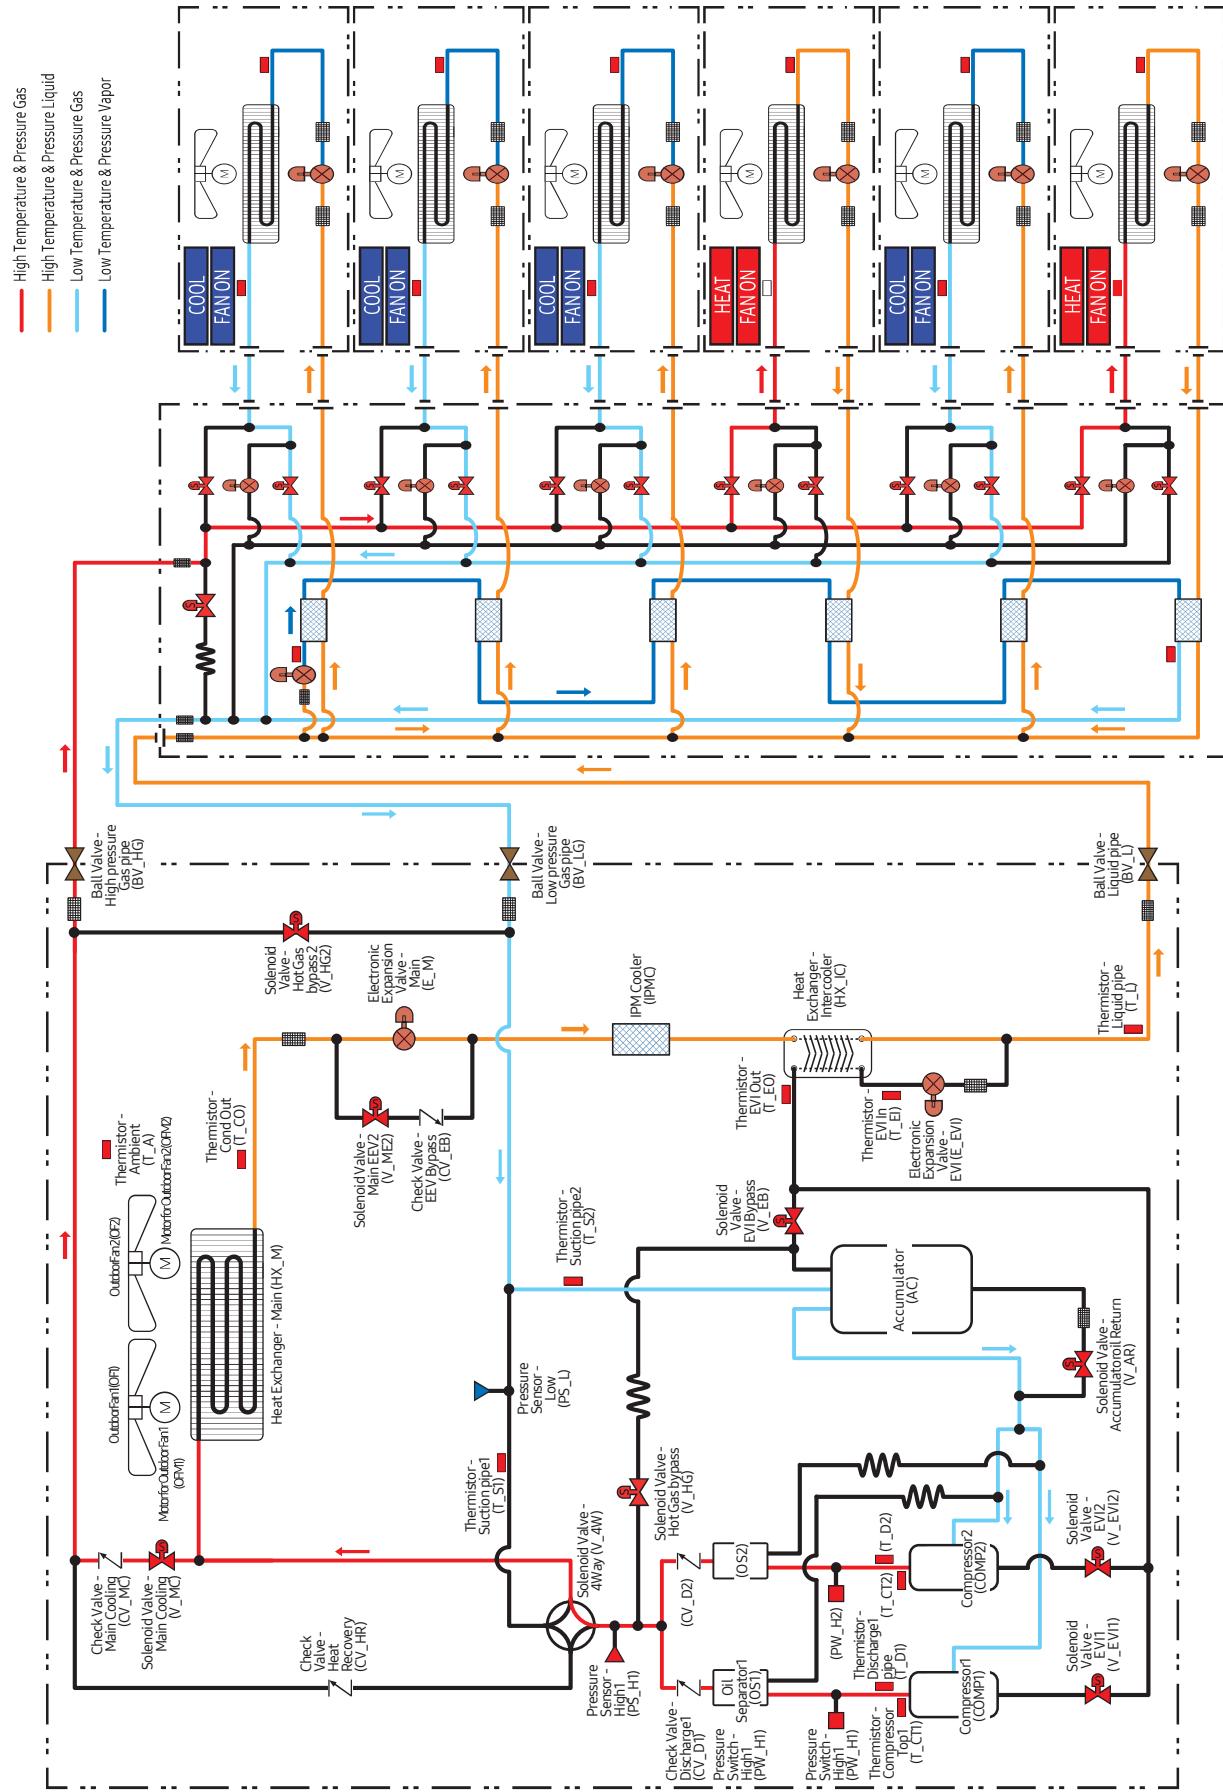

## 9. Piping Diagram

## Main Heating System

- 22HP with indoor units

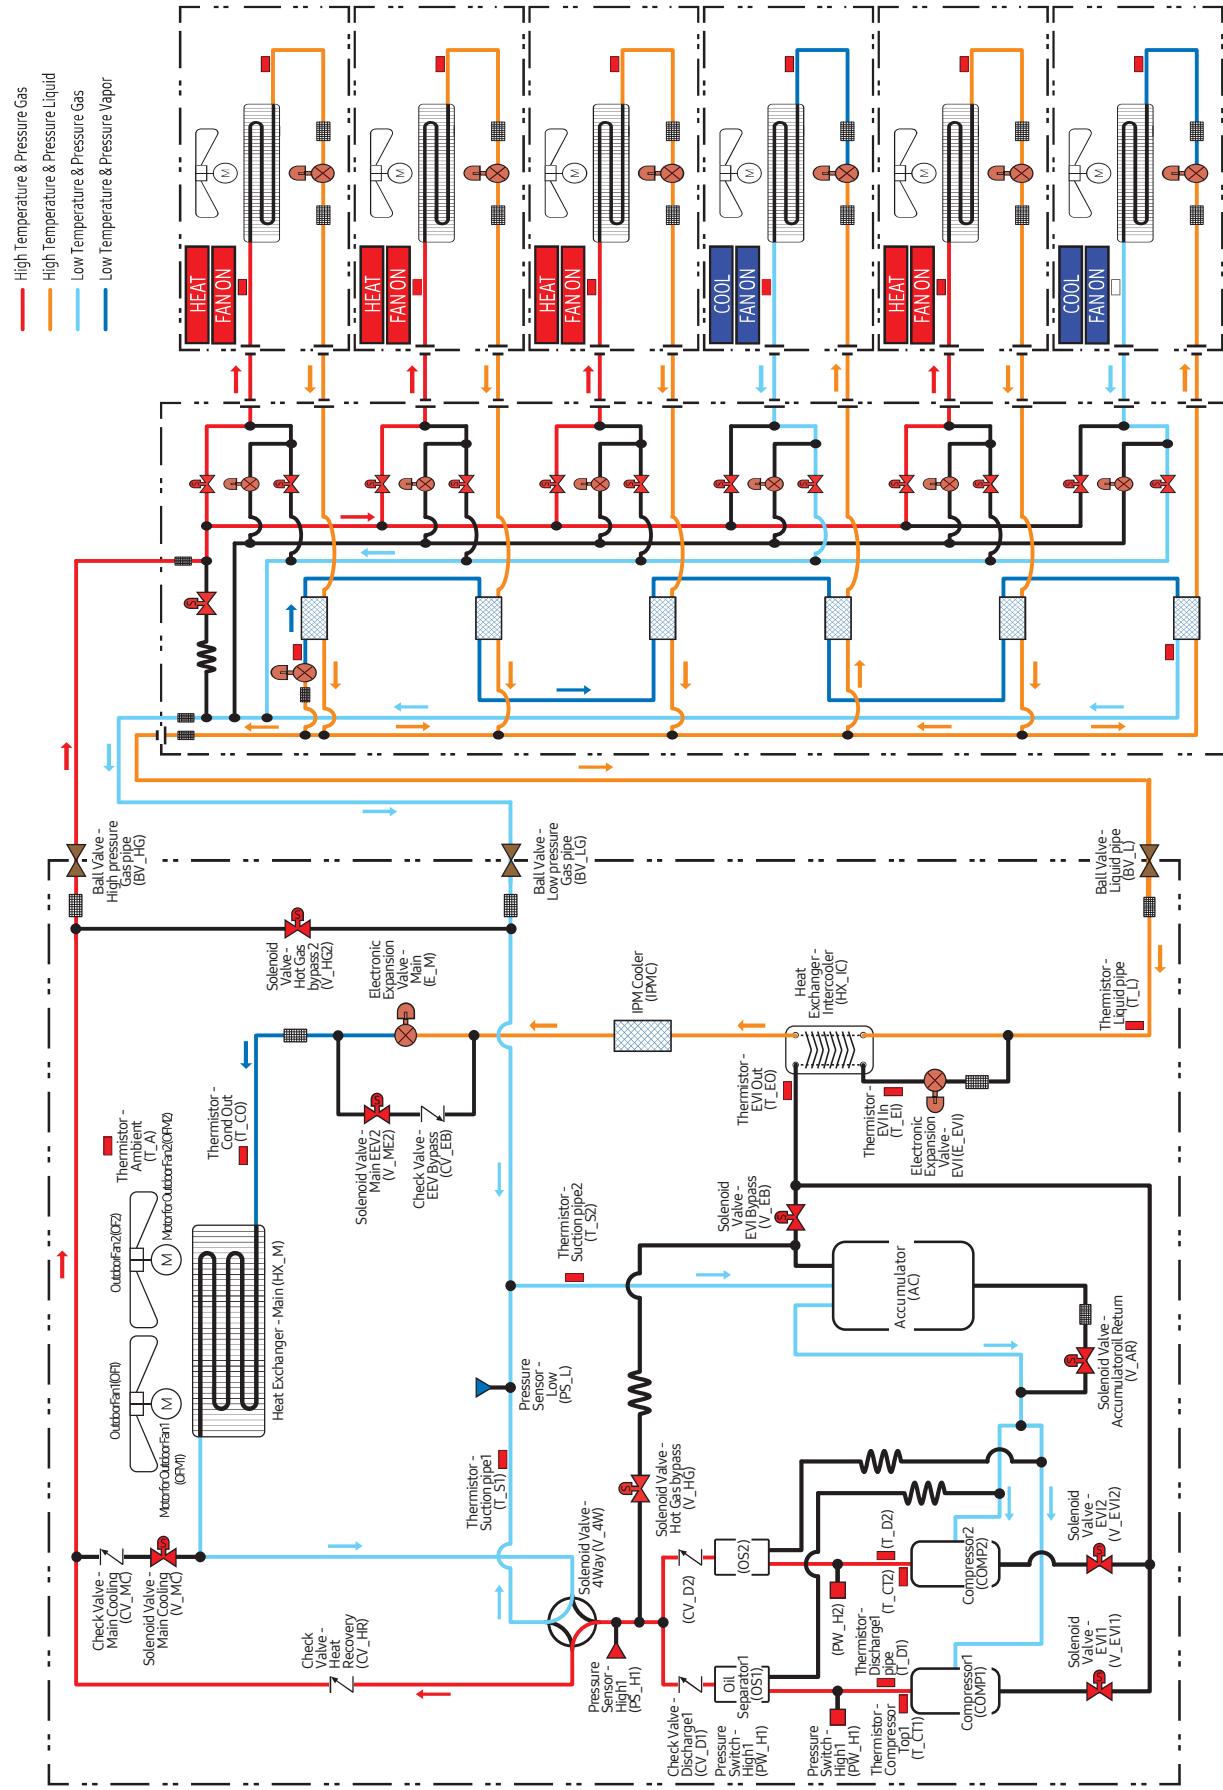

# 10. Installation

## Outdoor unit

### Outdoor unit location requirements


Decide the installation location, with the consideration of the following conditions, under user's approval.

- Place where hot discharge air or noise from the outdoor unit may not disturb the neighbor (Especially in residential areas, keep the operation hours in mind.)
- Place where structure can bear the weight and vibration of the outdoor unit.
- Place with flat surface where rainwater does not settle or leak.
- Place where it is not exposed to strong wind.
- Well ventilated place with sufficient service place for repairs and maintenance. (Discharge duct can be purchased separately)
- Place where you can connect the refrigerant pipes between indoor and outdoor units within allowable distance.
- Place where it allows easy waterproofing and draining work for the condensation water generated from the outdoor unit during heating operation.
- Place where there is no risk of inflammable gas leakage.
- Place where there is no direct influence of snow or rain.
- Place where a large amount of water generated by external environment does not directly affect the top of the outdoor unit.

### Installation Guide at the seashore

Make sure to follow below guides when installing at the seashore.

- 1 Do not install the product in a place where it is directly exposed to sea water and sea breeze.
  - Make sure to install the product behind a structure (such as building) that can block sea breeze.
  - Even when it is inevitable to install the product in seashore, make sure that product is not directly exposed to sea breeze by installing a protection wall.

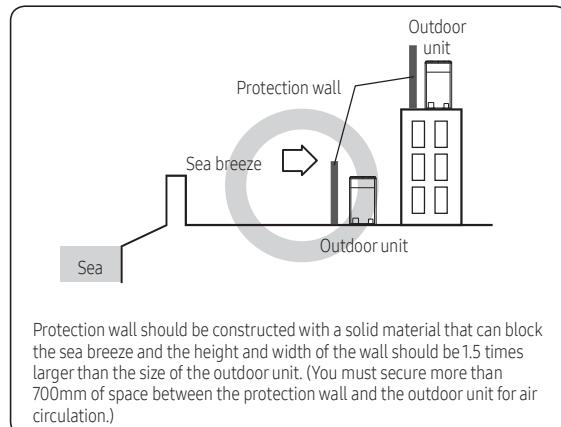


Protection wall should be constructed with a solid material that can block the sea breeze and the height and width of the wall should be 1.5 times larger than the size of the outdoor unit. (You must secure more than 700mm of space between the protection wall and the outdoor unit for air circulation.)

- 2 Consider that the salinity particles clinging to the external panels should be sufficiently washed out.
- 3 Because the residual water at the bottom of the outdoor unit significantly promotes corrosion, make sure that the slope does not disturb drainage.
  - Keep the floor level so that rain does not accumulate.
  - Be careful not to block the drain hole due to foreign substance
- 4 When product is installed in seashore, periodically clean it with water to remove attached salinity.

- 5 Make sure to install the product in a place that provides smooth water drainage. Especially, ensure that the base part has good drainage.
- 6 If the product is damaged during the installation or maintenance, make sure to repair it.
- 7 Check the condition of the product periodically.
  - Check the installation site every 3 months and perform anti-corrosion treatment such as R-Pro supplied by SAMSUNG (Code : MOK-220SA) or commercial water repellent grease and wax, etc., based on the product condition.
  - When the product is to be shut down for a long period of time, such as off-peak hours, take appropriate measures like covering the product.
- 8 If the product installed within 500m of seashore, special anti-corrosion treatment is required.
  - ※ Please contact your local SAMSUNG representative for further details.

If you cannot find a proper location to install the outdoor unit, consult with an expert or specialty store.

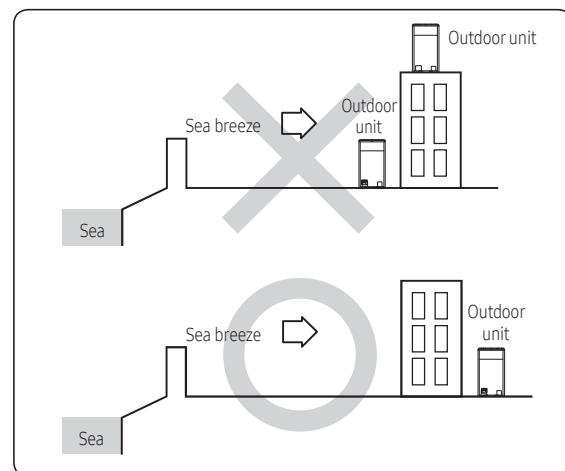

### CAUTION

- System air conditioner may cause static noise when listening to AM stations. Therefore, select an installation location for indoor unit where electrical wiring can be done while keeping certain distance from a radio, computer and stereo equipment.
- Especially, keep the unit at least 3m away from the electrical equipment in an area with weak electromagnetic waves and put the main power cable and communication cables in a separately installed protection tube.
- Make sure that there is no equipment that generates electromagnetic waves. If not electromagnetic waves may cause problem to the control systems which may lead to air conditioner malfunction. (Example: Remote control sensor of the indoor unit may not receive the signal very well, due to ballast stabilizer of the lighting equipment.)
- In regions with heavy snowfall, make sure to install the outdoor unit where there is no concerns of direct snowfall on the outdoor unit. Also, build higher base support so that accumulated snow does not block the air inlet or the heat exchanger.
- R-410A refrigerant is a safe, nontoxic and nonflammable refrigerant. However, if the place holds any concerns for exceeding dangerous level of refrigerant concentration in case of refrigerant leakage, extra ventilation system is required.

# 10. Installation


## Outdoor unit

- When you install the outdoor unit in high places such as a roof, install fence or guardrail around it. When there is no fence or guardrail, service person could fall.
- Do not install the product in places where corrosive gases such as sulfur oxides, ammonia, and sulfurous gas are produced. (e.g. Toilet outlet, ventilation opening, sewage works, dyeing complex, cattle shed, sulfuric hot spring, nuclear power plant, ship etc.) When installing the product in those places, contact an installation specialty store as the copper pipe and brazing part will need additional corrosion proof or anti-rust additive to prevent corrosion.
- Make sure not to keep any inflammable materials (such as wooden materials, oil etc.) around the outdoor unit. When there's fire, those inflammable material will easily catch the fire and may pass it on to the product.
- Depending on the condition of power supply, unstable power or voltage any cause malfunction of the parts or control system. (At the ship or places using power supply from electric generator...etc)
- Make sure to install MCU when using HR products.
- When you select the location to install the MCU, the location is far away from indoor rooms because the refrigerant running of MCU may create noise.


### Outdoor unit space requirements

- Space requirement was decided based on following conditions; Cooling mode, outdoor temperature of 35 °C. Larger space is required if the outdoor temperature is higher than 35 °C or if the place is heated easily by quantity of solar radiation.
- When you secure installation space, consider path for people and the direction of the wind.
- Secure installation space as shown in the below illustration, considering ventilation and the service space.
- If the installation space is narrow, installer or other worker may get injured during work and may also cause problem to the product.
- If you install multiple number of outdoor units in one space, make sure to secure enough ventilation space if there's any walls around the product that may disturb the air flow. If enough ventilation space is not secured, product may malfunction.
- You may install the outdoor units with 20mm of space between the product, but product's performance may decrease depending on the installation environment.


### Single installation

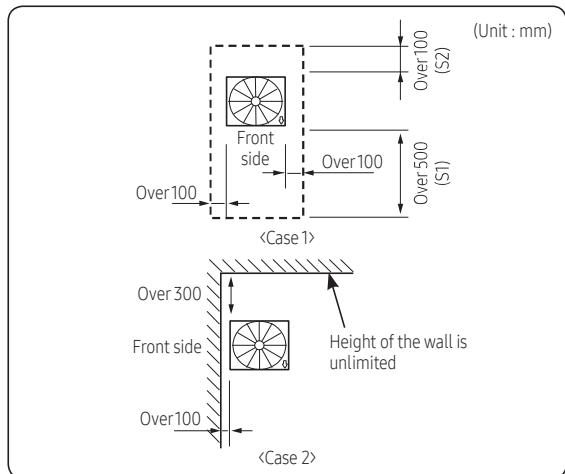

### Module installation

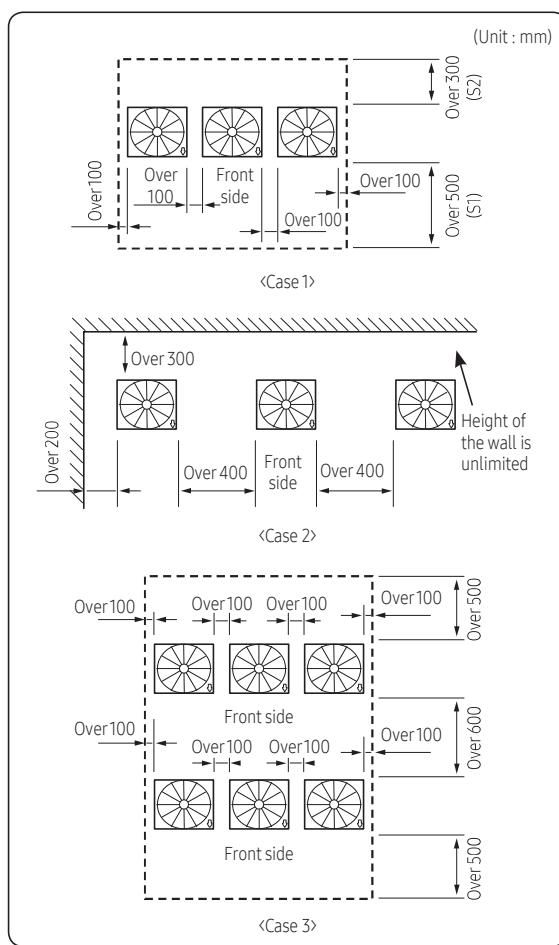

- For **Case 1** or **Case 3**
  - Height of the wall on the front side should not be higher than 1500mm.
  - Height of the wall on the air inlet side should not be higher than 500mm.
  - Height of the wall on the side is not limited.
  - If the height of the wall exceeds by certain value ( $(h1)/2, (h2)/2$  : Half of the exceeded height) should be added to the service space ( $S1, S2$ ).

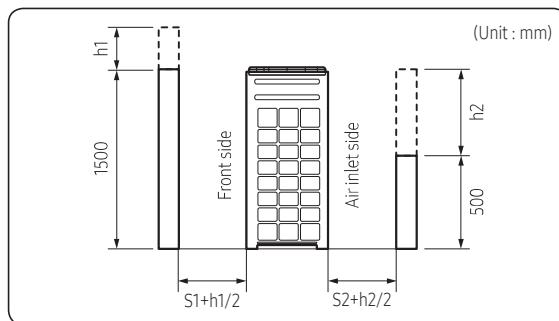


# 10. Installation

## Outdoor unit

### Preparing materials and tools

- You must keep the installation manual until the installation is finished.
- Hand over the installation manual to the customer after finishing the installation.

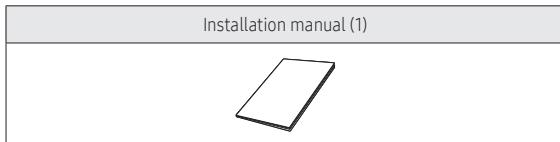

#### Optional accessories

- Following optional accessories are needed for connecting pipes between the indoor and outdoor units.

Classification	Model Name	Specification
Y-Joint (Only H/R)	MXJ-YA1500M	22.4 kW and below
	MXJ-YA2500M	22.5 kW ~ 70.3 kW
	MXJ-YA3100M	70.4 kW ~ 135.2 kW
	MXJ-YA3800M	Over 135.2 kW
	MXJ-HA2512M	45.0 kW and below (for 4 rooms)
	MXJ-HA3115M	70.3 kW and below (for 8 rooms)
	MXJ-HA3819M	70.4 kW ~ 135.2 kW (for 8 rooms)
Distribution header	MXJ-TA3419M	135.2 kW and below
	MXJ-TA4122M	Over 135.2 kW
Y-Joint - Outdoor unit	MXJ-TA3100M	135.2 kW and below
	MXJ-TA3800M	Over 135.2 kW

Classification	Model Name	Specification
Y-Joint (Only H/R)	MXJ-YA1500M	22.4 kW and below
	MXJ-YA2500M	22.5 kW ~ 70.3 kW
	MXJ-YA3100M	70.4 kW ~ 135.2 kW
	MXJ-YA3800M	Over 135.2 kW
	MXJ-HA2512M	45.0 kW and below (for 4 rooms)
	MXJ-HA3115M	70.3 kW and below (for 8 rooms)
	MXJ-HA3819M	70.4 kW ~ 135.2 kW (for 8 rooms)
Distribution header	MXJ-TA3419M	135.2 kW and below
	MXJ-TA4122M	Over 135.2 kW
Y-Joint - Outdoor unit	MXJ-TA3100M	135.2 kW and below
	MXJ-TA3800M	Over 135.2 kW

- ※ If you use an indoor unit with no internal EEV(Electric Expansion Valve), you will need an EEV kit.
- ※ Only use the genuine accessories listed in above table and do not use imitated accessories.

### Outdoor unit installation

#### **⚠ WARNING**

- Make sure to remove the wooden pallet before installing the outdoor unit. If you do not remove the wooden pallet, there is risk of fire during welding the pipes. If the outdoor unit is installed with wooden pallet on, and it was used for long period time, wooden palette may break and cause electrical hazard or high pressure may damage the pipes.
- ※ Fix an outdoor unit firmly on the base ground with anchor bolts.
- ※ Manufacturer is not responsible for the damage occurred by not following the installation standards.


- 1 Make sure that the height of the base ground is 200mm or higher to protect the outdoor unit from rain water or other external conditions. Also, install a draining pit around the base ground and connect the drain pipe to the drainage.
- 2 Considering the vibration and weight of the outdoor unit, strength of the base ground must be strong to prevent noise and the top surface of it should be flat.
- 3 Base ground should be 1.5 times larger than the bottom of the outdoor unit.
- 4 Outdoor unit must be fixed firmly so that it can withstand the wind speed of 30m/s. If you cannot fix the outdoor unit on the base ground, fix it by side or use extra structure.

- 5 In heating operation, defrost water may form so you must really care about the drainage and waterproofing the floor. To prevent defrost water from stagnating or freezing, construct a drainage with over 1/50 slope. (Ice may form on the floor in winter season.)
- 6 It is necessary to add wire mesh or steel bar during concrete construction for the base ground to prevent damages or cracks.
- 7 When installing multiple outdoor units at the same place, construct an H beam or an anti-vibration frame on the base ground to install the outdoor unit.
- 8 After installing an H beam or an anti-vibration frame, apply corrosion protection and other necessary coating.
- 9 When concrete construction for outdoor unit installation is completed, install an anti-vibration pad (t=20mm or more) or an anti-vibration frame to prevent vibration of the outdoor unit from transferring to the base ground.
- 10 Place the outdoor unit on an H beam or an anti-vibration frame and fix it with the bolt, nut and washer. (The bearing force has to be over 3.5kN)

# 10. Installation

## Outdoor unit

### Base ground construction

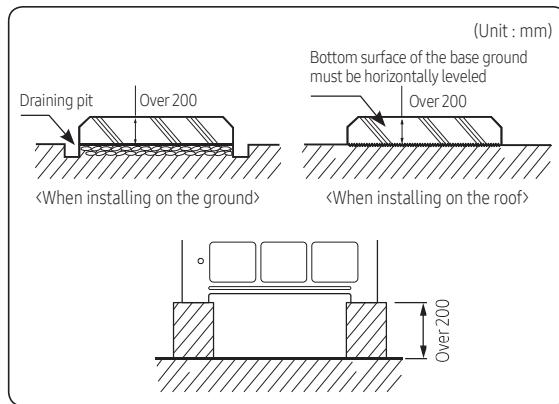



Classification (mm)	(Unit : mm)	
	DVM S2 Small Type	DVM S2 Large Type
A	930	1295
B	790	1155

\* Refer to the blueprints in technical data book to make a holes for connecting the anti-vibration pad.


### Examples of draining work

- Construct the drainage ditch with reinforced concretes and make sure that water-proofing work is done.
- For smooth draining of defrost water, make sure to apply 1/50 slope.
- Construct a drainage around the outdoor unit to prevent the defrost water (from the outdoor unit) from stagnating, overflowing or freezing near the installation space.
- When the outdoor unit is installed on the roof, check the strength and waterproof status of the roof.

### Outdoor unit installation

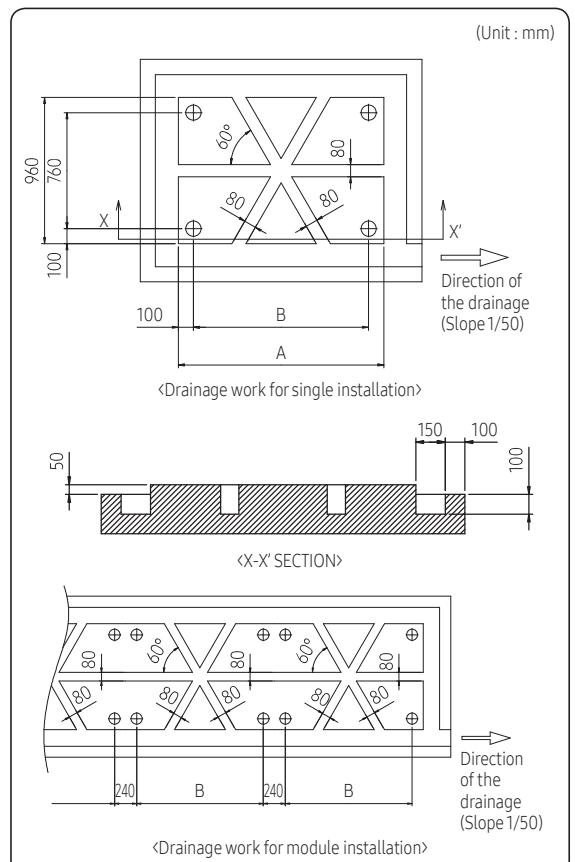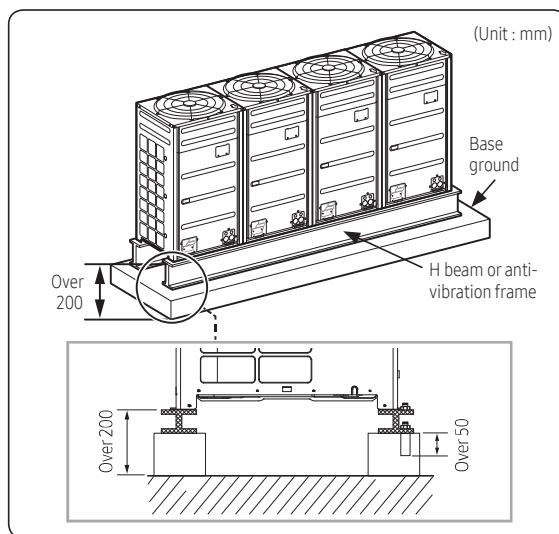

### Outdoor unit base mount and anchor bolt position

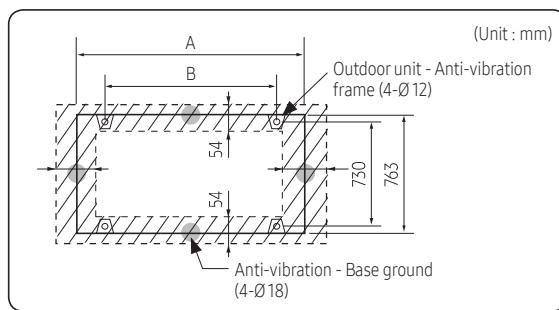

Classification	DVM S2 Small Type	DVM S2 Large Type
A	1030	1395
B	790	1155

# 10. Installation

## Outdoor unit

### ⚠ CAUTION


- Cautions regarding on connecting the anchor bolt
  - Tighten the rubber washer to prevent the bolt connection part of the outdoor unit from corroding.




- Anchor specification

Size	Diameter of drill bit (a)	Anchor length (b)	Sleeve length (c)	Insert depth	Fastening torque
Ø10	14 mm	75 mm	40 mm	50 mm	30 N·m


- Use the anchor bolts and nuts that is zinc plated or made of STS material. Regular anchor bolts or nuts may get damaged by corrosion.

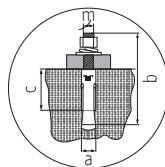

- Cautions regarding on connecting the pipe
  - If you install the outdoor unit on the rooftop, check the strength and make sure to waterproof the rooftop.
  - Construct draining pit around the base construction and pay attention to the drainage around the outdoor unit. (Condensation or defrost water may form during outdoor unit operation.)
  - If there's any possibility of small animals from entering the pipe outlet, block the outlet as shown in the illustration.

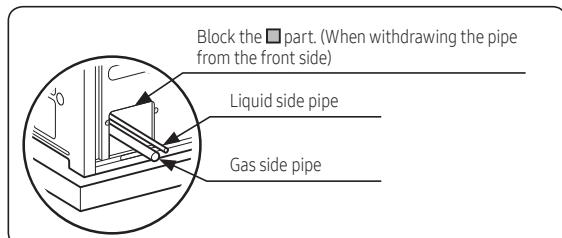


- Cautions regarding on anti-vibration frame installation
  - During installation, make sure there is no gap between the base ground and the supporting structures such as anti-vibration frame or H beam.
  - Base ground must be constructed strongly to support the bottom part of the anti-vibration mount.

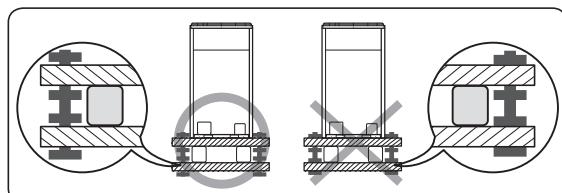

- After installing the anti-vibration frame, untighten the fixing part on the top and bottom part of the frame.

### Caution for installing discharge duct

- Static pressure of the discharge duct should be within the standard specification when installing the duct.
- If you remove the fan guard to install the discharge duct, make sure to install a safety net on the duct outlet. Foreign substance may enter into the product and there could be a risk of personal injury.
- Wear protection equipment at all times when making galvanized sheet metal duct, since the worker may get injured by the sharp parts.
- When installing the outdoor unit under the tree or near forest, leafs may get into the product and cause problems on the product. Therefore, install a discharge duct to prevent foreign substance infiltration.

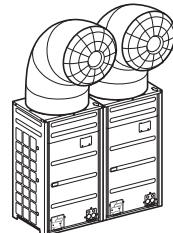


Preventing foreign substance infiltration

## Installing the outdoor unit in various environments

### Installing the outdoor unit around the obstacles

- It is necessary to install a discharge guide duct(field supply) to direct exhaust from the fan horizontally, when it is difficult to provide a minimum space of 2m between the air outlet and a nearby obstacle.


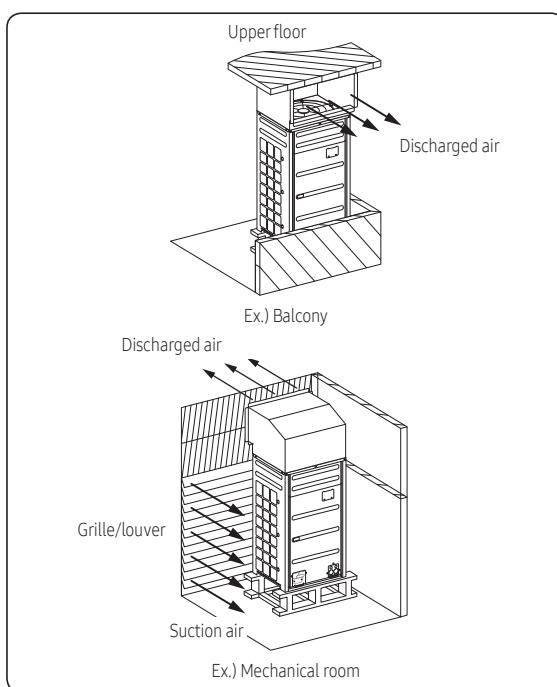


# 10. Installation

## Outdoor unit

### ⚠ WARNING

- Should adopt bar type louver. Don't use a type of rain resistance louver.

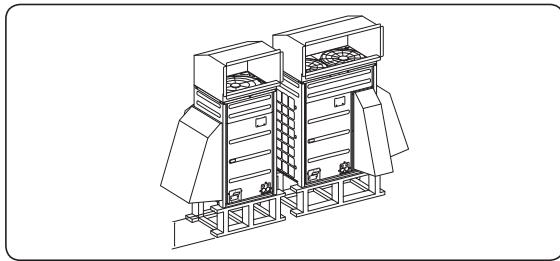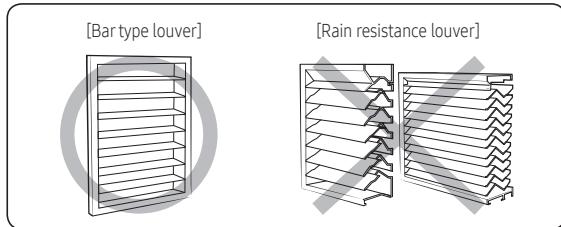

- Louver specifications.
  - Angle criteria : less than 20°
  - Opening ratio criteria : greater than 80%

### Installing the outdoor unit in cold region

- In cold regions with lots of snowfall, install a snow prevention duct, as a sufficient countermeasure, to prevent snow from accumulating on the outdoor unit. When the snow prevention duct is not installed, frost may accumulate on the heat exchanger and heating operation may not work normally.
- Air outlet of the duct should not be directed to the enclosed space.

### ⚠ CAUTION


- Cautions regarding on installing the frame and selecting the base ground
  - Height (h) of the frame and the base ground should be higher than the "heaviest expected snowfall".
  - Area of the frame and the base ground should not be larger than the are of the outdoor unit. Snow may accumulate if the area of the frame or the base ground is larger.

### Installing the outdoor unit in windy region

- In windy regions such as near sea shores, protection wall or wind protection duct must be installed for normal operation of the outdoor unit. (Refer to the illustration of the snow prevention duct, for installing the wind protection duct.)
- Install the wind prevention duct with the consideration of major wind direction. If the direction of the discharge part is same as major direction of the wind, it could cause product's performance decrease.

### ⚠ CAUTION

- Cautions regarding on installing the frame and selecting the base ground
  - The base ground must be solid and the outdoor unit must be fixed with anchor bolts.
  - Make sure to install outdoor unit in a place strong enough to withstand its weight. If the place cannot withstand the weight of the outdoor unit, outdoor unit may fall and cause personal injury.
  - When installing on a rooftop subject to strong wind, countermeasures must be taken to prevent the unit from falling down.
  - Use a frame that is resistant to corrosion.

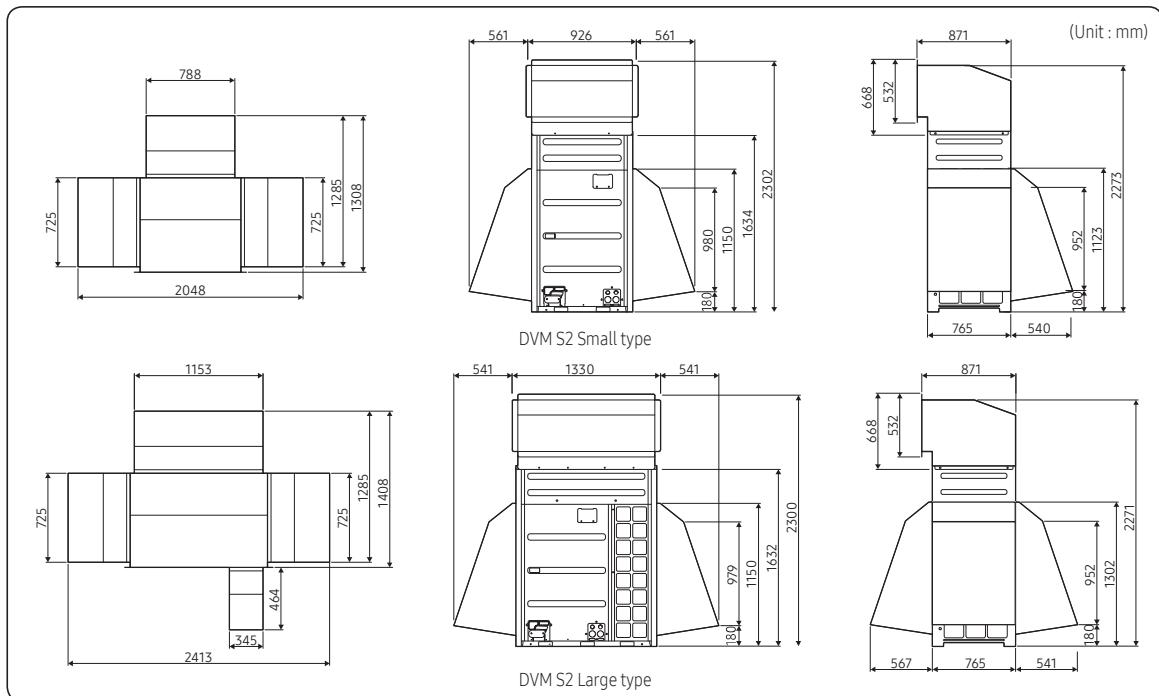

# 10. Installation

## Outdoor unit

### ⚠️ WARNING


- When installing, make sure there is no leakage. When collecting the refrigerant, stop the compressor first before removing the connection pipe. If the refrigerant pipe is not properly connected and the compressor works with the service valve open, the pipe inhales the air and it makes the pressure inside of the refrigerant cycle abnormally high which may lead to explosion and injury.

### Refrigerant pipe work

- The length of refrigerant pipe should be as short as possible and the height difference between an indoor and outdoor unit should be minimized.
- Piping work must be done within allowable piping length, height difference, and the allowable length after branching.
- The pressure of the R-410A is high. Use only certified refrigerant pipe and follow the installation method.
- After installing the pipes, calculate the total length of the pipe to check if additional refrigerant is needed. When you need to charge the additional refrigerant, make sure to use R-410A refrigerant.
- Use clean refrigerant pipe and there shouldn't be any harmful ion, oxide, dust, iron content or moisture inside pipe.
- Use tools and accessories that fit on R-410A only.

Tool	Installation process/ purpose	Compatibility with conventional tool
Vacuum pump	Pipe drying	Compatible (Use products which contain the check valve to prevent the oil from flowing backward into the outdoor unit.) Use the one that can be vacuumed up to -100.7kpa(5Torr).
Scale for refrigerant charging	Refrigerant charging	Compatible
Gas leak detector	Gas leak test	Need exclusive one (Ones used for R-134a is compatible)
Flare nut	Must use the flare nut equipped with the product.	

### Selecting refrigerant pipe

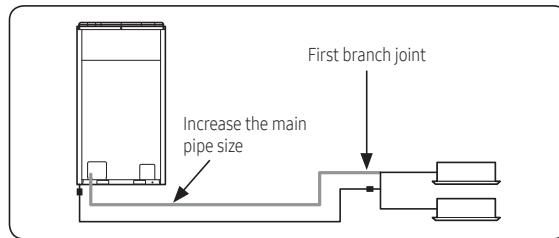

- Install the refrigerant pipe according to main pipe size of each outdoor unit capacity.
- When the pipe length (including elbow) between an outdoor unit and the farthest indoor unit exceeds 90m, you must increase the size of the pipe (main pipe) by one grade which connects between the outdoor unit to the first branch joint.
- For H/R model, When the pipe length (including elbow) between an outdoor unit and the farthest indoor unit exceeds 90m, you must increase the size of the liquid pipe by one grade among the pipes(main pipe) which connects between the outdoor unit to the first branch joint.

Tool	Installation process/ purpose	Compatibility with conventional tool
Pipe cutter	Refrigerant pipe installation	Pipe cutting
Flaring tool		Pipe flaring
Refrigerant machine oil		Apply refrigerant oil on flared part
Torque wrench		Connect flare nut with pipe
Pipe bender	Air tightness test	Pipe bending
Nitrogen gas		Prevent oxidation within the pipe
Welder	Air tightness test	Pipe welding
Manifold gage		Compatible
Refrigerant charging hose	Air tightness test ~ additional refrigerant charging	Need exclusive one since there is risk of refrigerant leakage or inflow of impurities

# 10. Installation

## Outdoor unit

H/P

Legend: (A) Valve, (B) Pipe

Ex.) 135.2 kW

Capacity (kW)	No.	Pipe size (mm)	
		Liquid	Gas
33.6	(1)	Ø 12.70	Ø 28.58
73.6	(2)	Ø 19.05	Ø 34.92
135.2	(3)	Ø 19.05	Ø 41.28

**Size of the pipe connected to the outdoor unit (A)**

Select the size of the main pipe according to the below table.

Outdoor unit capacity (kW) (Cooling)	*Maximum pipe length within 90m		*Maximum pipe length over 90m	
	Liquid (mm)	Gas (mm)	Liquid (mm)	Gas (mm)
Capacity ≤ 25	Ø 9.52	Ø 19.05	Ø 12.70	Ø 22.22
25 < Capacity ≤ 32		Ø 22.22		Ø 25.40 <small>note1)</small>
32 < Capacity ≤ 39	Ø 12.70	Ø 28.58	Ø 15.88	Ø 28.58
39 < Capacity ≤ 44				Ø 31.75 <small>note2)</small>
44 < Capacity ≤ 48	Ø 15.88	Ø 34.92	Ø 19.05	Ø 38.10 <small>note3)</small>
48 < Capacity ≤ 55				Ø 41.28
55 < Capacity ≤ 66	Ø 19.05	Ø 22.22	Ø 22.22	Ø 41.28
66 < Capacity ≤ 72				Ø 53.98
72 < Capacity ≤ 100	Ø 22.22	Ø 25.40 <small>note1)</small>	Ø 25.40 <small>note1)</small>	Ø 53.98
100 < Capacity ≤ 139				
139 < Capacity ≤ 173	Ø 25.40	Ø 25.40 <small>note1)</small>	Ø 28.58	Ø 53.98
173 < Capacity ≤ 252				
252 < Capacity	Ø 25.40	Ø 25.40 <small>note1)</small>	Ø 28.58	Ø 53.98

\*Maximum pipe length : The pipe length between an outdoor unit and the farthest indoor unit.

Note1) If Ø 25.40 pipe is not available on site, use Ø 28.58 pipe.

Note2) If Ø 31.75 pipe is not available on site, use Ø 34.92 pipe.

Note3) If Ø 38.10 pipe is not available on site, use Ø 41.28 pipe.

\* For the case that the diameter of the default pipe of an outdoor unit does not match that of the pipe installed on the site, a socket is provided by default together with the outdoor unit.

**Size of the pipe between the branch joint and the indoor unit**

Make a selection according to outdoor unit capacity.

Indoor unit capacity (kW)	Pipe size (O.D. mm)	
	Liquid	Gas
6.0 and below	Ø 6.35	Ø 12.70
6.1 ~ 16.0	Ø 9.52	Ø 15.88
16.1 ~ 23.0	Ø 9.52	Ø 19.05
Over 23.0	Ø 9.52	Ø 22.22

**Branch joint**

Branch joint between outdoor units (C)

Classification	Model name	Specification (kW)
Y-joint for outdoor unit (C)	MXJ-TA3419M	135.2 and below
	MXJ-TA4122M	Over 135.2

First branch joint (D)

Make a selection according to outdoor unit capacity.

Classification	Model name of the branch joint	Outdoor unit capacity (kW)
Y-joint (D)	MXJ-YA1509M	15.0 and below
	MXJ-YA2512M	15.1 ~ 40.0
	MXJ-YA2812M	40.1 ~ 45.0
	MXJ-YA2815M	45.1 ~ 70.3
	MXJ-YA3419M	70.4 ~ 98.4
	MXJ-YA4119M	98.5 ~ 135.2
	MXJ-YA4422M	Over 135.2

Branch joint (E)

Select a branch joint according to the sum of indoor unit capacity which will be connected after the branch.

\* However, if the size of the pipe between branch joints (B) is bigger than the size of the pipe connected to the outdoor unit (A), apply the pipe size (A).

\* However, if the size of the pipe between branch joints (E) is bigger than the size of the pipe connected to the outdoor unit (D), apply the pipe size (D).

1) Y-joint

Classification	Model name	Specification (kW)
Y-joint (E)	MXJ-YA1509M	15.0 and below
	MXJ-YA2512M	15.1 ~ 40.0
	MXJ-YA2812M	40.1 ~ 45.0
	MXJ-YA2815M	45.1 ~ 70.3
	MXJ-YA3419M	70.4 ~ 98.4
	MXJ-YA4119M	98.5 ~ 135.2
	MXJ-YA4422M	Over 135.2

2) Distribution header

Classification	Model name	Specification (kW)
Distribution header (E)	MXJ-HA2512M	45.0 and below (for 4 rooms)
	MXJ-HA3115M	70.3 and below (for 8 rooms)
	MXJ-HA3819M	70.4 ~ 135.2

Note1) If Ø 25.40 pipe is not available on site, use Ø 28.58 pipe.

Note2) If Ø 31.75 pipe is not available on site, use Ø 34.92 pipe.

Note3) If Ø 38.10 pipe is not available on site, use Ø 41.28 pipe.

000083

# 10. Installation

## Outdoor unit

### H/P

When all the following conditions are met, install the main liquid pipe that is one step smaller to reduce piping load and the amount of refrigerant.

Note that the refrigerant for the main liquid pipe must be added by the specified amount upon reduction.

Condition 1: In case the length for vertical piping is less than 40 m

Condition 2:  $A \geq \text{Max. piping length}/\{1 - (\text{vertical piping length} * 0.015)\}$

  × Max. piping length: Piping length between the outdoor unit and the farthest indoor unit (m)

- Length allowed to reduce the diameter of liquid pipe, A (equivalent length)
- When piping is installed with reduction of the diameter of liquid pipe, Please set option 'reduction of the diameter of liquid pipe'.

Capacity (HP)	Below 90 m		Over 90m	
	Pipe diameter	Max. length (m)	Pipe diameter	Max. length (m)
8	This capacity is not supported.			
10	This capacity is not supported.			
12	9.52	50	12.7	200
14	9.52	40	12.7	190
16	9.52	30	12.7	150
18	12.7	90	15.88	200
20	12.7	90	15.88	200
22	12.7	80	15.88	200
24	12.7	70	15.88	200
26	15.88	90	19.05	200
28	15.88	90	19.05	200
30	15.88	90	19.05	200
32	15.88	90	19.05	200
34	15.88	90	19.05	200
36	15.88	90	19.05	200
38	15.88	90	19.05	200
40	15.88	80	19.05	200
42	15.88	70	19.05	200
44	15.88	70	19.05	200
46	15.88	60	19.05	180
48	15.88	60	19.05	170
50	15.88	50	19.05	150
52	15.88	50	19.05	140

e.g. In case of the site for 20HP, Max. piping length of 140 m (Horizontal piping length of 120 m & Vertical piping length of 20 m):

Max. length  $A \geq \text{Max. piping length}/\{1 - (\text{Vertical piping length} * 0.015)\}$

$200 \geq 140/\{1 - (20 * 0.015)\} = 140/0.7 = 200$  m

Thus, the Max. piping length of 140 m (Horizontal piping length of 120 m & Vertical piping length of 20 m) can be allowed.

Accordingly, horizontal piping of 120 m + vertical piping of 20 m (140 m in total) can be installed.

Capacity (HP)	Below 90 m		Over 90m	
	Pipe diameter	Max. length (m)	Pipe diameter	Max. length (m)
54	15.88	40	19.05	130
56	15.88	40	19.05	120
58	15.88	40	19.05	120
60	15.88	40	19.05	110
62	19.05	90	22.22	200
64	19.05	90	22.22	200
66	19.05	90	22.22	200
68	19.05	90	22.22	200
70	19.05	80	22.22	190
72	19.05	80	22.22	180
74	19.05	70	22.22	170
76	19.05	70	22.22	160
78	19.05	70	22.22	150
80	19.05	60	22.22	150
82	19.05	60	22.22	140
84	19.05	60	22.22	130
86	19.05	50	22.22	130
88	19.05	50	22.22	120
90	19.05	50	22.22	120
92	This capacity is not supported.			
94	This capacity is not supported.			
96	This capacity is not supported.			
98	This capacity is not supported.			

# 10. Installation

## Outdoor unit

H/R

Ex.) 135.2 kW

Capacity (kW)	No.	Pipe size (mm)	
		Liquid	Gas
33.6	(1)	Ø 12.70	Ø 28.58
73.6	(2)	Ø 19.05	Ø 34.92
135.2	(3)	Ø 19.05	Ø 41.28

**Size of the pipe connected to the outdoor unit (A)**

Select the size of the main pipe according to the below table.

Outdoor unit capacity (kW) (Cooling)	*Maximum pipe length within 90m			*Maximum pipe length over 90m		
	Liquid (mm)	Low pressure gas (mm)	High pressure gas (mm)	Liquid (mm)	Low pressure gas (mm)	High pressure gas (mm)
Capacity ≤ 25	Ø 9.52	Ø 19.05	Ø 15.88	Ø 12.70	Ø 22.22	Ø 15.88
25 < Capacity ≤ 32		Ø 22.22	Ø 19.05		Ø 25.40 <small>note1)</small>	Ø 19.05
32 < Capacity ≤ 39			Ø 12.70		Ø 28.58	
39 < Capacity ≤ 44				Ø 15.88	Ø 22.22	Ø 22.22
44 < Capacity ≤ 48					Ø 31.75 <small>note2)</small>	
48 < Capacity ≤ 55						Ø 19.05
55 < Capacity ≤ 66						Ø 28.58
66 < Capacity ≤ 72						Ø 38.10 <small>note3)</small>
72 < Capacity ≤ 100						
100 < Capacity ≤ 139						Ø 22.22
139 < Capacity ≤ 173						Ø 41.28
173 < Capacity ≤ 252	Ø 22.22	Ø 53.98	Ø 41.28	Ø 25.40 <small>note1)</small>	Ø 15.92	Ø 34.92
252 < Capacity	Ø 25.40		Ø 44.45	Ø 28.58		Ø 41.28

\*Maximum pipe length : The pipe length between an outdoor unit and the farthest indoor unit.  
 Note1) If Ø 25.40 pipe is not available on site, use Ø 28.58 pipe.  
 \* For HR model, only increase the size of the liquid pipe if pipe length exceeds 90m  
 \* For the case that the diameter of the default pipe of an outdoor unit does not match that of the pipe installed on the site, a socket is provided by default together with the outdoor unit.

**Size of the pipe between the branch joint and the indoor unit (F)**

Make a selection according to outdoor unit capacity.

Indoor unit capacity (kW)	Pipe size (O.D. mm)	
	Liquid	Gas
6.0 and below	Ø 6.35	Ø 12.70
6.1 ~ 16.0	Ø 9.52	Ø 15.88
16.1 ~ 23.0	Ø 9.52	Ø 19.05
Over 23.0	Ø 9.52	Ø 22.22

**Branch joint**

Branch joint between outdoor units (C)

Classification	Model name	Specification (kW)
Liquid/Low pressure Y-joint (C)	MXJ-TA3419M	135.2 and below
	MXJ-TA4122M	Over 135.2
High pressure Y-joint (C)	MXJ-TA3100M	135.2 and below
	MXJ-TA3800M	Over 135.2

First branch joint (D)

Make a selection according to outdoor unit capacity.

Classification	Model name of the branch joint	Outdoor unit capacity (kW)
Liquid/Low pressure Y-joint (D)	MXJ-YA1509M	15.0 and below
	MXJ-YA2512M	15.1 ~ 40.0
	MXJ-YA2812M	40.1 ~ 45.0
	MXJ-YA2815M	45.1 ~ 70.3
	MXJ-YA3419M	70.4 ~ 98.4
	MXJ-YA4119M	98.5 ~ 135.2
	MXJ-YA4422M	Over 135.2
	MXJ-YA1500M	22.4 and below
High pressure Y-joint (D)	MXJ-YA2500M	22.5 ~ 70.3
	MXJ-YA3100M	70.4 ~ 135.2
	MXJ-YA3800M	Over 135.2
	MXJ-YA4422M	Over 135.2

Branch joint (E)

Select a branch joint according to the sum of indoor unit capacity which will be connected after the branch.

\* However, if the size of the pipe between branch joints (E) is bigger than the size of the pipe connected to the outdoor unit (A), apply the pipe size (A).

• -joint

Y-joint (E)	Model name	Specification (kW)
	MXJ-YA1509M	15.0 and below
	MXJ-YA2512M	15.1 ~ 40.0
	MXJ-YA2812M	40.1 ~ 45.0
	MXJ-YA2815M	45.1 ~ 70.3
	MXJ-YA3419M	70.4 ~ 98.4
	MXJ-YA4119M	98.5 ~ 135.2
	MXJ-YA4422M	Over 135.2
	MXJ-YA1500M	22.4 and below
	MXJ-YA2500M	22.5 ~ 70.3
MXJ-YA3100M	70.4 ~ 135.2	
MXJ-YA3800M	Over 135.2	

Note1) If Ø 25.40 pipe is not available on site, use Ø 28.58 pipe.  
 Note2) If Ø 31.75 pipe is not available on site, use Ø 34.92 pipe.  
 Note3) If Ø 38.10 pipe is not available on site, use Ø 41.28 pipe.

000085

# 10. Installation

## Outdoor unit

### H/R

When all the following conditions are met, install the main liquid pipe that is one step smaller to reduce piping load and the amount of refrigerant.

Note that the refrigerant for the main liquid pipe must be added by the specified amount upon reduction.

Condition 1: In case the length for vertical piping is less than 40 m

Condition 2:  $\text{Max. length } A \geq \text{Max. piping length}/(1 - (\text{vertical piping length} * 0.015))$

× Max. piping length: Piping length between the outdoor unit and the farthest indoor unit (m)

- Length allowed to reduce the diameter of liquid pipe, A (equivalent length)
- When piping is installed with reduction of the diameter of liquid pipe, Please set option 'reduction of the diameter of liquid pipe'.

Capacity (HP)	Below 90 m		Over 90m	
	Pipe diameter	Max. length (m)	Pipe diameter	Max. length (m)
8	This capacity is not supported.			
10	This capacity is not supported.			
12	9.52	50	12.7	200
14	9.52	40	12.7	190
16	9.52	30	12.7	150
18	12.7	90	15.88	200
20	12.7	90	15.88	200
22	12.7	80	15.88	200
24	12.7	70	15.88	200
26	15.88	90	19.05	200
28	15.88	90	19.05	200
30	15.88	90	19.05	200
32	15.88	90	19.05	200
34	15.88	90	19.05	200
36	15.88	90	19.05	200
38	15.88	90	19.05	200
40	15.88	80	19.05	200
42	15.88	70	19.05	200
44	15.88	70	19.05	200
46	15.88	60	19.05	180
48	15.88	60	19.05	170
50	15.88	50	19.05	150
52	15.88	50	19.05	140

Capacity (HP)	Below 90 m		Over 90m	
	Pipe diameter	Max. length (m)	Pipe diameter	Max. length (m)
54	15.88	40	19.05	130
56	15.88	40	19.05	120
58	15.88	40	19.05	120
60	15.88	40	19.05	110
62	19.05	90	22.22	200
64	19.05	90	22.22	200
66	19.05	90	22.22	200
68	19.05	90	22.22	200
70	19.05	80	22.22	190
72	19.05	80	22.22	180
74	19.05	70	22.22	170
76	19.05	70	22.22	160
78	19.05	70	22.22	150
80	19.05	60	22.22	150
82	19.05	60	22.22	140
84	19.05	60	22.22	130
86	19.05	50	22.22	130
88	19.05	50	22.22	120
90	19.05	50	22.22	120
92	This capacity is not supported.			
94	This capacity is not supported.			
96	This capacity is not supported.			
98	This capacity is not supported.			

e.g. In case of the site for 20HP, Max. piping length of 140 m (Horizontal piping length of 120 m & Vertical piping length of 20 m):

Max. length  $A \geq \text{Max. piping length}/(1 - (\text{vertical piping length} * 0.015))$

$200 \text{ m} \geq 140 \text{ m}/(1 - (20 * 0.015)) = 140 \text{ m}/0.7 = 200 \text{ m}$


Thus, the Max. piping length of 140 m (Horizontal piping length of 120 m & Vertical piping length of 20 m) can be allowed.

Accordingly, horizontal piping of 120 m + vertical piping of 20 m (140 m in total) can be installed.

# 10. Installation

## Outdoor unit

### Additional refrigerant

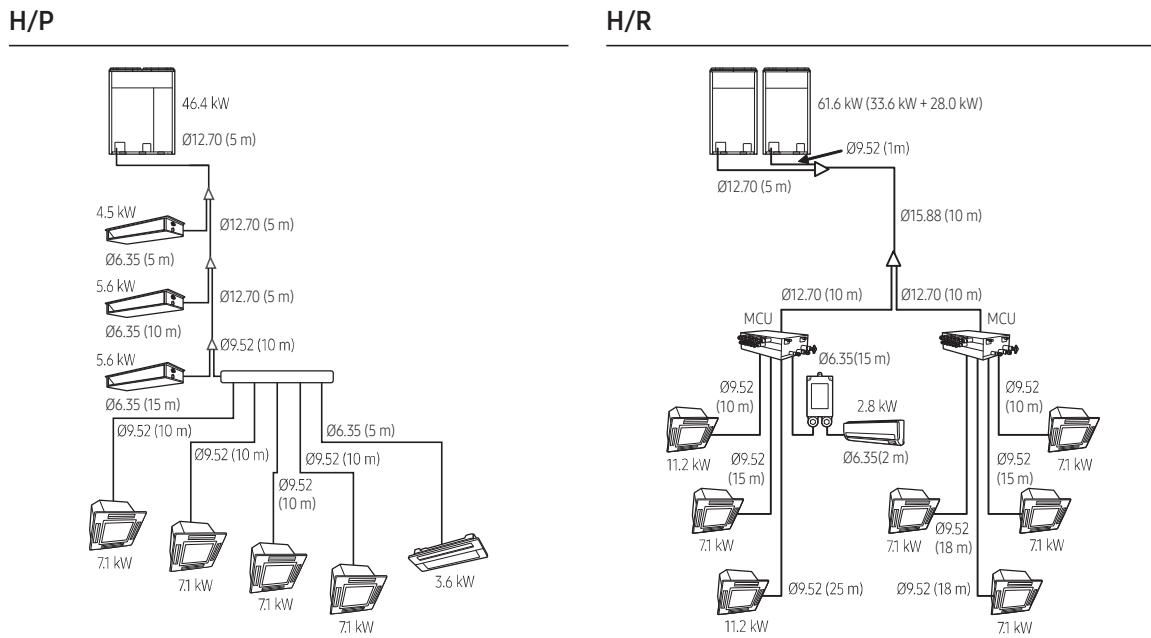

### Refrigerant pipe installation

- Basic amount of refrigerant within the outdoor unit (kg)
  - Amount of additional refrigerant has to be calculated based on the sum of all liquid pipe length.

Classification	AM080AXVGGR/EU	AM100AXVGGR/EU	AM120AXVGGR/EU	AM140AXVGGR/EU	AM160AXVGGR/EU	AM180AXVGGR/EU
Basic amount	7.0	7.0	7.0	8.0	10.5	10.5
Classification	AM200AXVGGR/EU	AM220AXVGGR/EU	AM240AXVGGR/EU	AM260AXVGGR/EU		
Basic amount	10.5	10.5	14.0	14.0		

- Amount of additional refrigerant depending on the pipe size (Ⓐ)
  - Amount of additional refrigerant has to be calculated based on the sum of all liquid pipe length.

Size of liquid pipe	Ø 6.35	Ø 9.52	Ø 12.70	Ø 15.88	Ø 19.05	Ø 22.22	Ø 25.40	Ø 28.58
Additional amount (kg/m)	0.02	0.06	0.125	0.18	0.27	0.35	0.53	0.65
Amount of refrigerant added when the diameter of liquid pipe is reduced (kg/m)	-	0.08	0.13	0.195	0.28	0.42	0.53	-

- For the indoor unit already connected to EEV kit, the additional refrigerant charging is 0.01kg per meter regardless of the pipe size.

# 10. Installation

## Outdoor unit

- Amount of additional refrigerant for each indoor unit (⑥)

(Unit: kg)

Model	Refrigerant Amount (kg /Unit)																															
	1.5	1.7	2.2	2.8	3.2	3.6	4.0	4.5	5.6	6.0	7.1	8.2	9.0	9.3	11.0	11.2	12.8	14.0	16.0	18.0	22.0	22.4	25.0	28.0	32.0	50.0	500CMH	1000CMH				
Interior1way cassette (JSF-0) (AM****HN1DEH/**) (AM****NN1PEH/**)	0.15	0.15																														
Slim 1way cassette (JSF-1/JSF-2) (AM****F(J/N)N1DEH/**)		0.25	0.25		0.25			0.32		0.32																						
2way cassette (AM****N2DEH/**)								0.31		0.47																						
4way cassette S(600x600) (AM****NNDEH/**)	0.29	0.29	0.29		0.29		0.37	0.37	0.37																							
4way cassette S (AM****F(N)N4DEH/**)							0.45	0.45		0.45		0.45				0.57	0.69	0.69														
4way cassette S (AM****N4FEH/**)			0.69		0.69		1.00	1.00	1.00	1.00		1.00			1.00																	
360 cassette (AM****KN4DEH/**)							0.45	0.45		0.45		0.45			0.69	0.69	0.69															
Duct S (AM****NMPKH/**)						0.22		0.22	0.22		0.22		0.31			0.38	0.38	0.38														
Duct S (AM****NMPKH9**)			0.31	0.31		0.38	0.38		0.38						0.38	0.38	0.38															
Duct S (AM****HNHPKH/**)															0.38	0.38	0.38															
Home Duct (AM****KNLDEH/**)	0.13	0.13	0.13		0.17																											
Home Duct (AM****MLNDEH/**)							0.24	0.24		0.31																						
Slim duct (AM****FNLDEH/**)	0.17	0.17	0.17		0.26		0.35	0.35		0.45		0.42			0.42	0.62	0.62															
Slim duct (with drain pump) (AM****KNLDEH/**)							0.35	0.35		0.45		0.42			0.42	0.62	0.62															
Slim duct (AM****FNLFEH/**)			0.62		0.45	0.45		0.62		0.62					0.62																	
Slim duct (AM****NNLFEH/**)					0.62	0.62																										
MSP duct (AM****NNMDEH***)	0.24	0.24		0.24		0.28	0.28		0.28		0.32			0.54	0.68	0.68	0.91															
HSP duct (AM****NHDEH/**)														0.68	0.68	0.68		1.18		1.18												
HSP duct (AM****NHF(P)EH/**)						1.18		1.18	1.18	1.18	1.18			1.18																		
Big duct (AM****JNH(P)PKH/**)																			1.15	1.15												
OAP duct (AM****NEPEH/**)														0.68			1.18		1.18		1.18											
Concealed Floor Standing (AM****NFDEH/**)					0.22		0.32		0.32																							
Floor Standing (AM****NPDKH/**)																0.69					1.85											
Ceiling (AM****NCDDEH/**) (AM****NCDKH/**)								0.39		0.39				0.56	0.95																	
Console (AM****NJDEH/**)	0.16	0.27		0.27		0.27	0.27																									
Wall mounted (Neo forte) (AM****F(H)NTDEH/**)	0.24	0.24	0.24		0.24			0.36		0.36																						
Wall mounted(Neo forte with EEV) (AM****F(H)NQDEH/**)	0.34	0.34	0.34		0.34		0.51	0.51		0.51																						
Wall mounted(AR5000) (AM****NADKH/**)	0.16	0.16	0.19		0.25		0.25	0.52		0.52	0.52																					
Wall mounted(AR5000 with EEV) (AM****NVDE(K)H/**)	0.22	0.22	0.25		0.34		0.34	0.71		0.71	0.71																					
Wall mounted(Boracay) (AM****KNTDEH/**)	0.24	0.24	0.32		0.32		0.49	0.49		0.49																						
Wall mounted(Boracay with EEV) (AM****KNQDEH/**)	0.24	0.24	0.32		0.32		0.49	0.49		0.49																						
Wall mounted(MAX4 with EEV) (AM****MNQDEH/**)														0.68																		
ERV plus (AM****NKDEH/**)																				0.11	0.36											
Hydro Unit HE (AM****NBDEH/**)															0.60						0.70	1.20										
Hydro Unit HT (AM****NBF*B**)																0.60 note <sup>1)</sup>																
MCU (MCU-S*NE**N)																	0.50															
4Way CST (AM****AN4PKH/**)			0.45		0.45		0.45		0.60		0.60		0.73			0.73	0.88	0.88														
LSP Duct (AM****ANLDKH/**)	0.13	0.13	0.13		0.17		0.24	0.24		0.31																						
MSP Duct (Duct S) (AM****ANMPKH/**)		0.45	0.45		0.45		0.45	0.45		0.45		0.80		0.80		0.84	0.84	0.84														
HSP Duct (Duct S) (AM****ANHPKH/**)								0.80		0.80		0.84			0.84	0.84	0.84															
A3050 (AM****JNADKH/**)	0.16	0.16	0.19		0.25		0.25	0.52		0.52	0.52																					
A3050 (with EEV) (AM****JNVDKH/**)	0.22	0.22	0.25		0.34		0.34	0.71		0.71	0.71																					
QMD RAC (AM****TNADKH/**) (AM****TNVDKH/**)	0.23	0.23	0.32		0.32		0.48	0.48		0.48	0.64																					

\* If there is no additional refrigerant value for the indoor unit in the above table, refer to the indoor unit installation manual.

# 10. Installation

## Outdoor unit

- If AHU kit is included among the indoor units, you must add 0.063kg of refrigerant for every 1kW of the AHU capacity increase.

Note1) In case the capacity conjunction of the Hydro Unit HT exceeds 50 % among the total indoor unit, please don't put the additional refrigerant.

- Method to calculate total amount of additional refrigerant
  - Amount of additional refrigerant depending on the pipe length (ⓐ)
  - Amount of additional refrigerant for each indoor unit (ⓑ) =  $\sum$ (Amount of additional refrigerant for each connected indoor unit) × Refer to the table
  - Total amount of additional refrigerant = ⓐ+ⓑ

※ Sum of total amount of additional refrigerant and the basic amount of refrigerant should not exceed 100kg. If the refrigerant exceeds 100kg, separate the module so that weight of the refrigerant doesn't exceed 100kg.  
Ex> If the outdoor unit's basic refrigerant amount is 10.5kg, the total amount of additional refrigerant(ⓐ+ⓑ) should not exceed 89.5kg.

- Example of refrigerant calculation for HP models

Classification	Size of liquid pipe	Length (m)	Unit amount of refrigerant (kg/m)	Amount of additional refrigerant (kg)	Total amount of additional refrigerant (kg)
		①	②	①×②	$\sum$ (①×②)
Liquid pipe (ⓐ)	Ø 6.35	35	0.02	0.7	ⓐ 5.575
	Ø 9.52	50	0.06	3.0	
	Ø 12.70	15	0.125	1.875	

Classification	Model name of indoor unit	Number of units	Unit amount of refrigerant (kg/EA)	Amount of additional refrigerant (kg)	Total amount of additional refrigerant (kg)
		①	②	①×②	$\sum$ (①×②)
Indoor unit (ⓑ)	4way cassette (AM071FN4DEH*)	4	0.45	1.80	ⓑ 3.10
	Slim duct (AM056FNLDDEH*)	2	0.35	0.70	
	Slim duct (AM045FNLDDEH*)	1	0.35	0.35	
	1way cassette (AM036FN1DEH*)	1	0.25	0.25	

- Total amount of refrigerant (ⓐ+ⓑ) = 5.575+3.10 = 8.675 (kg)
- Example of refrigerant calculation for HR models

Classification	Size of liquid pipe	Length (m)	Unit amount of refrigerant (kg/m)	Amount of additional refrigerant (kg)	Total amount of additional refrigerant (kg)
		①	②	①×②	$\sum$ (①×②)
Liquid pipe (ⓐ)	Ø 6.35	15	0.02	0.3	ⓐ 11.965
	Ø 9.52	112	0.06	6.72	
	Ø 12.70	25	0.125	3.125	
	Ø 15.88	10	0.18	1.8	
	Ø 6.35 (EEV Kit ~ indoor unit)	2	0.01	0.02	

Classification	Model name of indoor unit	Number of units	Unit amount of refrigerant (kg/EA)	Amount of additional refrigerant (kg)	Total amount of additional refrigerant (kg)
		①	②	①×②	$\sum$ (①×②)
Indoor unit (ⓑ)	4way cassette (AM071FN4DEH*)	5	0.45	2.25	ⓑ 4.66
	4way cassette (AM112FN4DEH*)	2	0.57	1.14	
	Neo forte (AM028FN1DEH*)	1	0.27	0.27	
	MCU	2	0.5	1	

- Total amount of refrigerant (ⓐ+ⓑ) = 11.965+4.66 = 16.625 (kg)


# 10. Installation

## Outdoor unit

### Pipe installation for an outdoor unit


#### 1 Direction of the pipe

Refrigerant pipe can be withdrawn from the front, left and right side. Take necessary method to install the pipes according to the condition of the installation site.

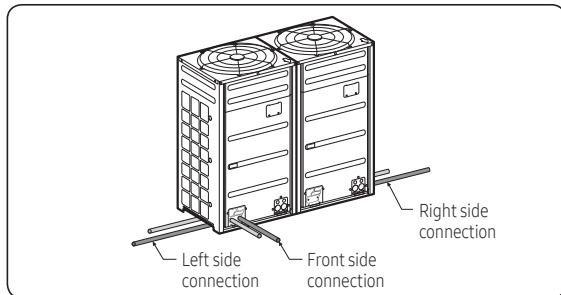





#### ⚠ CAUTION

##### • Caution for using knock-out hole

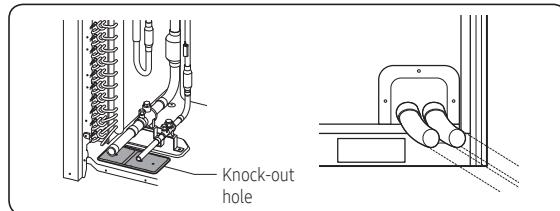

- Make sure to prevent any damages on the exterior of the outdoor unit.
- Remove all burrs around the knock-out hole and apply varnish on the cross section and edges of the knock-out hole to prevent rust.
- Use a cable protection tube and bushing to prevent a cable from being damaged when passing through a knock-out hole.

#### 1 Connecting refrigerant pipe for outdoor unit

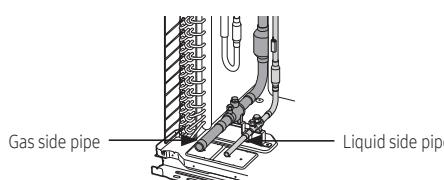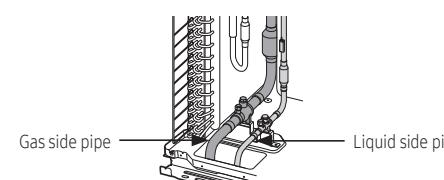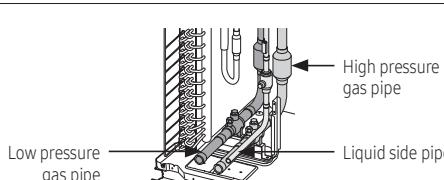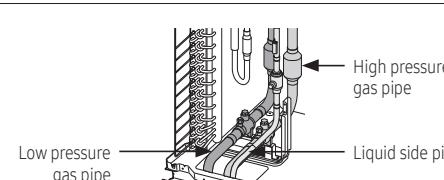
Classification	Front side connection	Right/left (and bottom) side connection
Working process	<ul style="list-style-type: none"><li>• First, remove the piping cover from the outdoor unit.</li><li>• Separate the knock-out hole that you are going to use. If you separate the knock-out hole that is going to be unused, small animals such as squirrels and rats may get into the unit through the hole.</li><li>• Fix the bottom side of the piping cover first and then fix the top part of it.</li></ul>	<ul style="list-style-type: none"><li>• Separate the knock-out hole at the bottom side of the unit and install the pipe.</li><li>• After installing and insulating the pipe, close up the remaining holes. If not, small animals such as rats and squirrels may get inside the unit.</li></ul>
H/P		
H/R		

#### ⚠ CAUTION

- Caution for welding the pipe to an outdoor unit
  - When welding the pipe, the unit may get damaged by the heat and flame from welding. Use a flame proofing cloth to protect the unit from a welding fire or flame. Sensor for detecting outside temperature is located on the left side of the welding part so be extra careful not to damage the sensor when welding.
  - The O-ring and Teflon packing inside service valve may get damaged by the heat from welding. Wrap the bottom side of the service valve with a wet cloth and weld it as shown in the illustration. Also, water dripping from the wet cloth may interrupt the welding. Make sure the water does not drip from the wet cloth.
  - Make sure that connected pipes does not interrupt each other or make contact with the product. (Vibration may cause damage to the pipes.)
  - When removing the sealed pipe on the bottom side of the service valve, cut it with a pipe cutter first and then start the welding. When the sealed pipe is welded without cutting, you may get injured by the refrigerant within the pipe.

# 10. Installation

## Outdoor unit

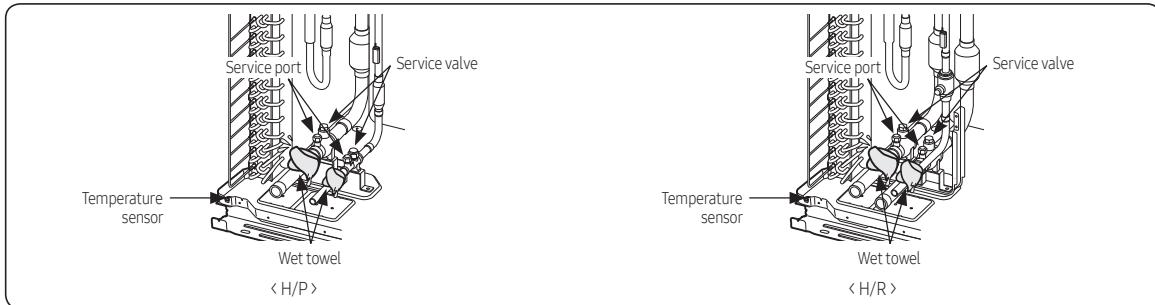

### 1 Pipe installation between the outdoor units

- You will need branch joints, which is an optional accessory, for connecting in between outdoor units in order to combine outdoor units in module.
- ※ For optimal distribution of the refrigerant, you must use Y-joint as branch joint for connecting outdoor units. (Do not use T-joint)
- When you install the outdoor units in module, there is no restriction of installation order among outdoor units.
- Height of the connection pipe should be same or lower than the ones connected to the outdoor units.
- Check the changes in comparison with the DVM II, III and IV.

Caution	Correct installation	Incorrect installation
Refrigerant pipes should be connected at the same or lower level than the ones connected to the outdoor unit.		
Refrigerant pipes must be connected by the side of the product.		
Branch joint between outdoor units must be installed horizontally.		
Install a vertical trap in following cases as shown in the figure : Case1. Pipe length between outdoor unit branches exceeds 2m. Case2. Pipe length between outdoor unit and its branch exceeds 2m.		


# 10. Installation

## Outdoor unit


### Examples of refrigerant pipe installation

#### H/P

##### 1 Using Y-joint

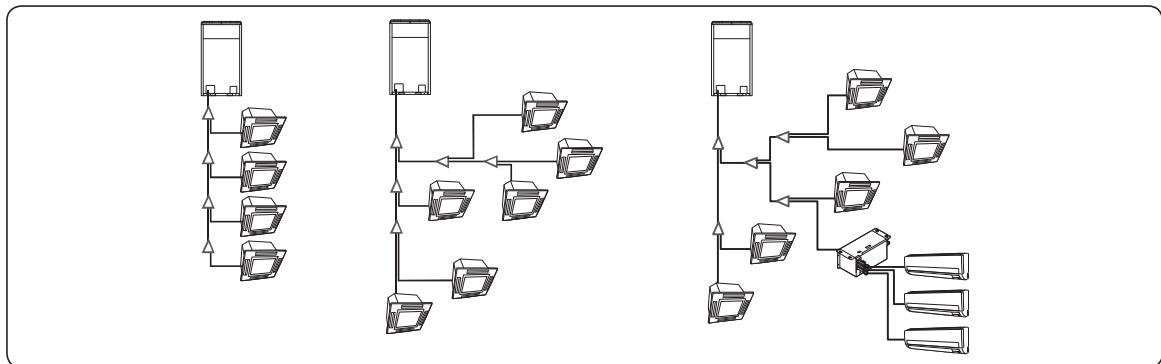


##### 2 Using distribution header

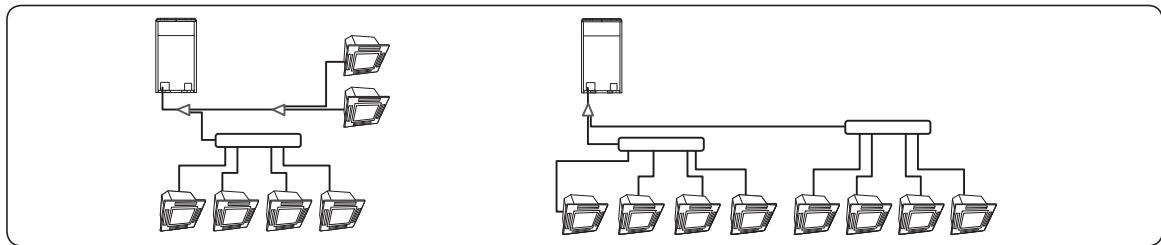

#### H/R

##### Using Y-joint

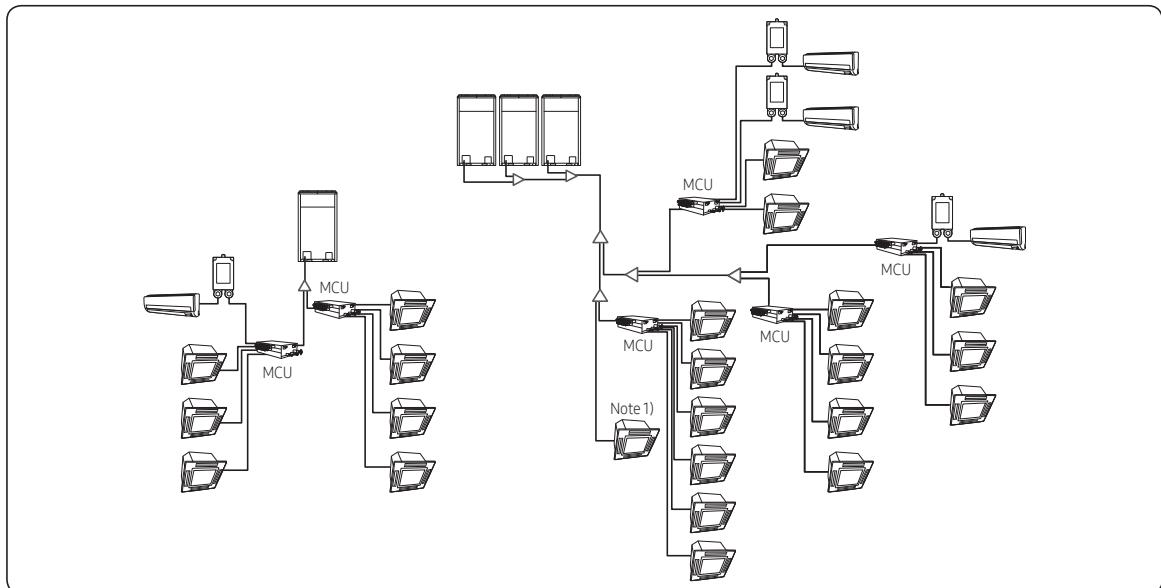

Note 1) Direct-connected indoor unit without MCU (for HR only)







- This indoor unit can only be used for cooling operation. (Heating operation is not possible.)
- Connect indoor unit to liquid and low pressure gas pipe.
- Change the installation option for direct-connected indoor unit without MCU. (refer to the indoor unit installation manual)


# 10. Installation

## Outdoor unit

### Allowable length of the refrigerant pipe and the installation examples

H/P

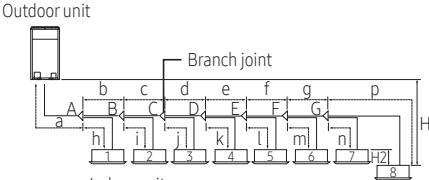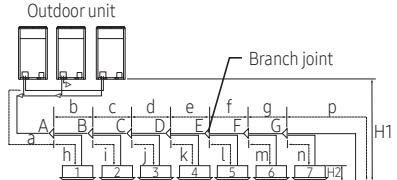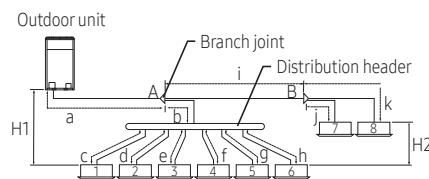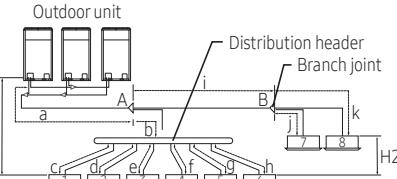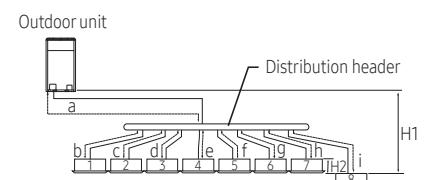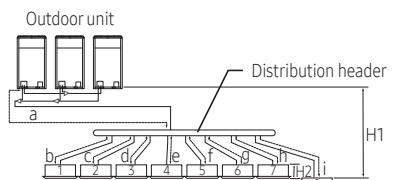Classification	Single Installation	Module installation
Installing only with Y-joint	<p>Outdoor unit</p>  <p>Indoor unit</p>	<p>Outdoor unit</p>  <p>Indoor unit</p>
Installing with Y-joint and distribution header	<p>Outdoor unit</p>  <p>Indoor unit</p>	<p>Outdoor unit</p>  <p>Indoor unit</p>
Installing only with distribution header	<p>Outdoor unit</p>  <p>Indoor unit</p>	<p>Outdoor unit</p>  <p>Indoor unit</p>

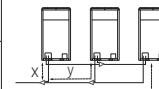Classification			Example		Remarks		
Maximum allowable length of pipe	Outdoor unit ~ Indoor unit	Actual length (Equivalent length)	200m and below (220m and below)	Installing only with Y-joint	$a+b+c+d+e+f+g+p \leq 200m (220m)$		
				Installing with Y-joint and distribution header	$a+b+h \leq 200m (220m)$ , $a+i+k \leq 200m (220m)$		
		Total length of pipe (m)	1,000 m or less	Installing only with distribution header	$a+i \leq 200m (220m)$		
	Outdoor unit ~ Outdoor unit (Module installation)			Installing only with Y-joint	$a+b+c+d+e+f+g+h+i+j+k+l+m+n+p \leq 1000m$		
				Installing with Y-joint and distribution header	$a+b+c+d+e+f+g+h+i+j+k \leq 1000m$		
				Installing only with distribution header	$a+b+c+d+e+f+g+h+i \leq 1000m$		
Maximum allowable height difference of pipe	Outdoor unit ~ Indoor unit	Pipe length	10 m or less	$x \leq 10m, y \leq 10m, z \leq 10m$			
	Indoor unit ~ Indoor unit	Equivalent length	13 m or less	$x \leq 13m, y \leq 13m, z \leq 13m$			
		But, when AM****NQDEH* / AM***JNV* is installed, H2 is 15 m or less.					

# 10. Installation

## Outdoor unit

Classification				Example		Remarks
Maximum allowable length after branch joint	First branch joint ~ Farthest Indoor unit	Pipe length	45 m or less	Installing only with Y-joint	$b+c+d+e+f+g+p \leq 45 \text{ m}$	-
				Installing with Y-joint and distribution header	$i+k \leq 45 \text{ m}$	
				Installing only with distribution header	$i \leq 45 \text{ m}$	
			45 m~90 m Note1)	Required conditions must be satisfied		

EEV kit			Model name		Remarks	
EEV kit ~ Indoor unit	Actual pipe length	2 m	MEV-E24SA	1 indoor	Apply to products without EEV (Wall mount & ceiling)	
			MEV-E32SA			
		20 m or less	MXD-E24K132A	2 indoor		
			MXD-E24K200A			
			MXD-E32K200A			
			MXD-E24K232A			
			MXD-E24K300A			
			MXD-E32K224A			
			MXD-E32K300A			

\* Please refer to the EEV Kit manual.

Note 1) Required condition

Classification	Condition	Example
First branch joint ~ Farthest Indoor unit	$45m \leq b+c+d+e+f+g+p \leq 90m$ : branch pipes (b, c, d, e, f, g) size must be increased by 1 grade	
Total length of extended pipe	If the size of pipe (main pipe), between the first branch joint and the outdoor unit, is not increased by 1 grade, $a+(b+c+d+e+f+g) \times 2 + h+i+j+k+l+m+n+p \leq 1000 \text{ m}$	
	If the size of pipe (main pipe), between the first branch joint and the outdoor unit, is increased by 1 grade, $(a+b+c+d+e+f+g) \times 2 + h+i+j+k+l+m+n+p \leq 1000 \text{ m}$	
Each Y-joint ~ Each indoor unit	$h, i, j, \dots p \leq 45 \text{ m}$	
Difference between the distance of the outdoor unit to the farthest indoor unit and nearest indoor unit $\leq 45\text{m}$ , $(a+b+c+d+e+f+g+p)-(a+h) \leq 45\text{m}$		

Note 2) When indoor unit is located at higher level than outdoor unit, allowable height difference is 110m, (If the height difference is over 40m, contact your local dealer for more information.)



but when the indoor unit is located at lower level than outdoor unit, allowable height difference is 110m (If the height difference is over 50m, need to decide whether to install PDM kit or not.)


Model name of the PDM kit : MXD-A38K2A, MXD-A12K2A, MXD-A58K2A

# 10. Installation

## Outdoor unit

H/R

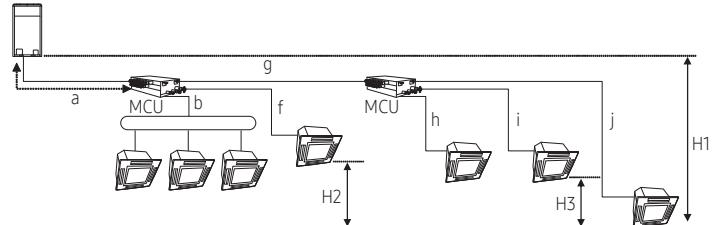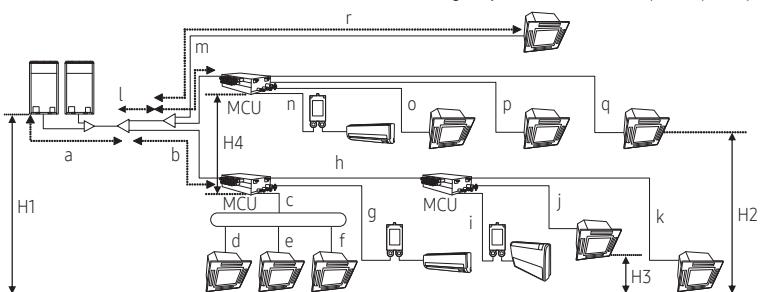Classification	Installation with Y-joint
Installing with MCU only	
Installing with MCU and Y-joint	

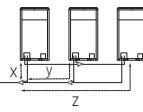Classification			Example		Remarks		
Maximum allowable pipe length	Outdoor unit ~ Indoor unit	Actual pipe length (Equivalent length)	200 m or less (220 m or less)	Installing only with MCU $a+g+j \leq 200 \text{ m (220 m)}$	Equivalent length Y-joint: 0.5 m Distribution header: 1 m MCU: 1 m		
		Total length of pipe	1000 m or less	Installing with MCU and Y-joint $a+b+h+k \leq 200 \text{ m (220 m)}$			
	Outdoor unit ~ Outdoor unit (Module installation)	Pipe length	10 m or less	Installing only with MCU $a \leq 10 \text{ m}, y \leq 10 \text{ m}, z \leq 10 \text{ m}$			
		Equivalent length	13 m or less	Installing with MCU and Y-joint $x \leq 13 \text{ m}, y \leq 13 \text{ m}, z \leq 13 \text{ m}$			
Maximum allowable height difference	MCU ~ Indoor unit	Pipe length	45 m or less	Installing only with MCU $b+c \leq 45 \text{ m}, b+d \leq 45 \text{ m}, b+e \leq 45 \text{ m}, f \leq 45 \text{ m}, g+h \leq 45 \text{ m}, g+i \leq 45 \text{ m}, g+j \leq 45 \text{ m}$			
				Installing with MCU and Y-joint $c+d, c+e, c+f, g, h+i, h+j, h+k, n, o, p, q, r \leq 45 \text{ m}$			
	Pipe length	110 m / 110 m Note 1)	110 m / 110 m Note 1)	$H1 \leq 110 \text{ m / 110 m}$			
			40 m or less	$H2 \leq 40 \text{ m}$			
			But, when AM****NQDEH* / AM***JNV* is installed, H2 is 15 m or less.				
	Indoor unit ~ Indoor unit (in one MCU)		15 m or less	$H3 \leq 15 \text{ m}$			
			30 m or less	$H4 \leq 30 \text{ m}$			
Maximum allowable length after branch joint	First branch joint ~ Farthest Indoor unit	Pipe length	45 m or less	Installing only with MCU $g+j \leq 45 \text{ m}$			
				Installing with MCU and Y-joint $b+h+k \leq 45 \text{ m}, l+m+q \leq 45 \text{ m}, l+r \leq 45 \text{ m}$			
			45 ~ 90 m Note 2)	Required conditions must be satisfied			

# 10. Installation

## Outdoor unit

EEV Kit		Model name		Remarks Apply to products without EEV (Wall mount & ceiling)
EEV kit ~ Indoor unit	Actual pipe length	2 m	MEV-E24SA	
			MEV-E32SA	
		20 m or less	MXD-E24K132A	
			MXD-E24K200A	
			MXD-E32K200A	
			MXD-E24K232A	
			MXD-E24K300A	
			MXD-E32K222A	
			MXD-E32K300A	

\* Please refer to the EEV Kit manual.

Note 1) When indoor unit is located at higher level than outdoor unit, allowable height difference is 110m, (If the height difference is over 40m, contact your local dealer for more information.) but when the indoor unit is located at lower level than outdoor unit, allowable height difference is 110m (If the height difference is over 50m, need to decide whether to install PDM kit or not.)

Model name of the PDM kit : MXD-A38K2A, MXD-A12K2A, MXD-A58K2A

Note 2) Required condition

Classification	Condition	Example
First branch joint ~ Farthest Indoor unit	$45 \leq b+h+k, l+m+q, l+r \leq 90$ m : Size of the branch liquid and low pressure gas pipes (b, l, m) must be increased by 1 grade.	
Total length of extended pipe	If the size of pipe (main pipe), between the first branch joint and the outdoor unit, is not increased by 1 grade, $a+(b+l+m) \times 2 + c + d + e + f + g + h + i + j + k + n + o + p + q + r \leq 1000$ m	
	If the size of pipe (main pipe), between the first branch joint and the outdoor unit, is increased by 1 grade, $(a+b+l+m) \times 2 + c + d + e + f + g + h + i + j + k + n + o + p + q + r \leq 1000$ m	
MCU ~ Each indoor unit	$c+d, c+e, c+f, g, h+i, h+j, h+k, n, o, p, q, r \leq 45$ m	
Difference between the distance of the outdoor unit to the farthest indoor unit and nearest indoor unit $\leq 45 (a+b+h+k) - (a+b+c+d) \leq 45$		

Note 3) For indoor units to which no MCU is connected, be sure to set their options to "Cooling only indoor unit," and then connect them to a low pressure gas pipe and a liquid pipe. Be sure to combine the cooling only indoor units so that their total capacity becomes 50% or less of the total capacity of all indoor units.

Note 4) In case of connecting more than one indoor unit in one MCU Port, the below indoor units cannot be combined. ERV plus (AM\*\*\*FNKDE\*\*), OAP duct(AM\*\*\*JNEPE\*\*), Hydro Unit HE(AM\*\*\*FNBD\*\*), Hydro Unit HT(AM\*\*\*FNBF\*\*), AHU kit (MXD-K\*\*\*AN, MCM-D\*\*\*N)




Note 5) In case of connecting two MCU ports with Y-joint, the indoor units cannot be combined to more than one.

# 10. Installation

## Outdoor unit

### Installing the MCU

















#### MCU specification

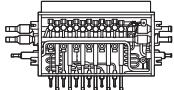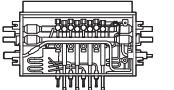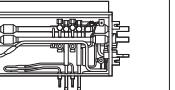Model	MCU-S6NEK2N	MCU-S4NEK3N	MCU-S2NEK2N	MCU-S1NEK1N
Exterior of MCU				
Number of connectable indoor units at one port	Up to 8 units	Up to 8 units	Up to 8 units	Up to 8 units
The maximum capacity of the connectable indoor units at one port	16 kW	16 kW	16 kW	16 kW
The maximum capacity of the connectable indoor units	61.6 kW	61.6 kW	32.0 kW	16 kW
Internal EEV	Not included			

#### ⚠ CAUTION

- Indoor units without internal EEV(AM\*\*\*\*NTDE\*, AM\*\*\*\*NADE\*) can not be connected directly to the MCU.
- Please connect these indoor units using EEV kit(MEV-E\*\*SA, MXD-E\*\*K\*\*\*A).


### Installing the indoor units

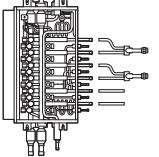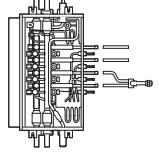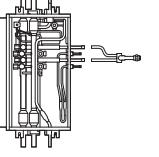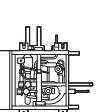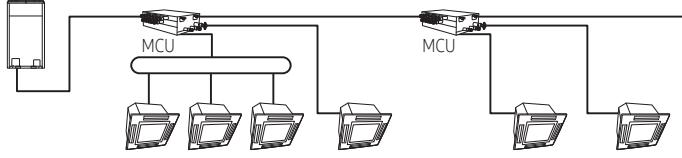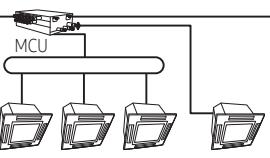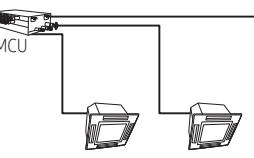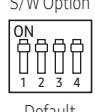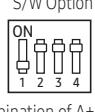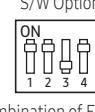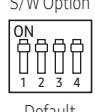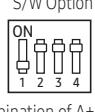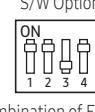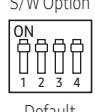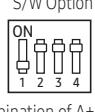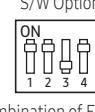Model	MCU-S6NEK2N	MCU-S4NEK3N	MCU-S2NEK2N	MCU-S1NEK1N		
Example installing (Each port connection)						
Example installing (MCU series connection)						
Installing indoor units	Under 16.0 kW indoor unit : Don't use Y-connector 16.0 kW ~ 28.0 kW indoor unit : Use Y-connector at the Gas & Liquid line If you want to continuous cooling operation under -5 °C, set outdoor 'Expand operational temperature range for cooling operation (HR only)', and use Y-connector on 5.0 ~ 16 kW indoor unit In case of using Y-connector, it is only connectable for port combination at below Connectable port combination for Y-connector : A + B port, C + D port, E + F port Non-connectable port combination for Y-connector : B + C port, D + E port, non-continuous port Set Dip Switch option for using Y-connector <table border="1"><tr><td>S/W Option  Default</td><td>S/W Option  Combination of A+B port</td><td>S/W Option  Combination of C+D port</td><td>S/W Option  Combination of E+F port</td></tr></table>	S/W Option  Default	S/W Option  Combination of A+B port	S/W Option  Combination of C+D port	S/W Option  Combination of E+F port	This unit is only connectable for one port under 16 Kw  This unit is impossible to connect MCU to MCU in series.
S/W Option  Default	S/W Option  Combination of A+B port	S/W Option  Combination of C+D port	S/W Option  Combination of E+F port			

# 10. Installation

## Outdoor unit

### How to connect the pipes

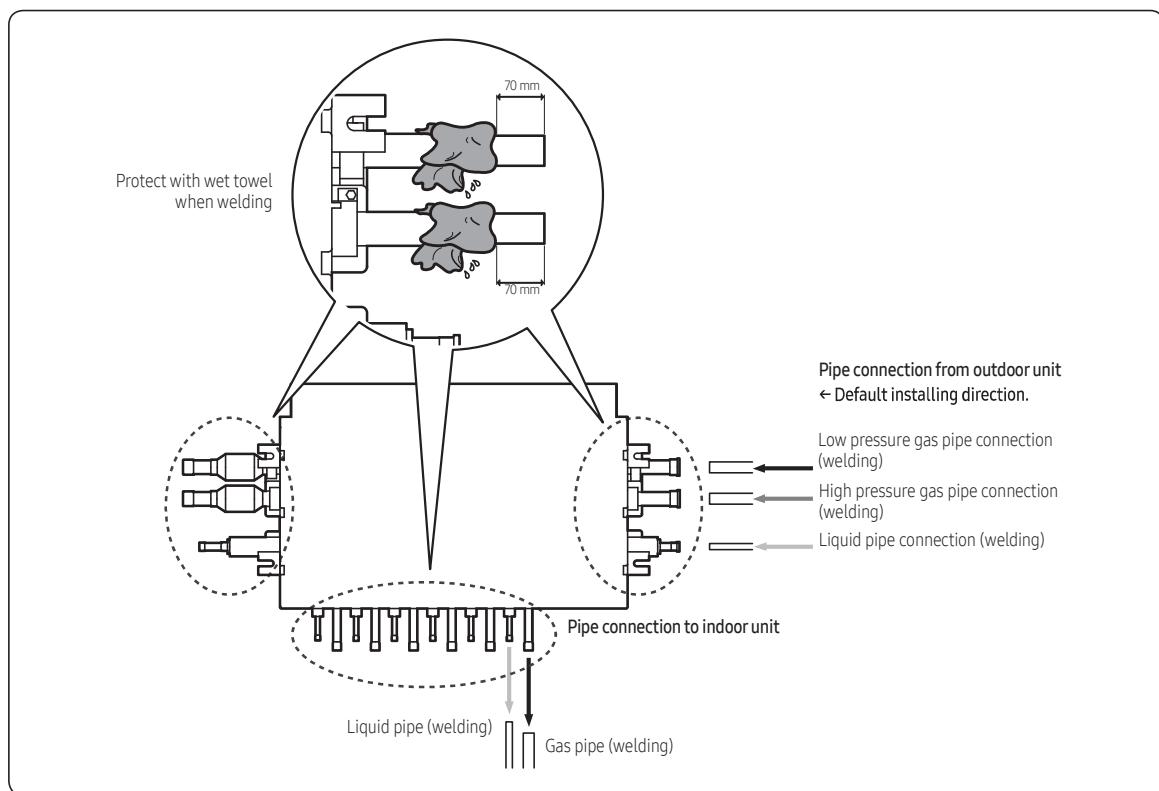


- ※ When installing MCU, use the pattern sheet for installation that is provided with the product.
- ※ When welding the gas pipes, protect the product with the flame-proof sheet.
- ※ When connecting the MCU with outdoor units, default direction is set in the MCU.  
If installing opposite direction, weld the enclosed copper cap in each high pressure, low pressure and liquid pipes.

# 10. Installation


## Outdoor unit

- When installing outdoor units in module, select the power supply cable according to the sum of outdoor unit capacity. (Refer to the table for each model)
- Power Supply cords of parts of appliances for outdoor use shall not be lighter than polychloroprene sheathed flexible cord. (Code designation IEC:60245 IEC 66 / CENELEC: H07RN-F)  
Ex.) AM500\*XV\*\*\*

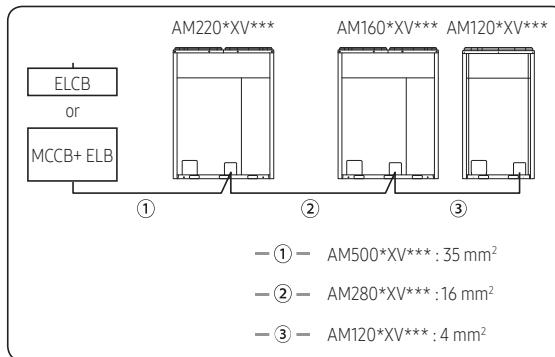

### ⚠ CAUTION

- Caution for electrical work
  - You must install ELCB or MCCB + ELB
    - ELCB: Earth leakage breaker
    - MCCB: Molded case circuit breaker
    - ELB: Earth leakage breaker
  - Do not operate the outdoor unit before completing the refrigerant pipe work.
  - Do not disconnect or change the cable inside the product. It may cause damage to the product.
  - Specification of the power cable is selected based on following installation condition; culvert installation/ ambient temperature 30 °C/ single multi conductor cables. If the condition is different from the ones stated, please consult an electrical installation expert and re-select the power cable.
    - If the length of power cable exceed 50m, re-select the power cable considering the voltage drop.
  - Use a power cable made out of incombustible material for the insulator (inner cover) and the sheath (outer cover).
  - Do not use the power cable with the core wire exposed due to insulator damage occurred during removal of the sheath. When the core wire is exposed, it may cause fire.

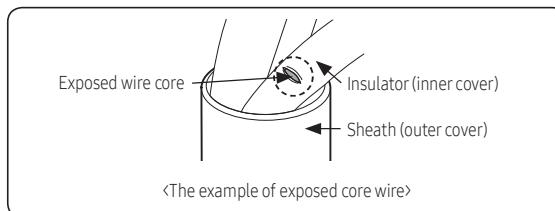

### NOTE

- This device is intended for the connection to a power supply system with a maximum permissible system impedance shown in the table (on the left page) at the interface point (power service box) of the user's supply.
- The user must ensure that this device is connected only to a power supply system which fulfills the requirement above. If necessary, the user can ask the public power supply company for the system impedance at the interface point.
- This equipment complies with IEC 61000-3-12 provided that the short-circuit power  $S_{sc}$  is greater than or equal to  $S_{sc}^{(*)2}$  at the interface point between the user's supply and the public system. It is the responsibility of the installer or user of the equipment to ensure, by consultation with the distribution network operator if necessary, that the equipment is connected only to a supply with a short-circuit power  $S_{sc}$  greater than or equal to  $S_{sc}^{(*)2}$ .  
[ $S_{sc}^{(*)2}$ ]


Model	$S_{sc}$ (MVA)
AM080AXVGGR/EU	3.0
AM100AXVGGR/EU	3.4
AM120AXVGGR/EU	4.0
AM140AXVGGR/EU	4.4
AM160AXVGGR/EU	5.2
AM180AXVGGR/EU	6.4
AM200AXVGGR/EU	7.0
AM220AXVGGR/EU	7.4
AM240AXVGGR/EU	9.3
AM260AXVGGR/EU	10.2

## Power and communication cable configuration


- Main power and the ground cable must be withdrawn through the knock-out hole on the bottom-right or right side of the cabinet.
- Withdraw the communication cable from the designated knock-out hole on the bottom-right side of the front part.
- Install the power and communication cable using separate cable protection tube.
- Fix a protection tube to the knock-out hole on the outdoor unit by using a CD connector or bushing. Make sure to use insulating bushing.

# 10. Installation

## Outdoor unit

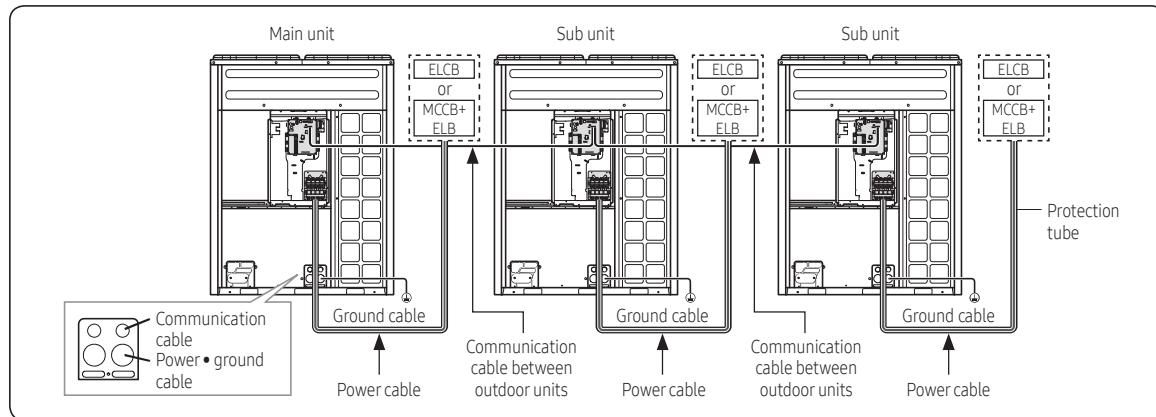

<When the module combination is in the tables of "Outdoor unit combination">

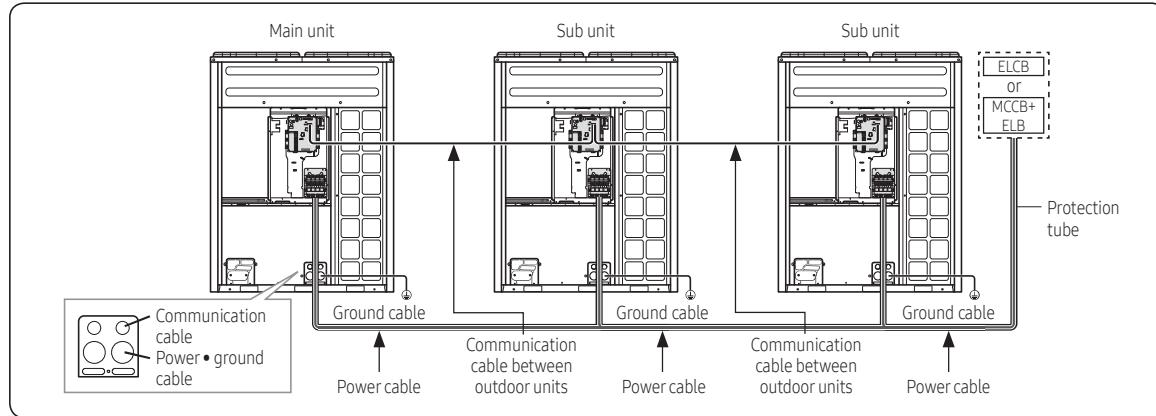


\* Power Supply cords of parts of appliances for outdoor use shall not be lighter than polychloroprene sheathed flexible cord. (Code designation IEC:60245 IEC 66 / CENELEC: H07RN-F)

### Specification of the protection tube

Name	Temper grade	Applicable conditions
Flexible PVC conduit	PVC	When the protection tube is installed indoor and not exposed to outside, because it is embedded in concrete structure
Class 1 flexible conduit	Galvanized steel sheet	When the protection tube is installed indoor but exposed to outside so there are risk of damage to the protection tube
Class 1 PVC coated flexible conduit	Galvanized steel sheet and Soft PVC compound	When the protection tube is installed outdoor and exposed to outside so there are risk of damage to the protection tube and extra waterproof is needed

- After perforating the knock-out hole, apply rust resisting paint around the hole.
- When you need to pass the cables through the knock-out hole, remove burrs on the hole and protection the cable with a protection tape or bushing etc.
- Caution for installing communication cable
- When you connect the cable, it may sag and pressed by other parts. Therefore cables should be fixed to a clamp highlighted with a box on the illustration.

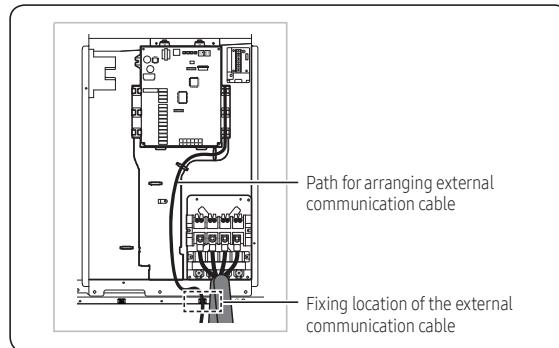

### ! CAUTION

- Caution for perforating the knock-out hole
- Perforate a knock-out hole by punching it with a hammer.


# 10. Installation

## Outdoor unit


### Powerwiring diagram

#### Supplying 3 phase 4 wires (380-415 V~)

<When the module combination is in the tables of "Outdoor unit combination">

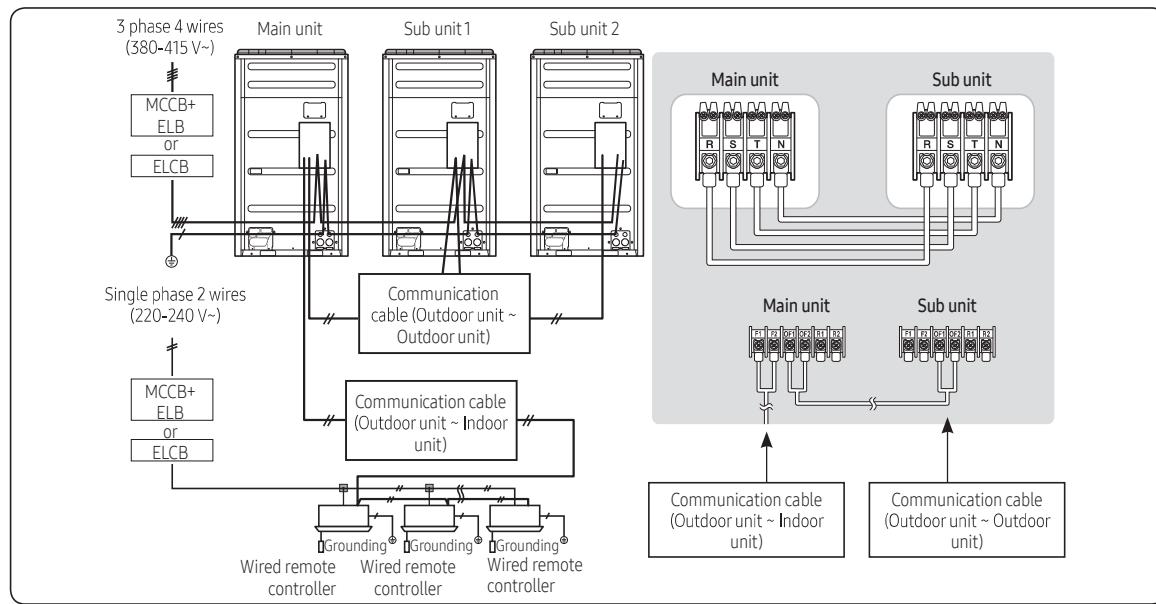

<When the module combination is not in the tables of "Outdoor unit combination">

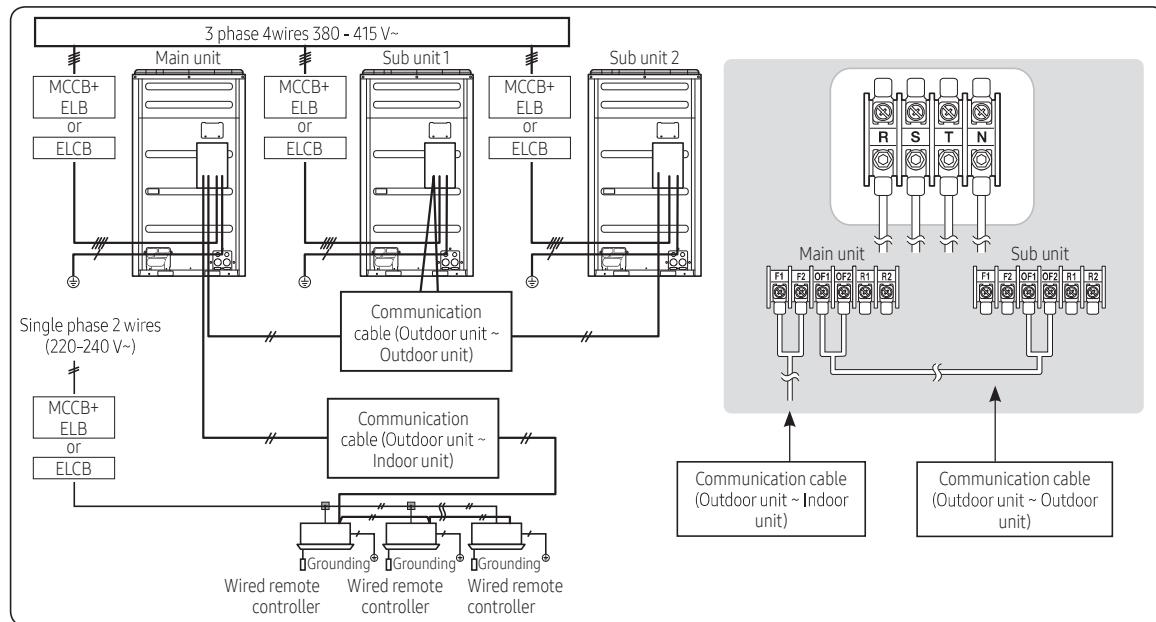

- Connect a power cable of the outdoor unit after checking that R-S-T-N (3 phase 4 wire) is properly connected. (If the 380-415 V power is supplied to the N phase, PCB and other electrical part will be damaged.)
- Communication cable between indoor and outdoor units and communication cable between outdoor units has no polarity.
- Arrange the cables with a cable tie.


※ ELCB and ELB must be installed since there is risk of electric shock or fire when they are not installed.

# 10. Installation

## Outdoor unit

### Selecting solderless ring terminal

- Select a solderless ring terminal for a power cable according to the nominal dimensions for cable.
- Apply insulation coating to the connection part of the solderless ring terminal and the power cable.

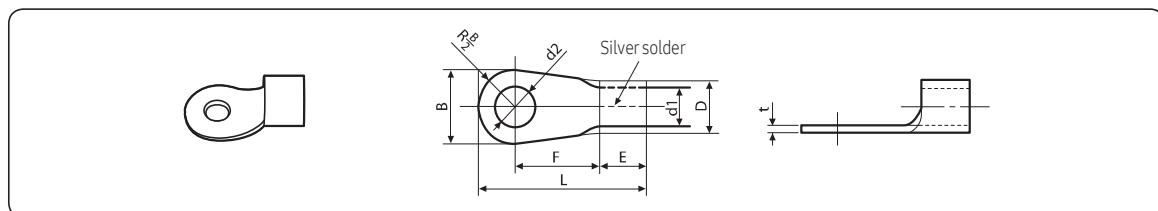


Nominal dimensions for cable (mm <sup>2</sup> )		4/6		10	16	25		35		50	70
Nominal dimensions for screw (mm)		4	8	8	8	8	8	8	8	8	8
B	Standard dimension (mm)	9.5	15	15	16	12	16.5	16	22	22	24
	Allowance (mm)	±0.2		±0.2	±0.2	±0.3		±0.3		±0.3	±0.4
D	Standard dimension (mm)	5.6		7.1	9	11.5		13.3		13.5	17.5
	Allowance (mm)	+0.3	+0.3	+0.3	+0.3	+0.5	+0.5	+0.5	+0.5	+0.5	+0.5
d1	Standard dimension (mm)	3.4		4.5	5.8	7.7		9.4		11.4	13.3
	Allowance (mm)	±0.2		±0.2	±0.2	±0.2		±0.2		±0.3	±0.4
E	Min. (mm)	6		7.9	9.5	11		12.5		17.5	18.5
F	Min. (mm)	5	9	9	13	15	13	13	13	14	20
L	Max. (mm)	20	28.5	30	33	34		38	43	50	51
d2	Standard dimension (mm)	4.3	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4
	Allowance (mm)	+0.2 0	+0.4 0								
t	Min. (mm)	0.9		1.15	1.45	1.7		1.8		1.8	2.0

### Connecting the power terminal

- Connect the cables to the terminal board with solderless ring terminals.
- Properly connect the cables by using certified and rated cables and make sure to fix them properly so that external force is not applied to the terminal.
- Use a driver and wrench that can apply the rated torque when tightening the screws on the terminal board.
- Tighten the terminal screws by complying rated torque value. If the terminal is loose, fire can occur due to arc heat generation and if the terminal is too tight, terminal board could get damaged.


#### 1 Front connection

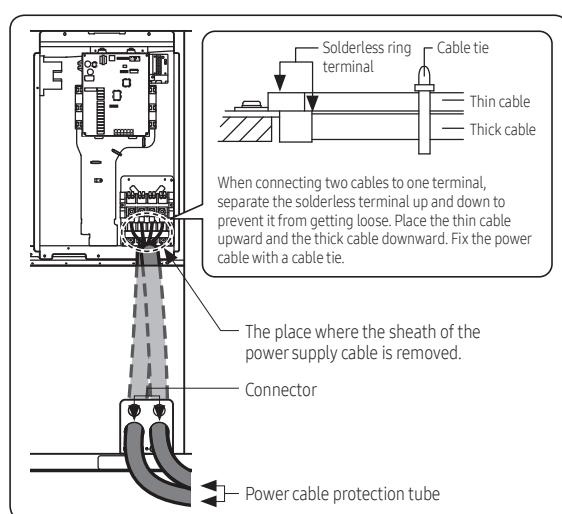

# 10. Installation

## Outdoor unit

### 1 Closing the cover

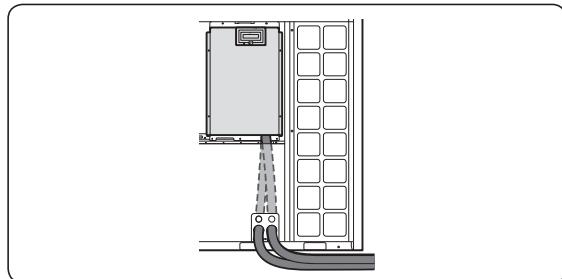


Screw	Tightening torque for terminal (N·m)	
M4	1.2~1.8	Single phase (220-240 V) power cable
M8	5.5~7.3	3 phase (380-415 V) power cable

### ⚠ CAUTION

- When removing the outer sheath of the power supply cable, be careful not to scratch the inner sheath of the cable.
- Make sure that more than 20mm of the outer sheath of the indoor unit power and communication cable are inside the electrical component box.
- Install the communication cable separately from power cable and other communication cables.
- There is a risk of electric shock when power is applied. Close the cover of the control box before proceeding to work.
- To inspect the compressor or PBA, first make sure to turn off the system. Electricity may flow even in a compressor that has not been used recently. Exercise caution to protect yourself from an electric shock.

### Fixing the power cable

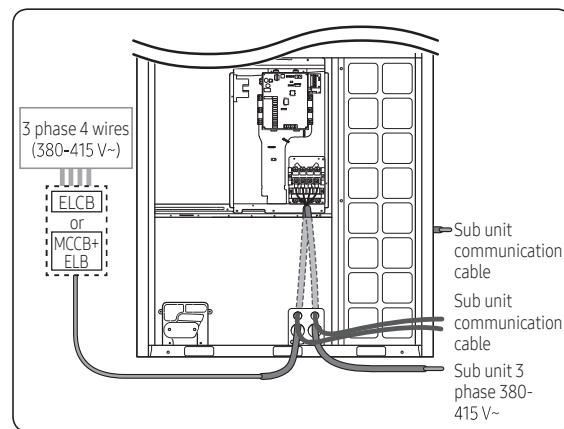

### ⚠ CAUTION


- Do not let the power cable come into contact with the pipes inside the outdoor unit. If the power supply cable touches the pipes, the vibration of the compressor is transferred to the pipes and can damage the power supply cables or pipes, creating the danger of fire or explosion.
- Make sure that the place where the sheath of power supply cable is removed is inside the power supply box. If it is impossible, you should connect the protection tube for power cable to the power supply box.
- After arranging the power cable into the power supply box, tighten the cover.

# 10. Installation

## Outdoor unit


### Connect the ring terminal of 3 phase cable

- 1 Cut the power cable to an appropriate length and connect it with the solderless terminal.
- 2 After connecting the power cable to the terminal as seen in the illustration, fix it with cable tie.
- 3 Fix the housing, which has an insulator, to the terminal board.

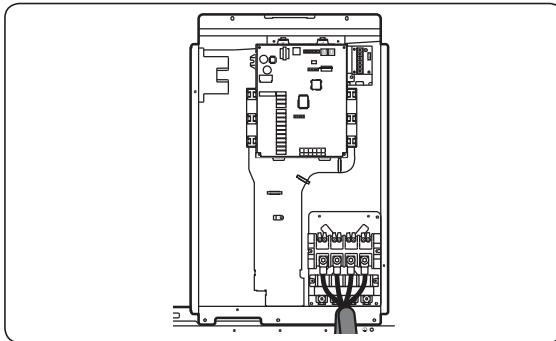


### Fixing the ground cable

- Connect the ground cable to the grounding hole inside the power supply box.

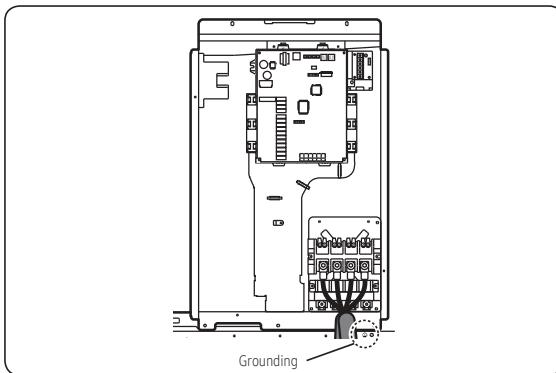


### Withdrawing the power cable

- Withdrawing from the front side
  - Connect the power cable protection tube into the power supply box as shown picture.
  - Be sure that the power supply cable is not damaged by burr on the knock-out hole.

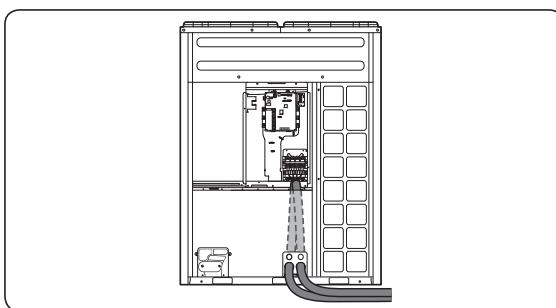


### Installing the Solution device

- When the number of indoor units installed with the outdoor unit is 16 or less

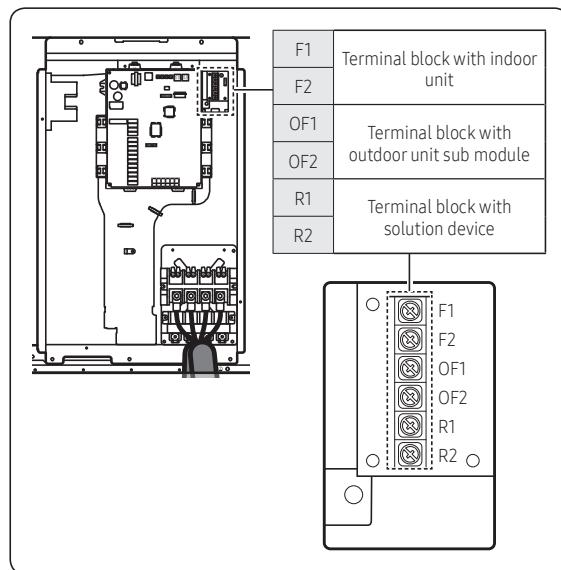

### Where to install the interface module

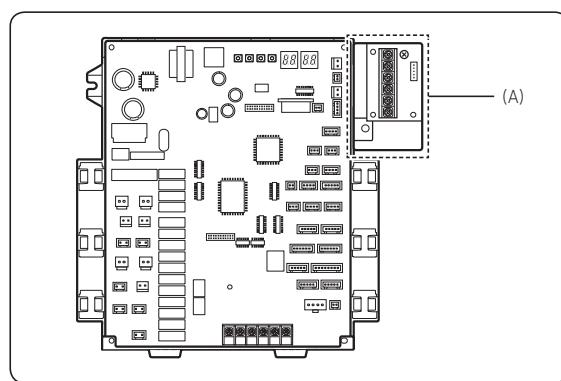


- Install the interface module in location (A), considering the installation conditions.
  - For details on how to install, refer to the interface module installation manual.

# 10. Installation

## Outdoor unit

### Connecting the MCU (MCU-S6NEK2N, MCU-S4NEK3N, MCU-S2NEK2N, MCU-S1NEK1N)

#### Example

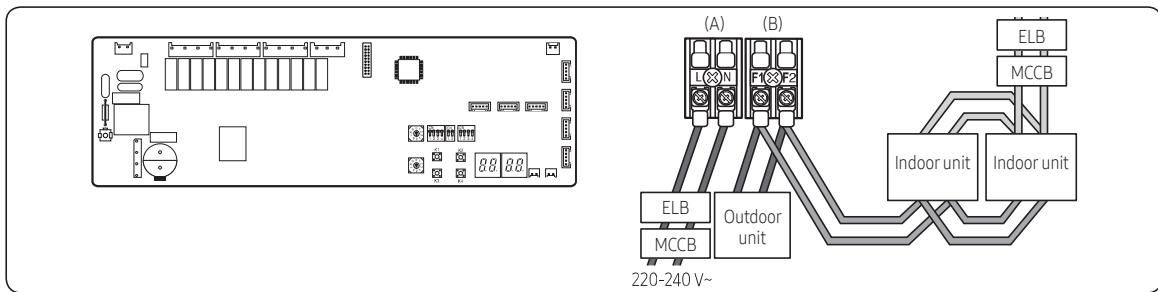

- (A) Power must be supplied to the MCU separately from the outdoor unit.
- (B) Connect the communication cable of the outdoor unit (F1, F2) to the communication cable of the MCU (F1, F2)

2022.03  
Ver.3.1

Samsung Electronics Co., LTD.

Head Office (Suwon Korea) 129, Samsung-Ro, Yeongtong-Gu, Suwon City, Gyeonggi-Do, Korea 16677  
Website : [www.samsung.com](http://www.samsung.com), <http://btsp.samsungsbn.com> Email : [airconditioner@samsung.com](mailto:airconditioner@samsung.com)  
Images and data in this book may subject to change without prior notice.